


hw+

Air circuit breakers

HW1

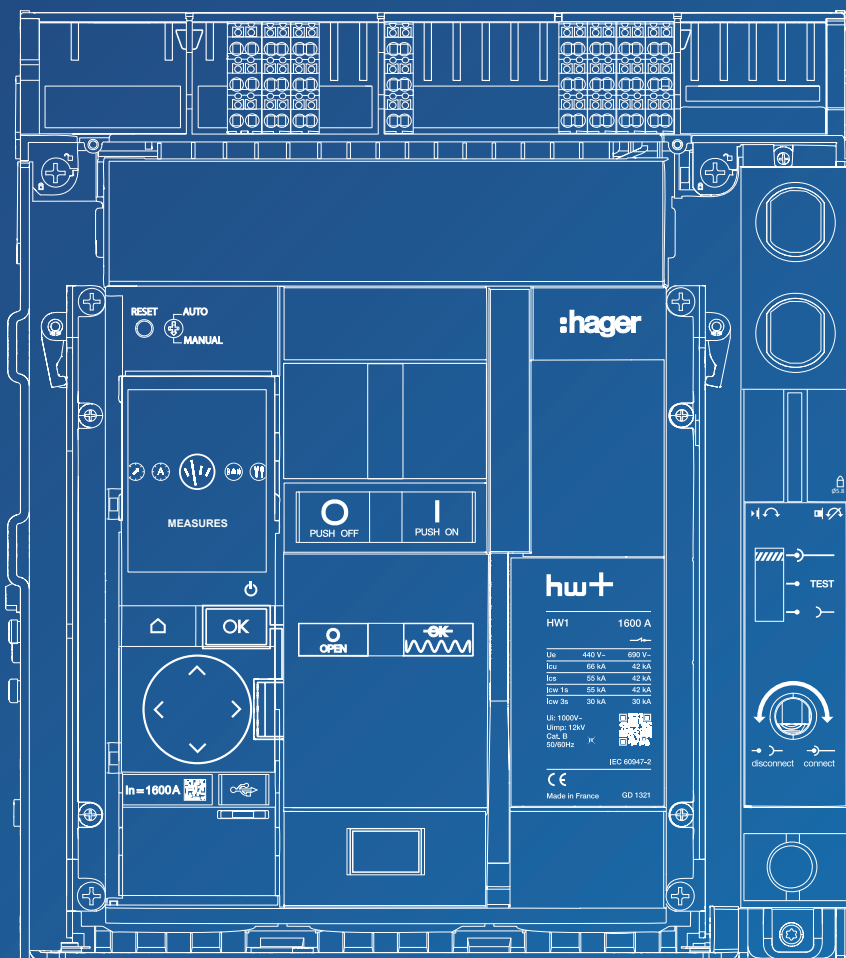

Contents	Page
01 About this guide	4
1.1 Safety instructions	4
1.2 Using this guide	6
02 Fixed circuit breakers	7
2.1 Description	7
2.2 Description of the accessories	8
2.3 Description of the terminal blocks	9
2.4 Electrical diagram	12
03 Withdrawable circuit breakers	16
3.1 Description of the circuit breaker	16
3.2 Description of the circuit breaker accessories	17
3.3 Description of the chassis and its accessories	18
3.4 Description of the chassis terminal blocks	19
3.5 Electrical diagram	22
04 Description of the electronic trip units	26
05 Circuit breaker usage conditions	27
06 Circuit breaker operation	28
6.1 Description	28
6.2 Closing and opening the circuit breaker	32
07 Positions of the drawout circuit breaker in the chassis	33
08 Positions of the drawout circuit breaker in the chassis	34
8.1 Changing from connected position to test position	34
8.2 Changing from test position to disconnected position	37
8.3 Changing from disconnected position to test position	39
8.4 Changing from test position to connected position	41
09 Extracting the withdrawable circuit breaker	43
10 Inserting the withdrawable circuit breaker	45
11 Storage	47
12 Identification of the circuit breakers	49
13 Unboxing	53
13.1 Removing the packaging	53
13.2 Fixed circuit breaker	54
13.3 Drawout circuit breaker	55
14 Handling the circuit breakers	57
14.1 Handling fixed circuit breakers	57
14.2 Handling drawout circuit breakers	59

	Page
15 Fastening dimensions	61
15.1 Circuit breaker dimensions	61
15.2 Circuit breaker connections	67
15.3 DF door frame cut-out	86
15.4 Cut-out of the HTD210H panel display	90
16 Safety clearances to respect	91
17 Installation	92
17.1 Prerequisites	92
17.2 Installing fixed circuit breakers	93
17.3 Installing drawout circuit breakers	97
17.4 Connecting the connecting bars	99
17.5 Cable connections	100
17.6 Installation of protection accessories	101
17.7 Connecting the accessories and auxiliaries	103
17.8 Connection of the OAC output contacts	104
17.9 Connecting the inputs	107
17.10 Connecting the ZSI input and output contacts	108
17.11 Installation of control accessories	110
17.12 Installation of signalling accessories	111
17.13 Installation of neutral protection accessories	114
17.14 Installation of communication and display accessories	115
18 Protection settings	118
19 Commissioning the circuit breaker	119
20 Locking the circuit breaker	120
20.1 Locking of the insulating safety shutters	120
20.2 WIP Wrong insertion preventer for drawout circuit breaker	121
20.3 Mechanical interlock	122

Warnings and instructions

This documentation contains safety advice which must be respected for your own safety and to prevent property damage.

Safety advice relating to your own safety is identified by a safety warning symbol in the documentation. Safety advice relating to damage to property is identified by "ATTENTION". The safety warning symbols and the wording below are classified according to the risk level.



DANGER indicates an imminent dangerous situation which, if not avoided, will result in death or serious injuries.



WARNING indicates a potentially dangerous situation which, if not avoided, may result in serious injuries or even death.



CAUTION indicates a potentially dangerous situation which, if not avoided, may result in minor or moderate injuries.

ATTENTION

ATTENTION indicates a warning message relating to equipment damage.
ATTENTION also indicates important instructions for use and particularly relevant information regarding the product, which must be respected to ensure effective and safe use.

Qualified personnel

The product or the system described in this documentation must be installed, operated and maintained by qualified personnel only. Hager Electro accepts no responsibility regarding the consequences of this equipment being used by unqualified personnel.

Qualified personnel are those people who have the necessary skills and knowledge for building, operating and installing electrical equipment, and who have received training enabling them to identify and avoid the risks incurred.

Appropriate use of Hager products

Hager products are designed to be used only for the applications described in the catalogues and in the technical documentation relating to them. If products and components from other manufacturers are used, they must be recommended or approved by Hager.

Appropriate use of Hager products during transport, storage, installation, assembly, commissioning, operation and maintenance is required to guarantee problem-free operation in complete safety.

The permissible ambient conditions must be respected. The information contained in the technical documentation must be respected.

Publication liability

The contents of this documentation have been reviewed in order to ensure that the information is correct at the time of publication.

Hager cannot, however, guarantee the accuracy of all the information contained in this documentation. Hager assumes no responsibility for printing errors and any damage they may cause.

Hager reserves the right to make the necessary corrections and modifications to subsequent versions.

Purpose of the document.

This manual is designed to provide users, electrical installers, panel builders and maintenance personnel with the technical information necessary for the installation and commissioning of HW1 circuit breakers with electronic trip units.

Field of application

This document is applicable to HW1 circuit breakers in the hw+ range.

Revisions

Version	Date
6LE007893Ae	November 2024


Documents to consult

Document	Reference
User manual for sentinel hw+ electronic trip units	6LE007969A
User manual for sentinel Energy hw+ electronic trip units	6LE008147A
User manual for HW1 air circuit breakers	6LE007331A
HW1 user maintenance guide	6LE007897A
sentinel Energy Modbus communication guide	6LE007964A
HTD210H panel display user guide	6LE002999A

You can download these publications and other technical information from our website: www.hager.com

Contact

Address	Hager Electro SAS 132 Boulevard d'Europe 67215 Obernai France
Phone	+ 33 (0)3 88 49 50 50
Website	www.hager.com




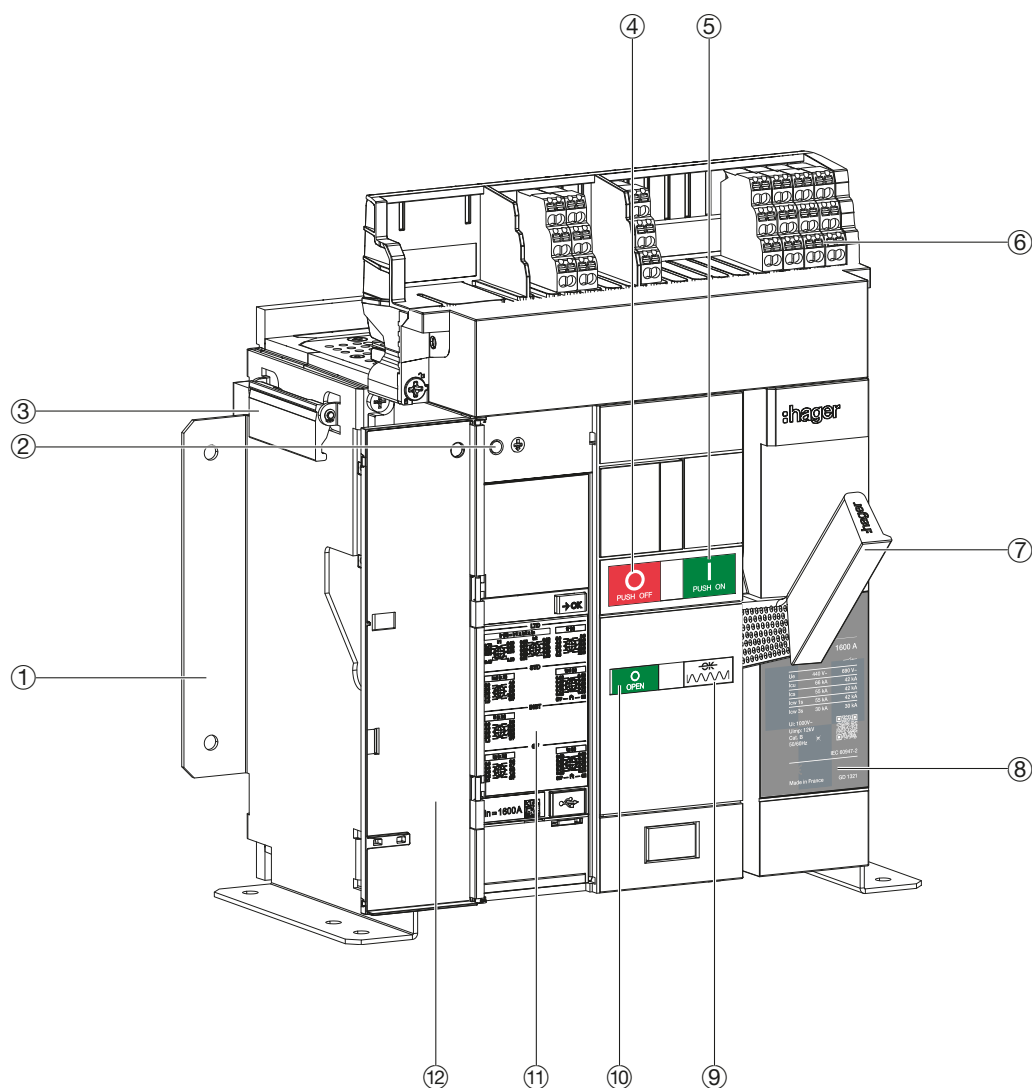


- ① Side plate for fixing
- ② RESET button
- ③ Lifting handle
- ④ Opening push button
- ⑤ Closing push button
- ⑥ Terminal blocks TB
- ⑦ Charging handle
- ⑧ Circuit breaker rating label
- ⑨ Closing spring status indicator
- ⑩ Contact opening and closing indicator
- ⑪ Trip unit
- ⑫ Transparent cover of the trip unit

Fixed circuit breakers


2.2 Description of the accessories

- ① Terminal blocks TB
- ② Auxiliary contacts AX
- ③ Opening and closing push-button locking cover PBC
- ④ MO charging Motor
- ⑤ CYC Operation Cycle Counter
- ⑥ SH shunt trip coil or UV undervoltage release coil
- ⑦ CC closing coil
- ⑧ UV undervoltage release coil or SH shunt trip coil
- ⑨ Locking the circuit breaker in open position using padlocks OLP
- ⑩ Locking the circuit breaker in open position using key locks OLK
- ⑪ Ready-to-close contact RTC
- ⑫ OAC Output Alarm Contact module
- ⑬ FS Fault trip contact
- ⑭ HWY210H adapter for panel display
- ⑮ HTD210H panel display
- ⑯ External neutral sensor ENCT
- ⑰ Cut-off chamber cover
- ⑱ Communication module
- ⑲ INS insulation module

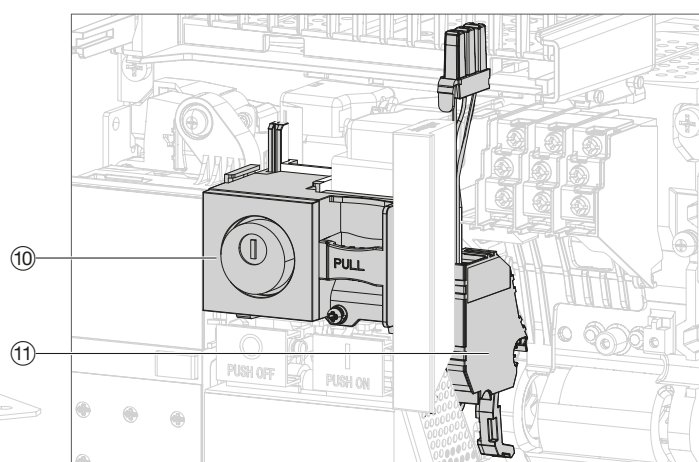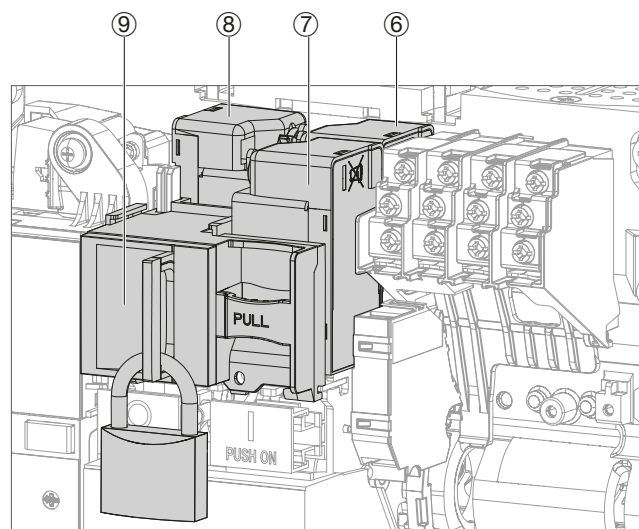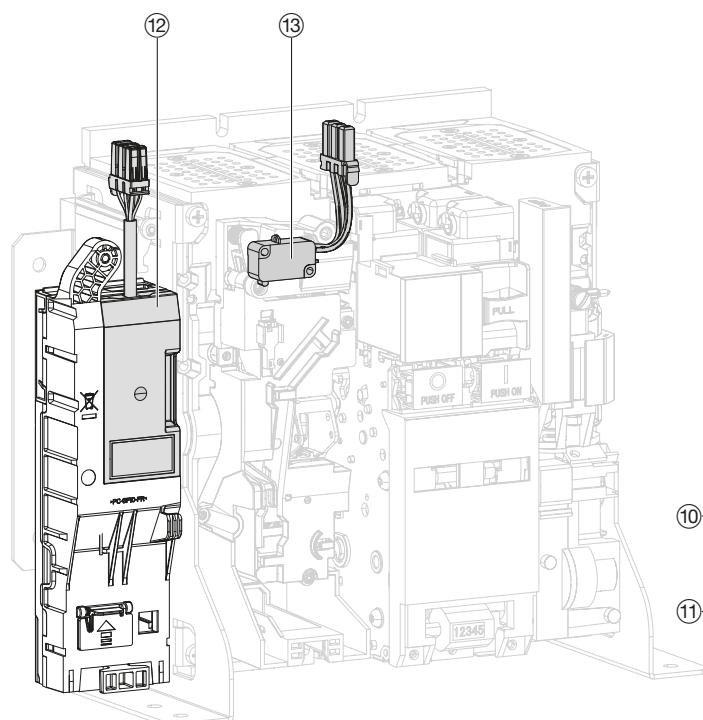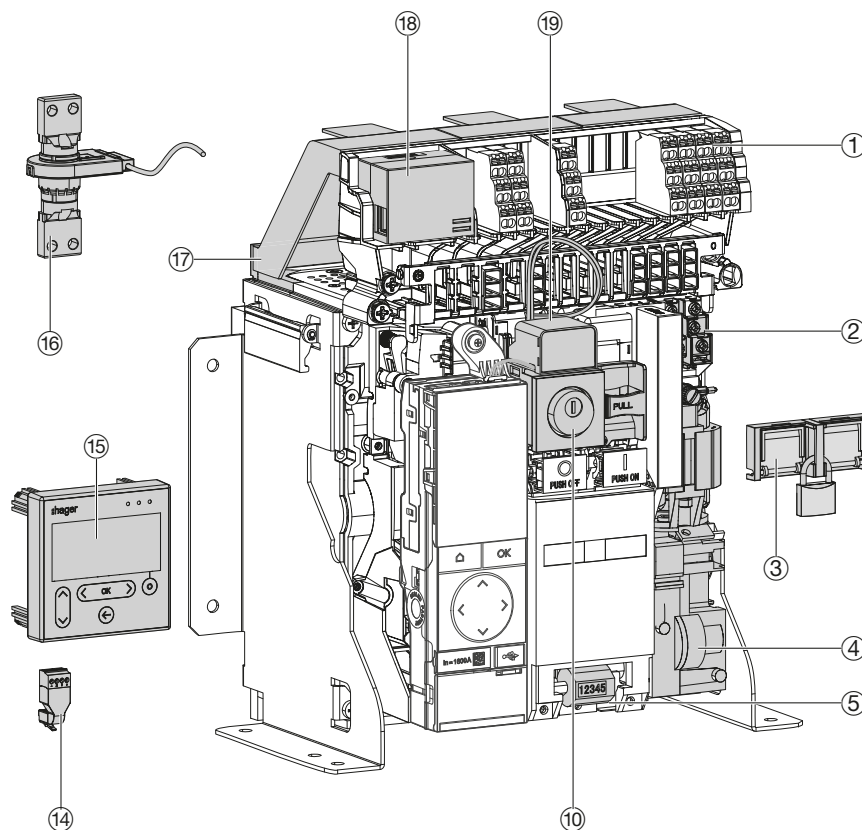

HW1 circuit breakers are equipped with terminal blocks designed to connect the accessories. Some are provided as standard and always installed while others are installed according to the circuit breaker configuration.

COM/ESP		TU		ZSI		OAC		FS	RTC/FS2	UV/SH2	SH/UV2	MO	CC	AX1/vN	AX2	AX3	AX4
	5 th S1	4 th S1	- 24 V +	STD1	STD2	LTD D01	GF D03	F12	R2 F22	D12 C22	C12 D22	M2	A2	12 I/N	22	32	42
	5 th S2	4 th S2	2 CIP 1	GF1	GF2	S/I D02	PTA D04	F14	R4 F24	C24	C13	M4	A3	14	24	34	44
			- RR/DI +	Cmn1	Cmn2	DOC	HWF D05	F11	R1 F21	D11 C21	C11 D21	M1	A1	11	21	31	41

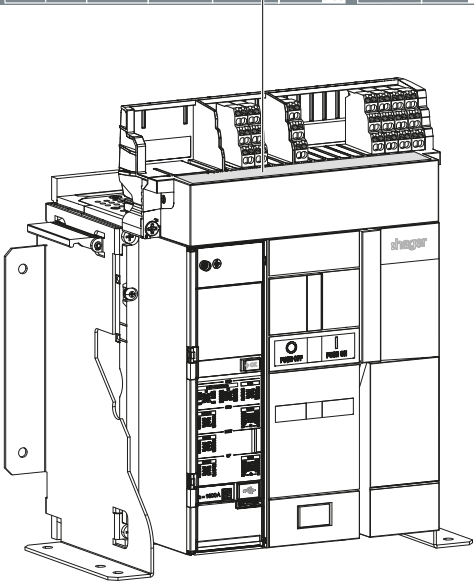

COM/ESP			
	5 th S1	4 th S1	
	5 th S2	4 th S2	

Terminal blocks	Description	Integrated or additional
COM/ESP	Communication module Either 2 connections via RJ45 cable for connection to the Modbus-RTU HWY965H module. Or 1 connection via RJ45 cable for connection to the Modbus-TCP HWY966H module. External sensors 4 th S1 and 4 th S2: connection of an external ENCT neutral current sensor for 3-pole circuit breakers.	Additional

TU		ZSI		OAC		
- 24 V	+	STD1	STD2	LTD DO1	GF DO3	
2 CIP	1	GF1	GF2	S/I DO2	PTA DO4	
- RR/DI	+	Cmn1	Cmn2	DOC	HWF DO5	

Terminal blocks	Description	Integrated or additional
TU	Trip unit 24V + and -: an external 24V DC SELV power supply (Hager HTG911H recommended) is necessary to guarantee permanent operation of the trip unit. It is also necessary if the OAC output alarm contacts module or the HTD210H panel display is installed. CIP 1 and 2: connection to the HTD210H panel display. RR/DI + and -: the RR/DI digital input is used to remotely acknowledge the sentinel trip unit's trip alarms and remotely reset the OAC alarm output contacts. It can be used for one of the following control functions on the sentinel Energy trip unit: - remote acknowledgement of the trip unit's trip alarms and remote reset of the alarm output contacts, - switching between tariff meters T1 and T2, - inhibition of advanced protections, - switching between profile A and B. It is configured by default for remote acknowledgement of the sentinel trip unit's trip alarms and the remote reset of the OAC alarm output contacts with the sentinel Energy trip unit.	Integrated
ZSI	Zone selectivity function Connection to downstream circuit breakers: STD1: selectivity on the Short time delay protection GF1: selectivity on the earth fault protection Cmn1: common Connection to the upstream circuit breaker: STD2: selectivity on the Short time delay protection GF2: selectivity on the earth fault protection Cmn2: common	Integrated terminal block but function deactivated
OAC	Output Alarm Contacts sentinel trip unit DO1: LTD, tripping after Long Time Delay protection DO2: S/I, tripping after Short Time Delay, Instantaneous or MCR protection DO3: GF, tripping after earth fault protection DO4: PTA, Overload pre-alarm activation DO5: HWF, tripping following a critical system alarm DOC: common sentinel Energy trip unit DO1: by default, tripping after Long Time Delay protection DO2: by default, Grouped Alarm (configured for Short Time Delay, Instantaneous or MCR tripping) DO3: by default, tripping after earth protection DO4: by default, activation of the PTA1 overload prealarm DO5: by default, tripping following a critical system alarm DOC: common	Additional

FS	RTC/FS2	UV/SH2	SH/UV2	MO	CC	AX1/vN	AX2	AX3	AX4
F12	R2 F22	D12 C22	C12 D22	M2	A2	12 vN	22	32	42
F14	R4 F24		C23	M4	A3	14	24	34	44
F11	R1 F21	D11 C21	C11 D21	M1	A1	11	21	31	41

Terminal blocks	Description	Integrated or additional
FS	Fault trip contact General tripping information.	Integrated
RTC/FS2	Contact ready to close or fault trip contact No. 2 These terminal blocks can be connected either to use an RTC ready to close contact or a 2nd FS2 Fault trip contact.	Additional
UV/SH2	These terminal blocks can be connected either to use a UV undervoltage release coil or an SH shunt trip coil.	Additional
SH/UV2	These terminal blocks can be connected either to use an SH shunt trip coil or a 2nd UV undervoltage release coil.	Additional
MO	Power supply of the MO charging motor. The connection terminals M1 and M2 power the drive mechanism of the MO motor. The M4 terminal is used to connect the SC "spring-charged" signalling contact. Note that the M4 terminal is at the same potential as the power supply of the drive mechanism.	Additional
CC	Connection of a closing coil CC	Additional
AX1/vN	Auxiliary contact No. 1 - Signals the open/closed status of the circuit breaker / vN connection to the neutral potential	Integrated
AX2	Auxiliary contact No. 2 - Signals the circuit breaker open/closed status	Integrated
AX3	Auxiliary contact No. 3 - Indication of the open / closed state of the circuit breaker	Integrated
AX4	Auxiliary contact No. 4 - Indication of the open / closed state of the circuit breaker	Integrated

ATTENTION


Terminal block vN

In the case of a 3-pole circuit breaker of the sentinel Energy trip unit and installed in an earthing system in which the neutral is distributed, the vN terminal block must be connected to the neutral potential.

This connection is essential to obtain correct measurement of phase-neutral voltages V1N, V2N, V3N, powers per phase and for operation of the advanced protections against active power feedback and undervoltage or overvoltage.

The three-pole circuit breaker equipped with the sentinel Energy trip unit is delivered without the AX1 contact. Terminals 11 and 14 are inoperative.

Connecting diagram of the HW1 fixed circuit breakers

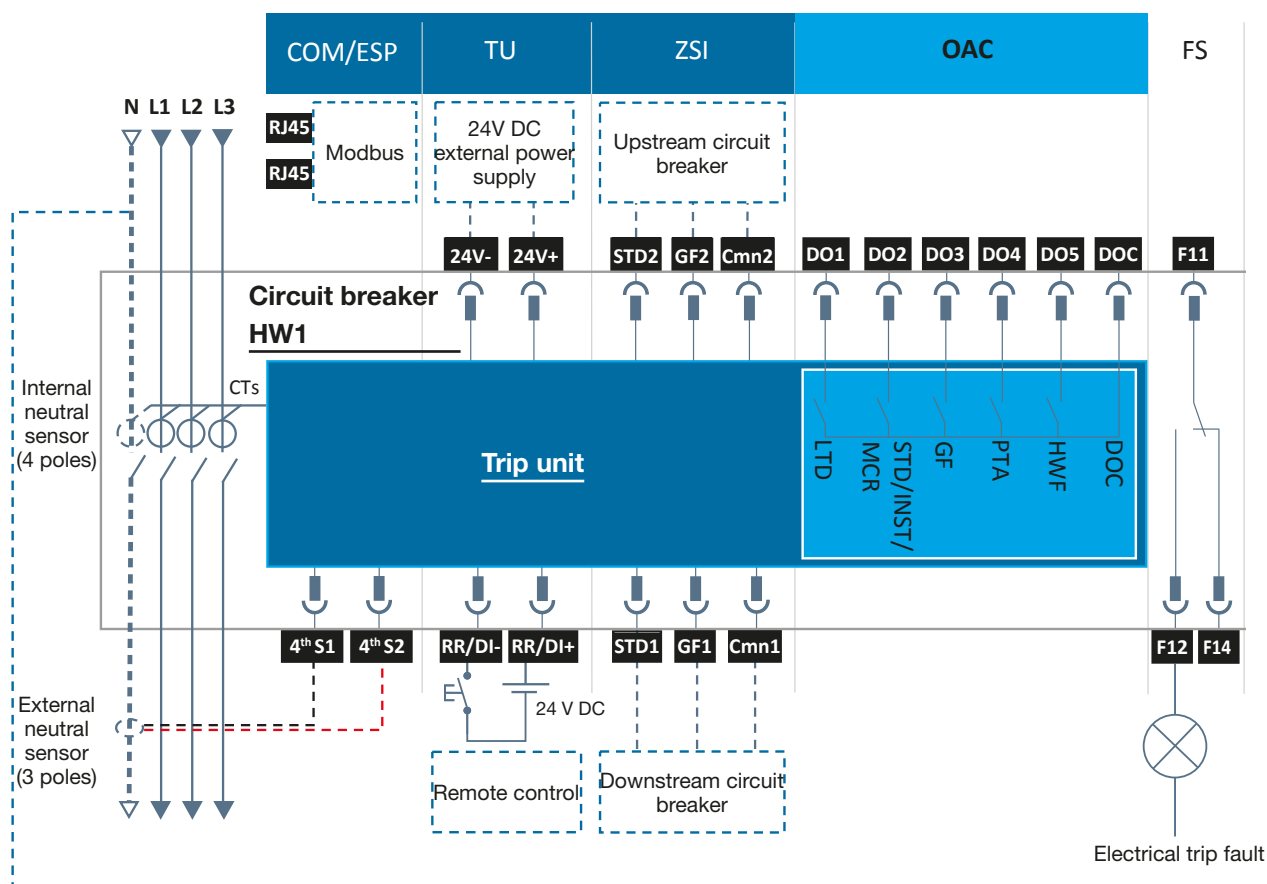


Terminal blocks	Connection
COM	Communication module
ESP	External sensors
TU	External power supply for the trip unit
ZSI	Zone selectivity function
OAC	Output Alarm Contacts
FS	Fault trip contact
RTC/FS2	Contact ready to close or 2nd electrical fault trip contact
UV/SH2	UV undervoltage coil or 2nd SH shunt trip coil
SH/UV2	SH shunt trip coil or 2nd UV undervoltage coil
MO	MO charging motor and SC spring-loaded signal contact
CC	Closing coil CC
AX	Auxiliary contact - maximum 4 contacts signalling the circuit breaker open/closed status (4 contacts by default)
12/vN	Neutral potential ENVA


The cables (flexible or rigid) used must have a cross section between 0.6 mm² and 2.5 mm².

In order to be properly held in place in the terminals, the connected cables must first be stripped from 10 to 12 mm.

Flexible cables must not be twisted. Only one cable is authorised per terminal.

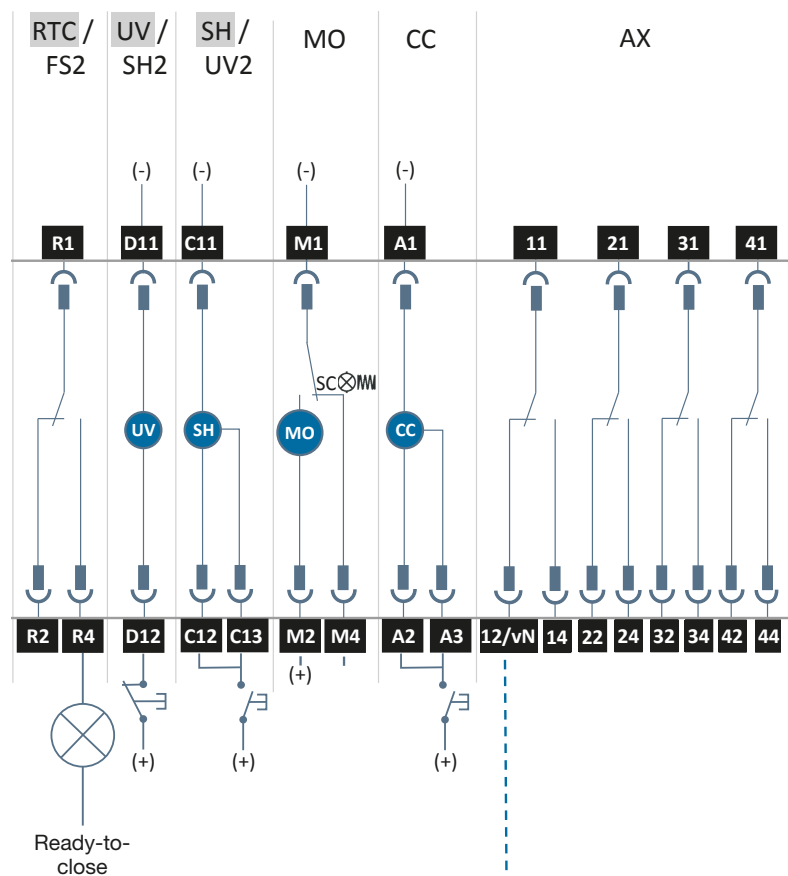

Electrical diagram of trip fault contact FS2, shunt coil SH2 and undervoltage coil UV2.

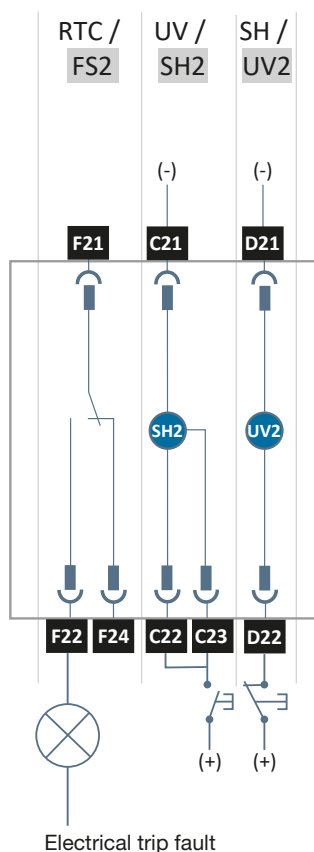


ATTENTION

The connection steps described for the SH or SH2 shunt coils and the CC closing coil correspond to the use case of a local control with a sentinel or sentinel Energy trip unit.

All the possible applications and wiring are described on the following pages.

Connecting coils for a local control with a sentinel or sentinel Energy trip unit.

A jumper of less than 10 cm must be fitted as close as possible to the terminal block between Cx2 and Cx3 (SH or SH2 shunt coil) and/or A2 and A3 (DC closing coil).

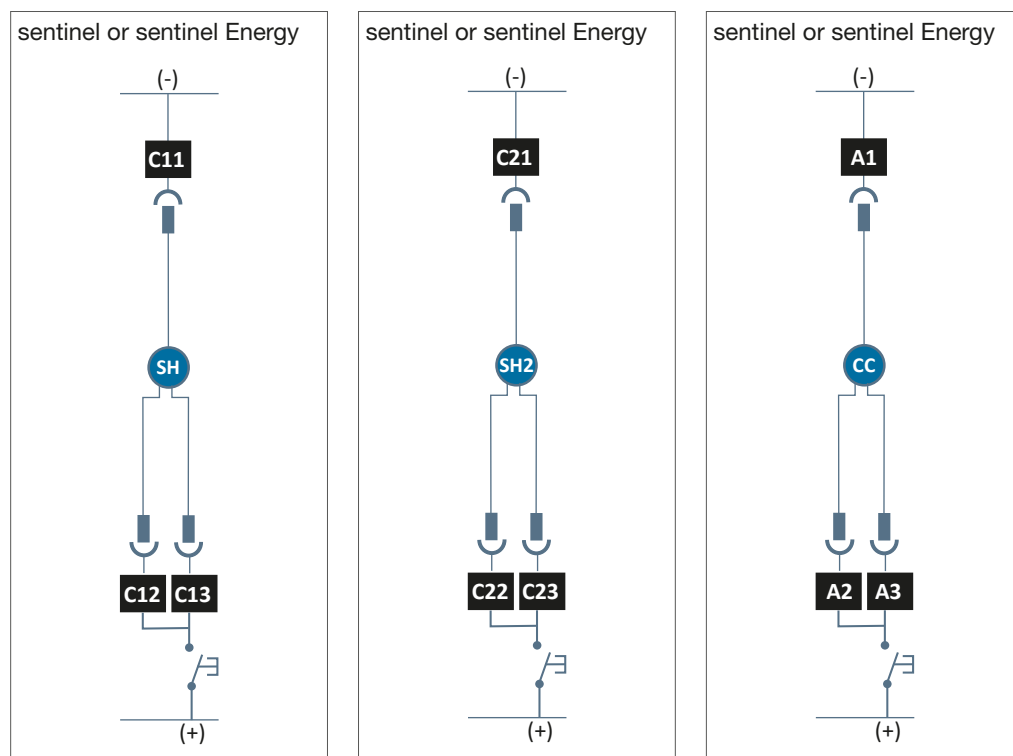

CAUTION

Warning this type of wiring does not allow remote control of the coils on a circuit breaker fitted with an Energy trip unit.


Connection of coils for local or remote control with an Energy sentinel trip unit.

Remote control is available via :

- Modbus if a communication module is installed,
- Hager Power touch Bluetooth application
- The Hager Power setup software
- and only with a sentinel Energy trip unit


The length of the connection cables between:

- the terminals Cx2 and Cx3 of the SH shunt trip coils,
 - the terminals A2 and A3 of the CC closing coils,
- is limited to 5 m for the 200-250 V coils (beyond that, an intermediate relay is necessary).

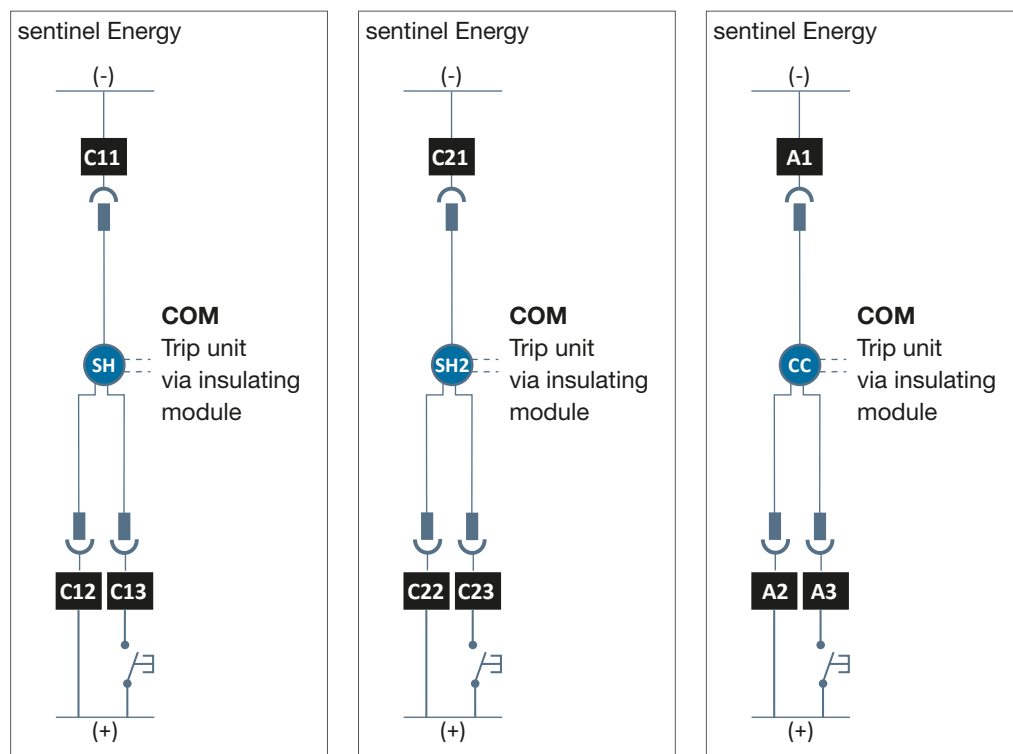


Special case of SH shunt trip coils and/or DC closing coils at 380-480V AC:

- Remote control on a circuit breaker fitted with an Energy trip unit is not possible with a SH shunt trip coil and/or CC closing coil at 380-480V AC.
- Only local control is possible. To achieve this, a jumper of less than 10 cm must be fitted as close as possible to the terminal block between Cx2 and Cx3 (SH or SH2 shunt trip coil) and/or A2 and A3 (CC closing coil).

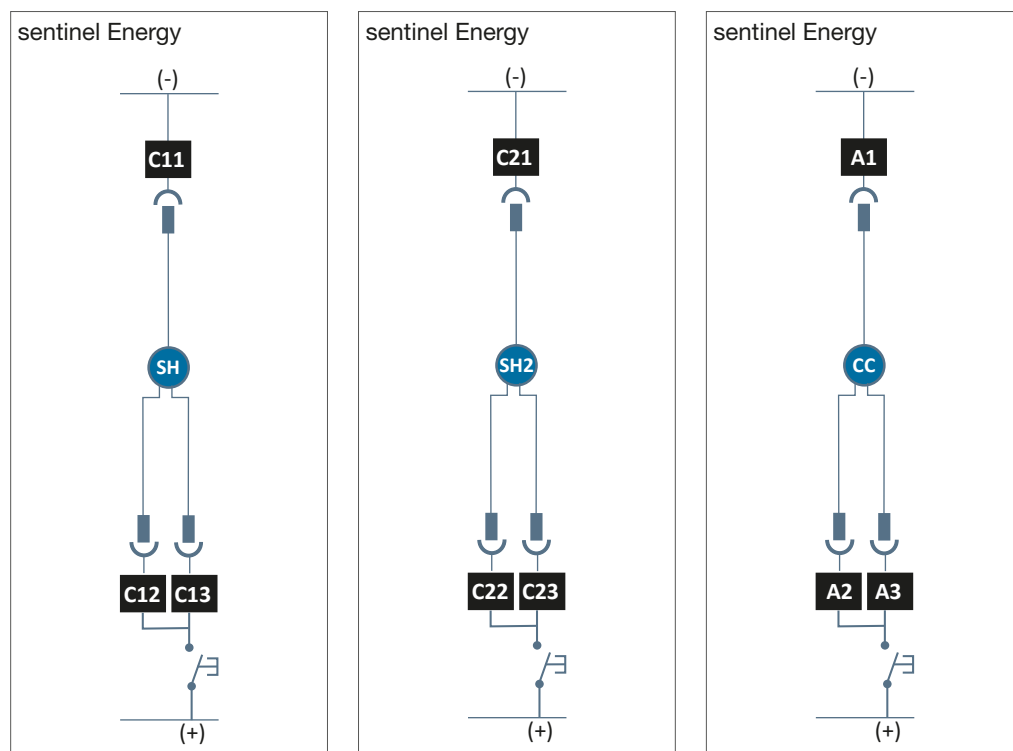





A withdrawable circuit breaker has two parts:

- A fixed part, the chassis.
- A mobile part, the circuit breaker itself which is inserted into the chassis.

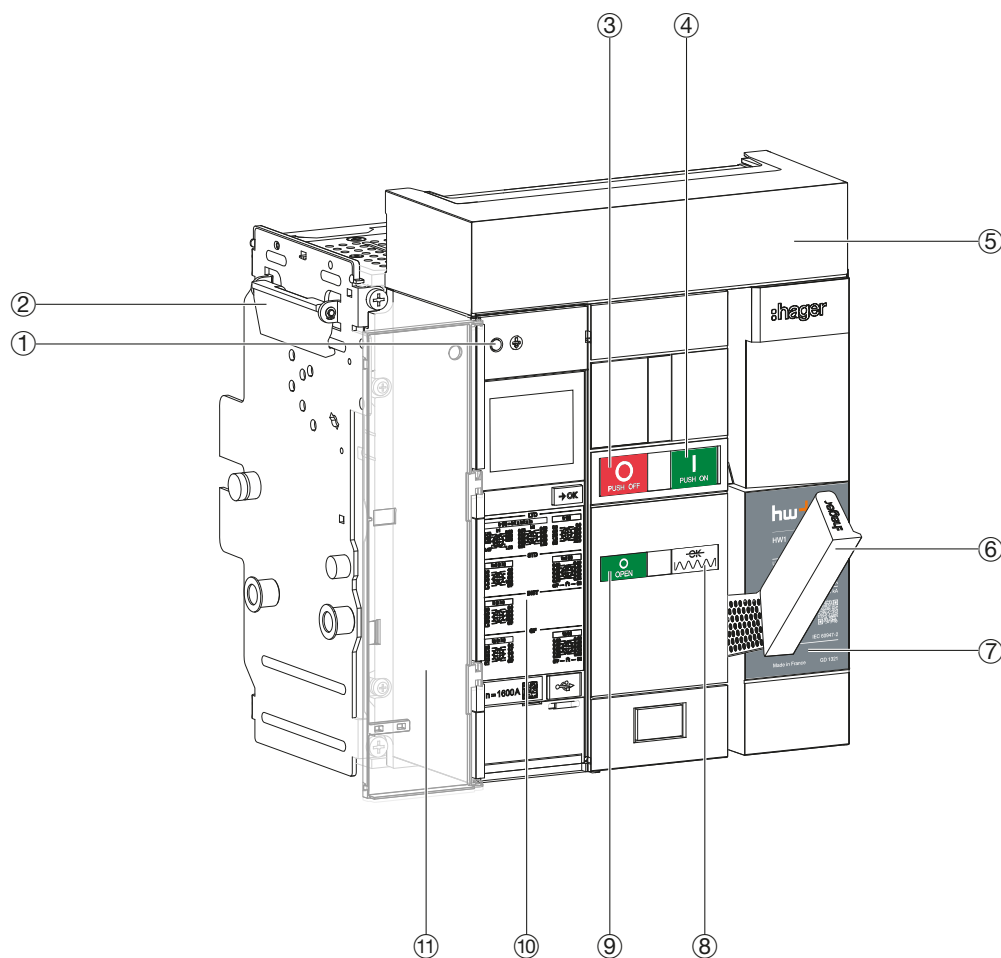



- ① RESET button
- ② Lifting handle
- ③ Opening push button
- ④ Closing push button
- ⑤ Accessory connector cover
- ⑥ Charging handle
- ⑦ Circuit breaker rating label
- ⑧ Closing spring status indicator
- ⑨ Contact opening and closing indicator
- ⑩ Trip unit
- ⑪ Transparent cover of the trip unit

- ① Auxiliary contacts AX
- ② Opening and closing push-button locking cover PBC
- ③ MO charging Motor
- ④ CYC Operation Cycle Counter
- ⑤ SH shunt trip coil or UV undervoltage release coil
- ⑥ CC closing coil
- ⑦ UV undervoltage release coil or SH shunt trip coil
- ⑧ Locking the circuit breaker in open position using padlocks OLP
- ⑨ Locking the circuit breaker in open position using key locks OLK
- ⑩ RTC Ready-to-Close contact
- ⑪ OAC Output alarm contact module
- ⑫ FS Fault trip contact
- ⑬ WIP wrong insertion preventer chassis / circuit breaker
- ⑭ HWY210H adapter for panel display
- ⑮ HTD210H panel display
- ⑯ ENCT external neutral current sensor
- ⑰ Position sensor for COM (PSE)
- ⑱ INS insulation module

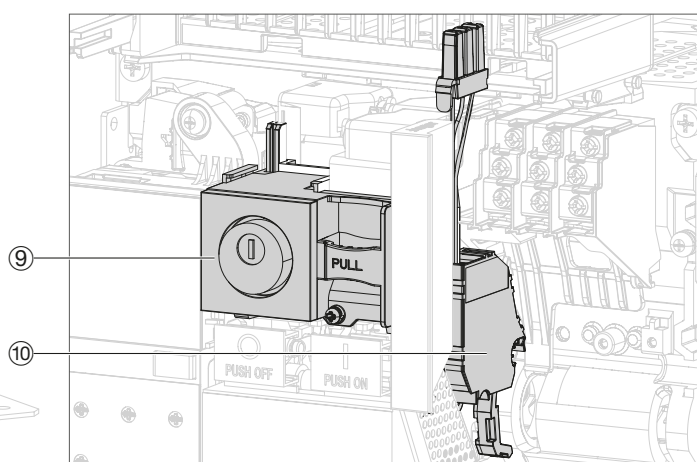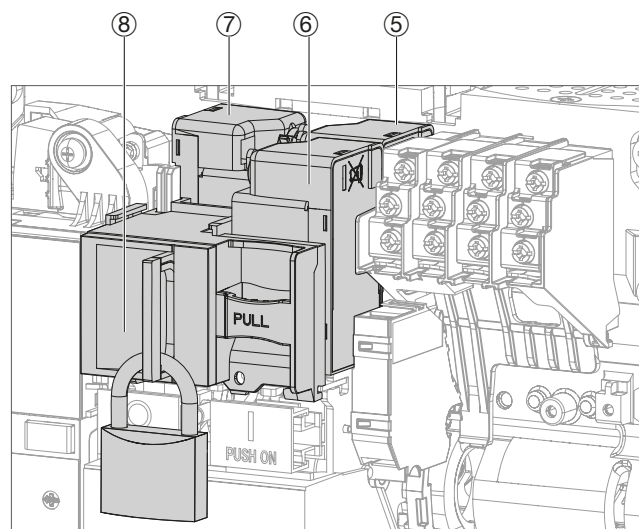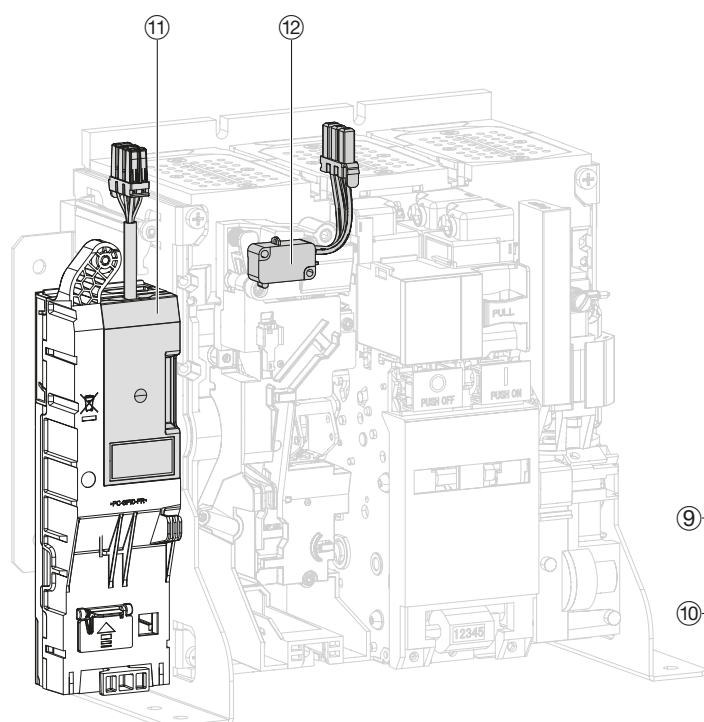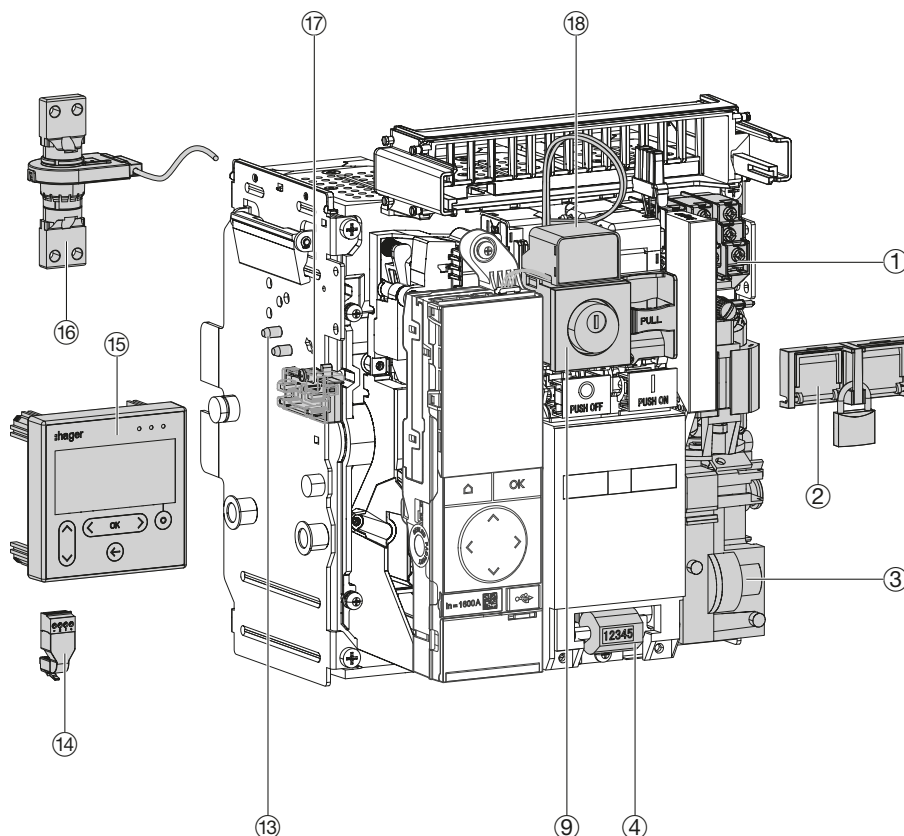


Withdrawable circuit breakers

3.3 Description of the chassis and its accessories

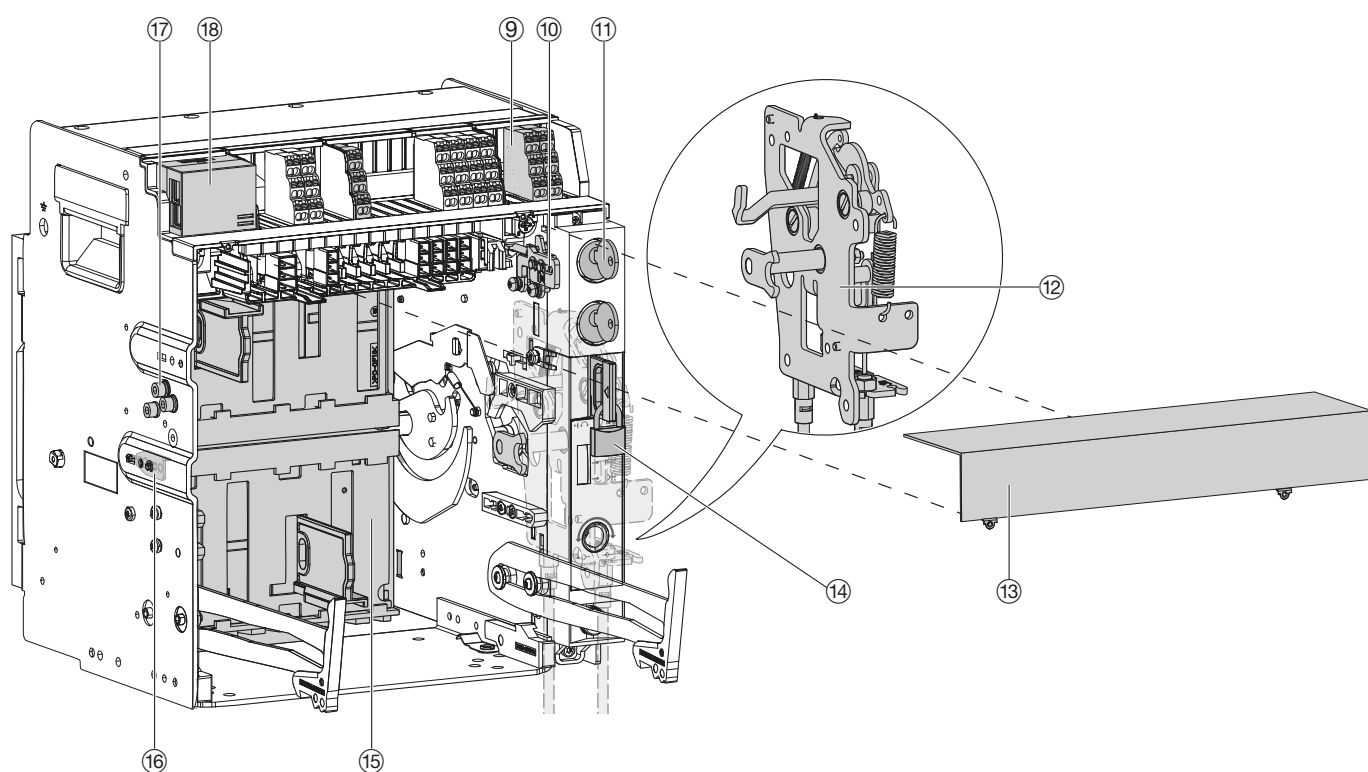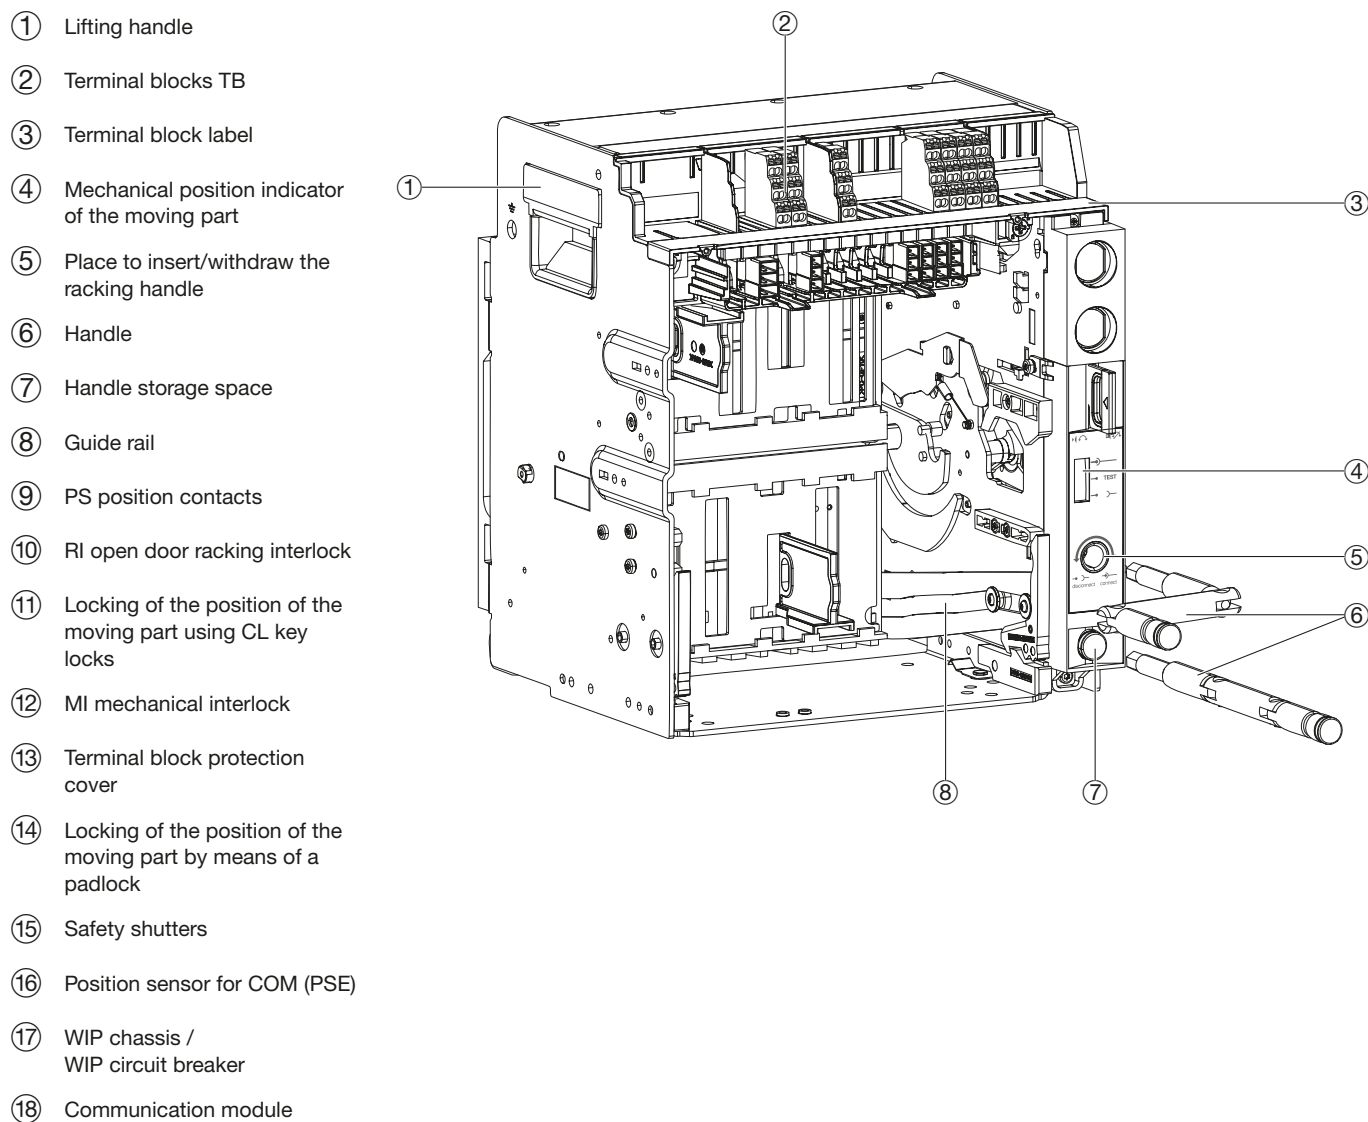

The chassis of the HW1 drawout circuit breakers is equipped with terminal blocks designed to connect the accessories. Some are provided as standard and always installed while others are installed according to the circuit breaker configuration.

COM		ESP	TU	ZSI				OAC				FS	RTC/FS2	UV/SH2	SH/UV2	MO	CC	AX1/vN	AX2	AX3	AX4	D1	D2	T1	C1	C2
		5 th S1	4 th S1	24 V	STD1	STD2	LTD	DO1	GF	DO3		F12	R2	D12	C12	M2	A2	12	22	32	42	D12	D22	T12	C12	C22
		5 th S2	4 th S2	2 C/P	GF1	GF2	STD/INST	DO2	PTA	DO4		F14	R4	D14	C13	M4	A3	14	24	34	44	D14	D24	T14	C14	C24
				RR/DI	Cmn1	Cmn2	DOC	HWF	DO5			F11	R1	D11	C11	M1	A1	11	21	31	41	D11	D21	T11	C11	C21

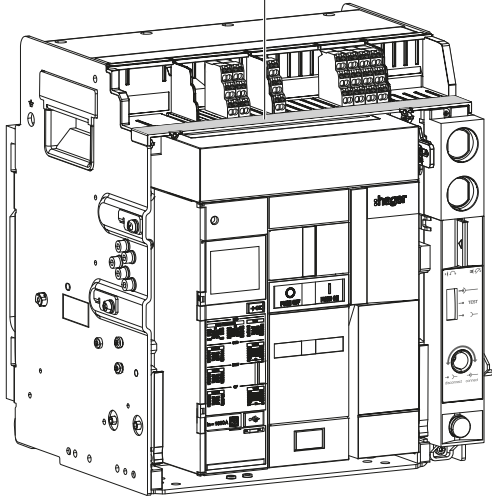

Terminal blocks	Description	Integrated or additional
COM	Communication module Either 2 connections via RJ45 cable for connection to the Modbus-RTU HWY965H module. Or 1 connection via RJ45 cable for connection to the Modbus-TCP HWY966H module.	Additional

Withdrawable circuit breakers

3.4 Description of the chassis terminal blocks

ESP		TU	ZSI		OAC	
5 th S1	4 th S1	- 24V +	STD1	STD2	LTD DO1	GF DO3
5 th S2	4 th S2	2 CIP 1	GF1	GF2	STD/INST DO2	PTA DO4
		RR/DI - +	Cmn1	Cmn2	DOC	HWF DO5

Terminal blocks	Description	Integrated or additional
ESP	External sensors 4 th S1 and 4 th S2: connection of an external ENCT neutral current sensor for 3-pole circuit breakers.	Additional
TU	Trip unit 24V + and -: an external 24V DC SELV power supply (Hager HTG911H recommended) is necessary to guarantee permanent operation of the trip unit. It is also necessary if the OAC output alarm contacts module or the HTD210H panel display is installed. CIP 1 and 2: connection to the HTD210H panel display. RR/DI + and -: the RR/DI digital input is used to remotely acknowledge the sentinel trip unit's trip alarms and to remotely reset the OAC alarm output contacts. It can be used for one of the following control functions on the sentinel Energy trip unit: - remote acknowledgement of the trip alarms on the trip unit and remote reset of the output alarm contacts, - switching between tariff meters T1 and T2, - inhibition of advanced protections, - switching between profile A and B. It is configured by default for remote acknowledgement of the sentinel trip unit's trip alarms and the remote reset of the OAC alarm output contacts with the sentinel Energy trip unit.	Integrated
ZSI	Zone selectivity function Connection to downstream circuit breakers: STD1: selectivity on the Short time delay protection GF1: selectivity on the earth fault protection Cmn1: common Connection to the upstream circuit breaker: STD2: selectivity on the Short time delay protection GF2: selectivity on the earth fault protection Cmn2: common	Integrated terminal block but function deactivated
OAC	Output Alarm Contacts sentinel trip unit DO1: LTD, tripping after Long Time Delay protection DO2: STD/INST, tripping after Short Time Delay, Instantaneous or MCR protection DO3: GF, tripping after earth fault protection DO4: PTA, Overload pre-alarm activation DO5: HWF, following a critical system alarm DOC: common sentinel Energy trip unit DO1: by default, tripping after Long Time Delay protection DO2: by default, Grouped Alarm (configured for Short Time Delay, Instantaneous or MCR tripping) DO3: by default, tripping after earth protection DO4: by default, activation of the PTA1 overload prealarm DO5: by default, tripping following a critical system alarm DOC: common	Additional

FS	RTC/FS2	UV/SH2	SH/UV2	MO	CC	AX1/vN	AX2	AX3	AX4
F12	R2 F22	D12 C22	C12 D22	M2	A2	12 vN	22	32	42
F14	R4 F24		C13	M4	A3	14	24	34	44
F11	R1 F21	D11 C21	C11 D21	M1	A1	11	21	31	41

Terminal blocks	Description	Integrated or additional
FS	Fault trip contact General tripping information. It should be noted that this terminal block does not send information if the circuit breaker is opened manually using the push-button.	Integrated
RTC/FS2	RTC ready to close contact or Fault trip contact No. 2 FS2 These terminal blocks can be connected either to use an RTC ready to close contact or a 2nd FS2 Fault trip contact.	Additional
UV/SH2	These terminal blocks can be connected either to use a UV undervoltage release coil or an SH shunt trip coil.	Additional
SH/UV2	These terminal blocks can be connected either to use an SH shunt trip coil or a 2nd UV undervoltage release coil.	Additional
MO	Power supply of the MO charging motor. The connection terminals M1 and M2 power the drive mechanism of the MO motor. The M4 terminal is used to connect the SC "spring-charged" signalling contact. Note that the M4 terminal is at the same potential as the power supply of the drive mechanism.	Additional
CC	Connection of a closing coil CC	Additional
AX1/vN	Auxiliary contact No. 1 - Signals the open/closed status of the circuit breaker / vN connection to the neutral potential	Integrated
AX2	Auxiliary contact No. 2 - Signals the circuit breaker open/closed status	Integrated
AX3	Auxiliary contact No. 3 - Signals the circuit breaker open/closed status	Integrated
AX4	Auxiliary contact No. 4 - Signals the circuit breaker open/closed status	Integrated

ATTENTION


Terminal block vN

In the case of a 3-pole circuit breaker equipped with a sentinel Energy trip unit and installed in a earth fault protection system where the neutral is distributed, the vN terminal must be connected to the neutral potential.
This connection is essential to obtain correct measurement of phase-neutral voltages V1N, V2N, V3N, powers per phase and for operation of the advanced protections against active power feedback and undervoltage or overvoltage.
The three-pole circuit breaker equipped with the sentinel Energy trip unit is delivered without the AX1 contact. Terminals 11 and 14 are inoperative.

D1	D2	T1	C1	C2
D12	D22	T12	C12	C22
D14	D24	T14	C14	C24
D11	D21	T11	C11	C21

Terminal blocks	Description	Integrated or additional
D1 and D2	Contacts indicating the (Disconnected) position of the circuit breaker in the chassis	Additional
T1	Contact indicating the test position (Test) of the circuit breaker in the chassis	
C1 and C2	Contacts indicating the Connected position of the circuit breaker in the chassis	

Connecting diagram of the HW1 drawout circuit breakers

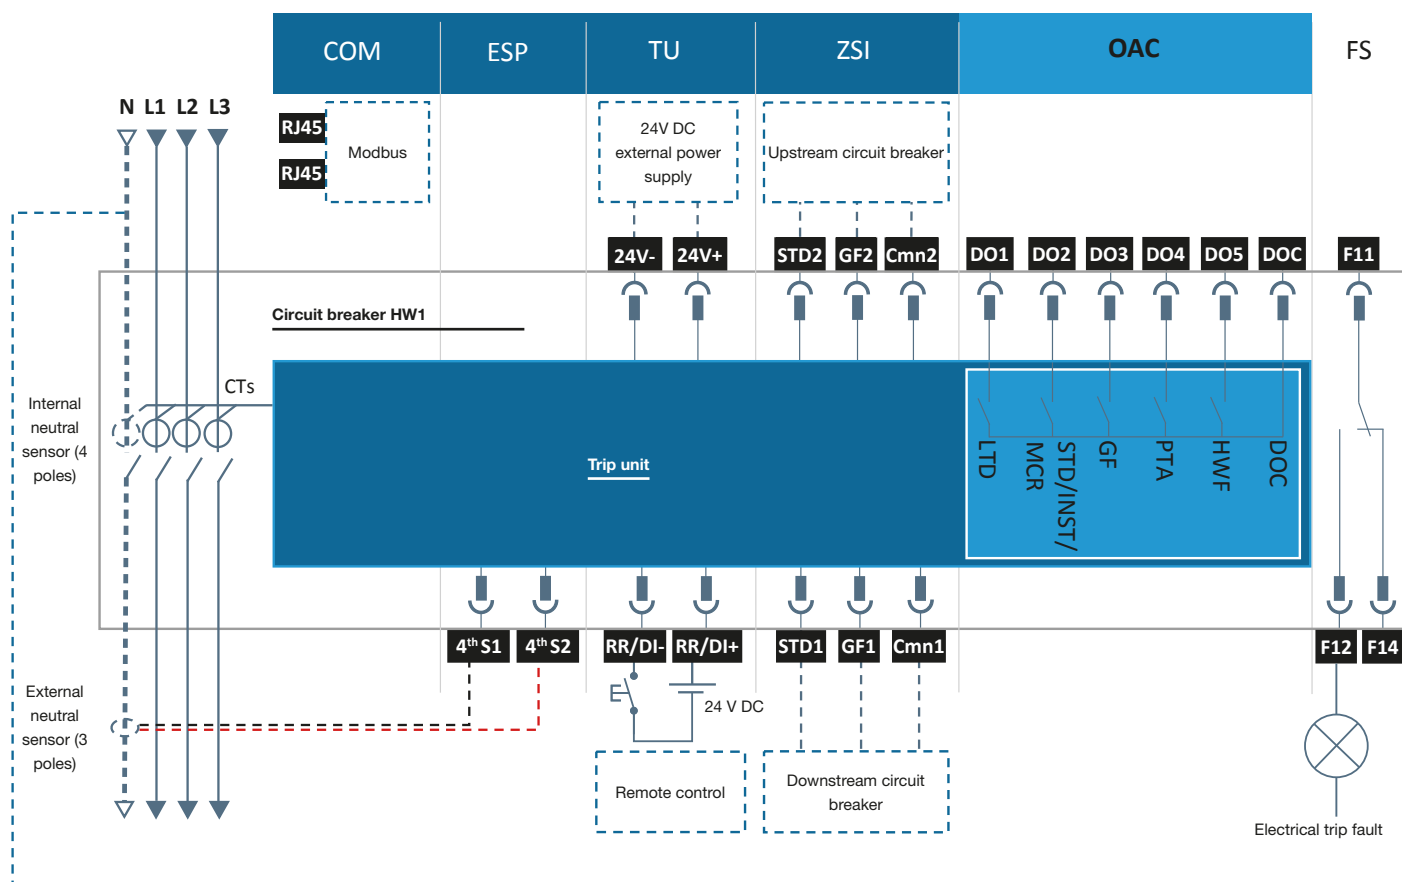


Terminal blocks	Connection
COM	Communication module
ESP	External sensors
TU	External power supply for the trip unit
ZSI	Zone selectivity function
OAC	Output Alarm Contacts
FS	Fault trip contact
RTC/FS2	Contact ready to close or 2nd electrical fault trip contact
UV/SH2	UV undervoltage coil or 2nd SH shunt trip coil
SH/UV2	SH shunt trip coil or 2nd UV undervoltage coil
MO	MO charging motor and SC spring-loaded signal contact
CC	Closing coil CC
AX	Auxiliary contact - maximum 4 contacts signalling the circuit breaker open/closed status (4 contacts by default)
PS	Position contacts - Up to 5 contacts indicating the position of the circuit breaker in the chassis.
12/vN	Neutral potential ENVA


The cables (flexible or rigid) used must have a cross section between 0.6 mm² and 2.5 mm².

In order to be properly held in place in the terminals, the connected cables must first be stripped from 10 to 12 mm.

The cables must not be twisted and only one cable is authorised per terminal.

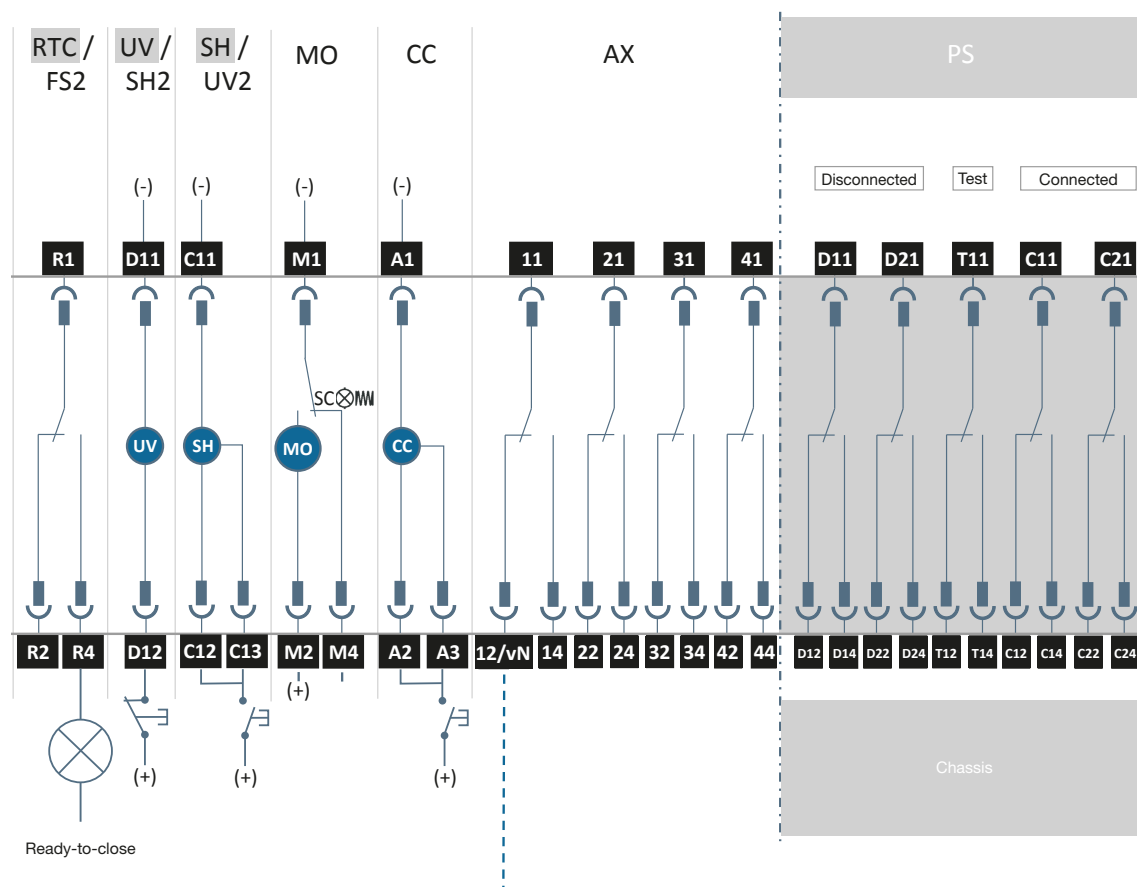

Electrical diagram of trip fault contact FS2, shunt coil SH2 and undervoltage coil UV2.

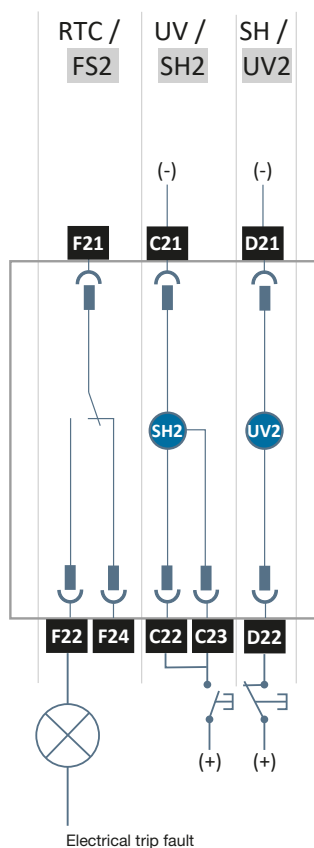


ATTENTION

The connection steps described for the SH or SH2 shunt coils and the CC closing coil correspond to the use case of a local control with a sentinel or sentinel Energy trip unit.

All the possible applications and wiring are described on the following pages.

Connecting coils for a local control with a sentinel or sentinel Energy trip unit.

A jumper of less than 10 cm must be fitted as close as possible to the terminal block between Cx2 and Cx3 (SH or SH2 shunt coil) and/or A2 and A3 (DC closing coil).

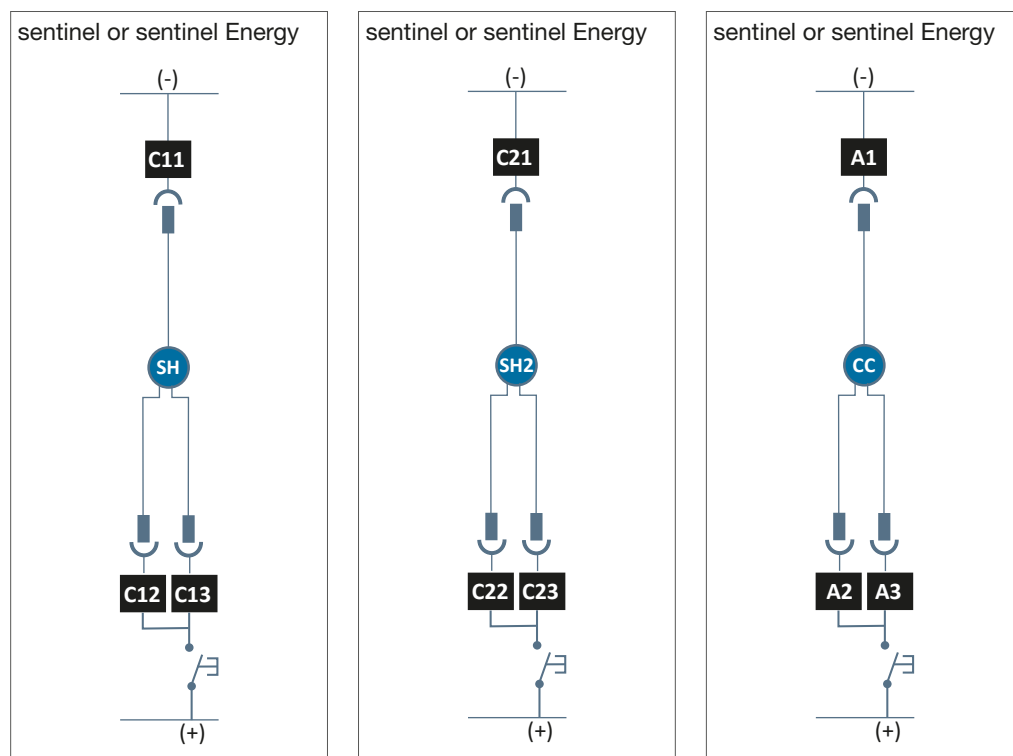

CAUTION

Warning this type of wiring does not allow remote control of the coils on a circuit breaker fitted with an Energy trip unit.


Connection of coils for local or remote control with an Energy sentinel trip unit.

Remote control is available via :

- Modbus if a communication module is installed,
- Hager Power touch Bluetooth application
- The Hager Power setup software
- and only with a sentinel Energy trip unit


The length of the connection cables between:

- the terminals Cx2 and Cx3 of the SH shunt trip coils,
 - the terminals A2 and A3 of the CC closing coils,
- is limited to 5 m for the 200-250 V coils (beyond that, an intermediate relay is necessary).

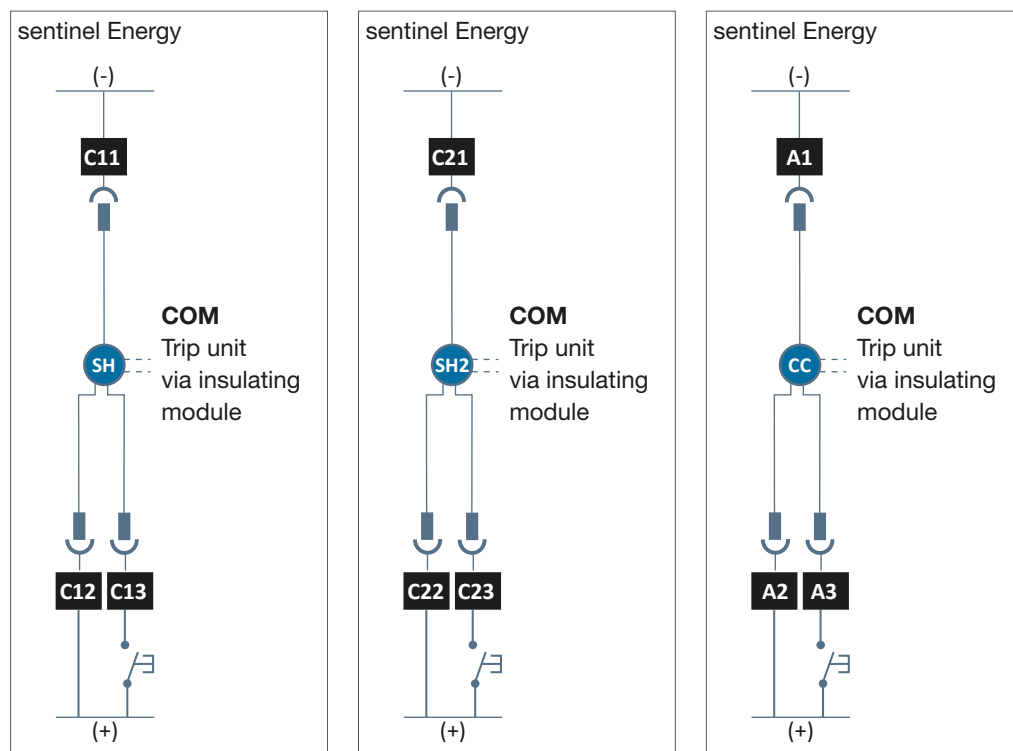


Special case of SH shunt trip coils and/or DC closing coils at 380-480V AC:

- Remote control on a circuit breaker fitted with an Energy trip unit is not possible with a SH shunt trip coil and/or CC closing coil at 380-480V AC.
- Only local control is possible. To achieve this, a jumper of less than 10 cm must be fitted as close as possible to the terminal block between Cx2 and Cx3 (SH or SH2 shunt trip coil) and/or A2 and A3 (CC closing coil).

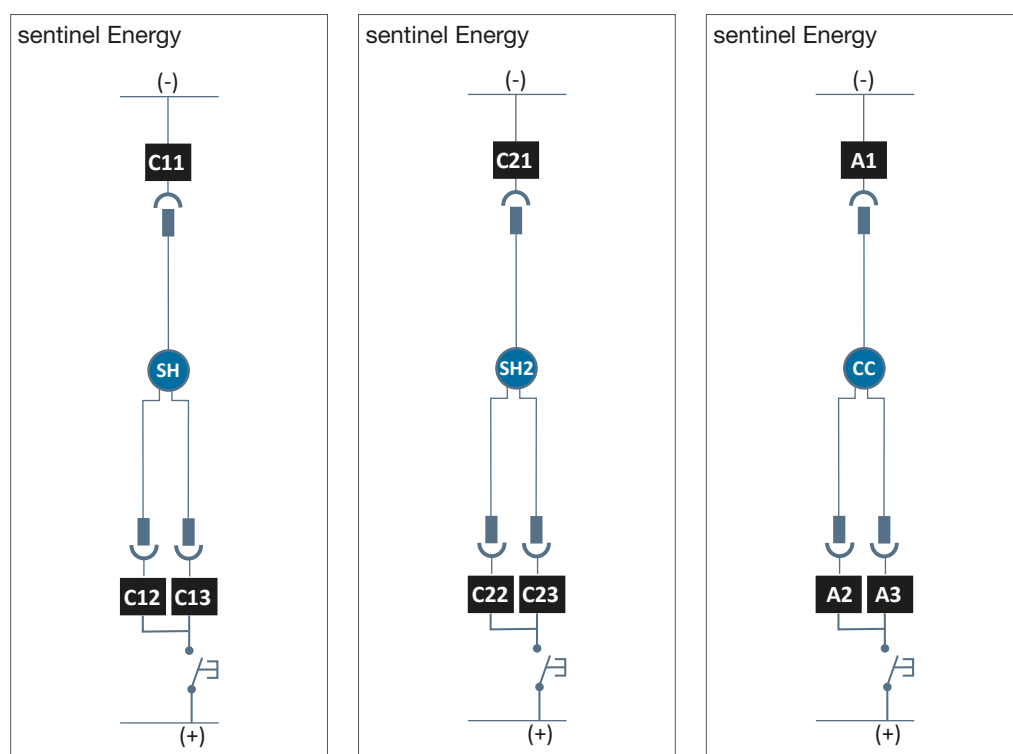

hw+ air circuit breakers are equipped with a sentinel or sentinel Energy electronic trip unit on the front to protect against overloads and short circuits.

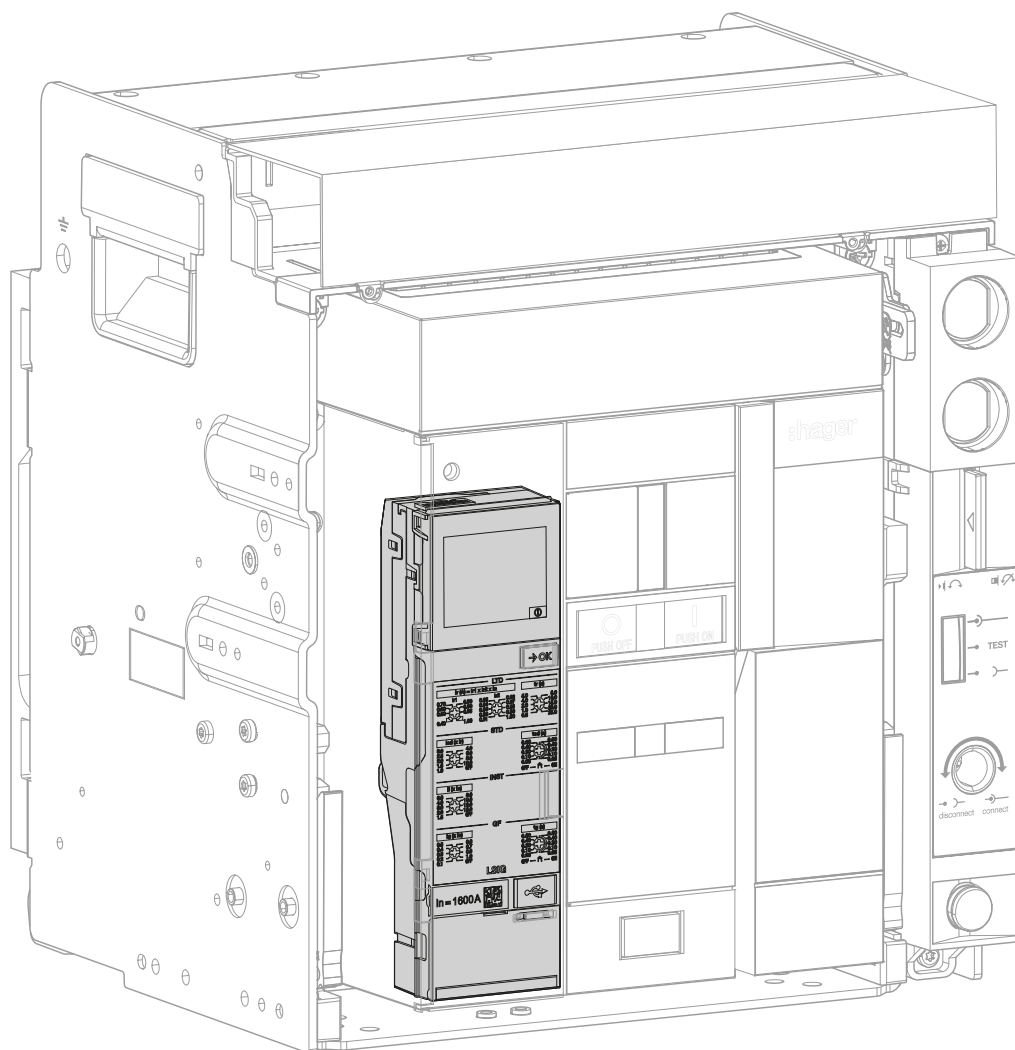

The detailed description of the characteristics, functions and settings is available in the 6LE007969A user manual for hw+ sentinel electronic trip units and the 6LE008147A user manual for hw+ sentinel Energy electronic trip units.

Compliance with the standards

hw+ air circuit breakers and the related auxiliary devices comply with the following standards:

International standards

- IEC 60947-1: General rules
- IEC 60947-2: Circuit breakers
- IEC 60947-3: Switch disconnectors
- IEC 60947-5-1: Control circuit devices and switching elements

Pollution degree

hw+ air circuit breakers are certified for operation in pollution degree 3 environments as defined by IEC standard 60947-1.

Temperature

hw+ air circuit breakers can be used at temperatures between -25°C and 70 °C.

For temperatures above 65 °C, for 1600A rating, refer to the values indicated in Technical Catalogue 6LE007334A.

The acceptable storage temperature range in the original packing is from -40°C to 70°C.

Humidity

hw+ air circuit breakers can be used in an atmosphere with a relative humidity of 45 to 85% max.

Altitude

hw+ air circuit breakers can be used without derating up to an altitude of 2000 m. Above this, refer to the values provided in the Technical Catalogue 6LE007334A.

Vibrations

hw+ air circuit breakers can withstand mechanical vibrations.

They are compliant with the requirements of the standard IEC 60068-2-52:

- 2.0 to 13.2 Hz and amplitude +/- 1 mm.
- 13.2 to 100 Hz acceleration +/- 0.7 g.
- Resonance frequency (+/-1 mm / +/-0.7 g) for 90 min

Excessive vibration may cause nuisance (false) tripping and/or damage to connections and/or mechanical parts.

Impacts

hw+ air circuit breakers can withstand impacts with an acceleration of 200 m/s² (20 g) max.

Environment


hw+ air circuit breakers must be used in an environment without excess water vapour, oil vapour, dust or corrosive gases.

Without sudden temperature fluctuations and without condensation.

With the following levels of chemical compounds: Ammonia (NH₃): 0.5 ppm max. Hydrogen sulphide (H₂S)/sulphur dioxide (SO₂)/hydrogen chloride (HCl): 0.1 ppm max. Chlorine (Cl₂): 0.05 ppm max.

The HW1 circuit breaker has the following elements on the front:

- ① Charging handle
- ② Closing push button
- ③ Closing spring status indicator
- ④ Contact opening and closing indicator
- ⑤ Opening push button
- ⑥ RESET re-arm button

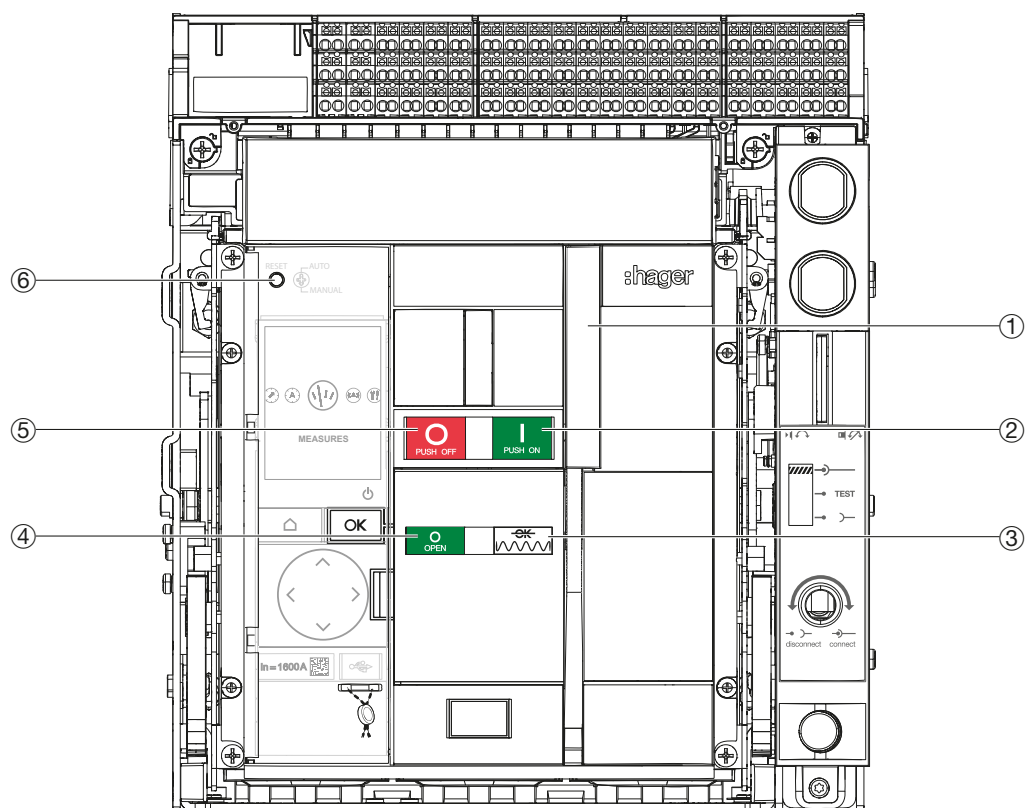

Status indicators


The combination of the two indicators shows the status of the circuit breaker.

Opening and closing indicator	Closing spring status indicator	Circuit breaker status
		Circuit breaker open. Closing spring discharged.
		Air circuit breaker Closing spring loaded but not ready to close because: • Following tripping, the circuit breaker has not been reset via the acknowledgement procedure (see 6LE007331A user manual for HW1 air circuit breakers, Chapter 07 Closing the circuit breaker after a tripping). • The circuit breaker is mechanically locked in the open position using a lock or padlock.
		Circuit breaker open. Closing spring charged. The circuit breaker is ready to be closed.
		Circuit breaker closed. Closing spring discharged.
		Circuit breaker closed. Closing spring charged.

RESET re-arm button

The RESET re-arm button is used to reset the circuit breaker after tripping (see 6LE007331A user manual for HW1 air circuit breakers, Chapter 07 Closing the circuit breaker after a tripping).

The operation of the RESET re-arm button depends on the Auto or Manual mode set using the adjustment dial on the right.

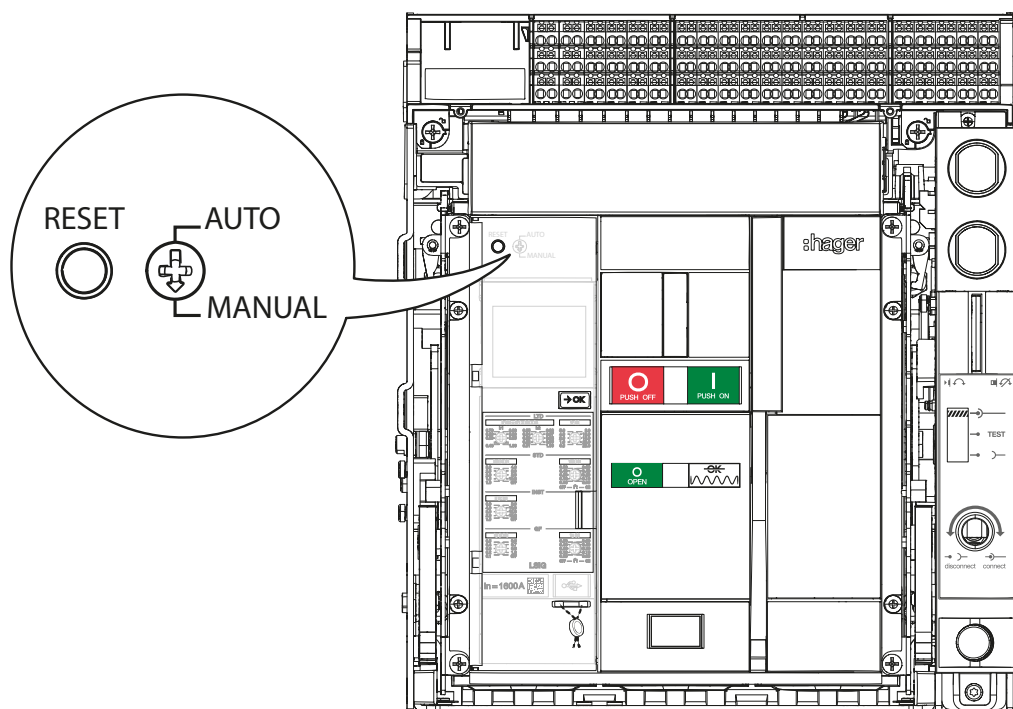


- **Auto mode**, in which it is not necessary to press the RESET re-arm button before closing the circuit breaker again after tripping.
This mode is usually used if the circuit breaker is remotely monitored, as it can be closed without requiring a person to perform the action on-site.
- **Manual mode**, in which the RESET re-arm button must be pressed in before closing the circuit breaker again after tripping.


ATTENTION

Risk of property damage

To switch from Auto to Manual mode,
always turn the dial **anti-clockwise**.

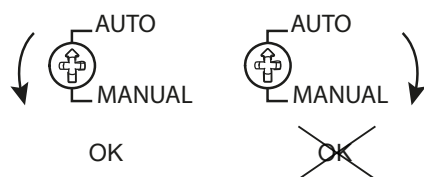

To switch from Manual to Auto mode,
always turn the dial **clockwise**.

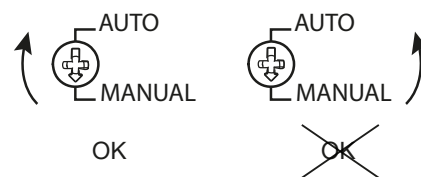


Closing spring

The closing spring is used to mechanically close the circuit breaker. It must be charged first, and there are two procedures for this:


- Manual charging

Charge the spring using the charging handle until the status of the indicator changes.

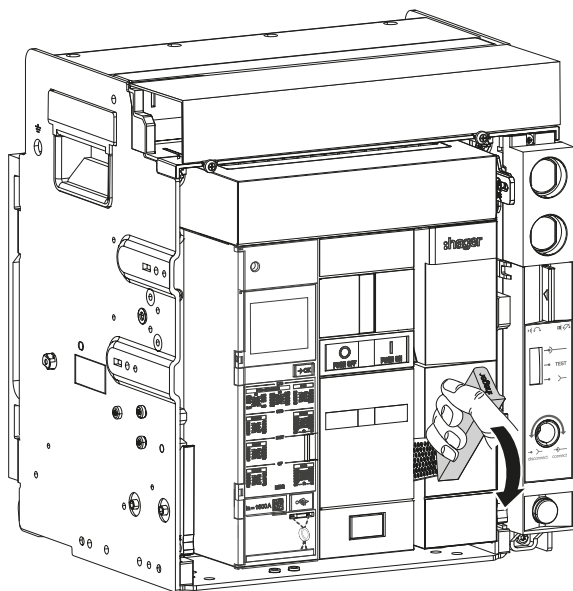

- Automatic charging

If an MO charging motor is installed and powered, the closing spring charges automatically each time the circuit breaker closes.

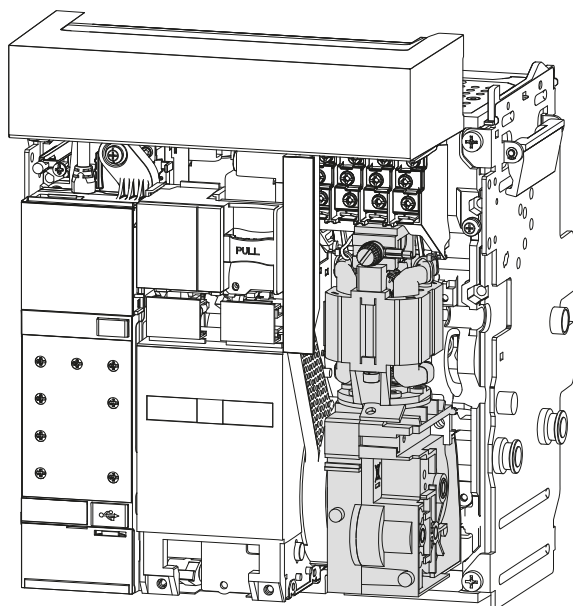


The detailed description of the circuit breaker closing and opening operations is available in the 6LE007331A user manual for HW1 air circuit breakers.

The position of the circuit breaker in the chassis is shown by the mechanical position indicator of the moving part on the front. There are three different positions, connected, test and disconnected.

Changing from one position to another is done using a racking handle.

Before changing from one position to another, the padlocking and position acknowledgement tab must be pressed.

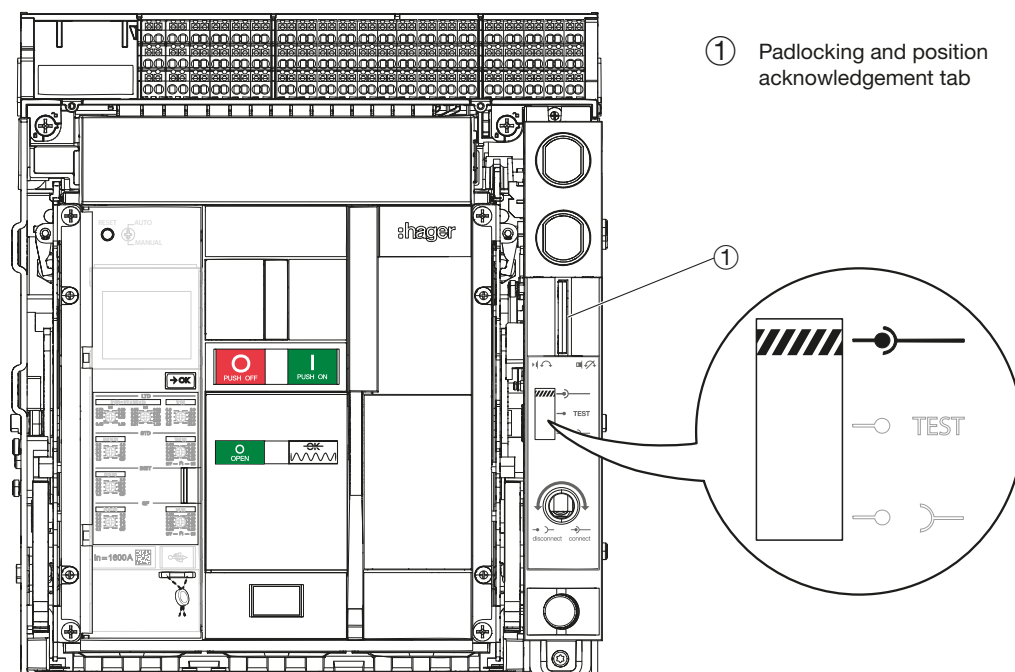

Circuit breaker position	Circuit breaker status	Mechanical position indicator of the moving part
Disconnected	The circuit breaker can be withdrawn from or inserted into the chassis.	
Test	The circuit breaker's power contacts are isolated. All of the auxiliaries remain electrically connected so that they remain functional.	
Connected	The connections on the circuit breaker are connected to the jaw contacts on the chassis. The circuit breaker is ready for operation.	





WARNING


Risk of electric shock

Make sure that the device is only operated by qualified personnel in accordance with to the installation standards in force in the relevant country.

To change from connected position to test position:

Action	Illustration
1 Check that the circuit breaker is in the connected position and the mechanical position indicator displays:	
2 Open the circuit breaker by pressing the opening	
3 Remove the racking handle from its place.	

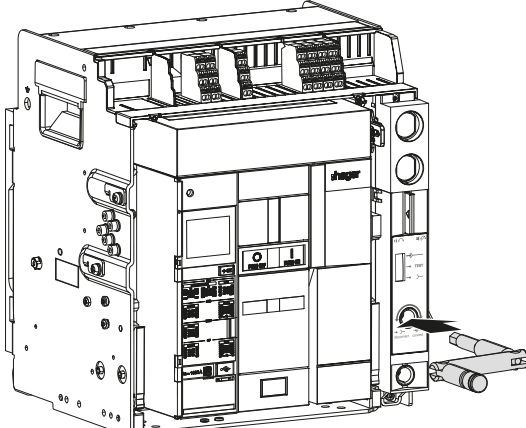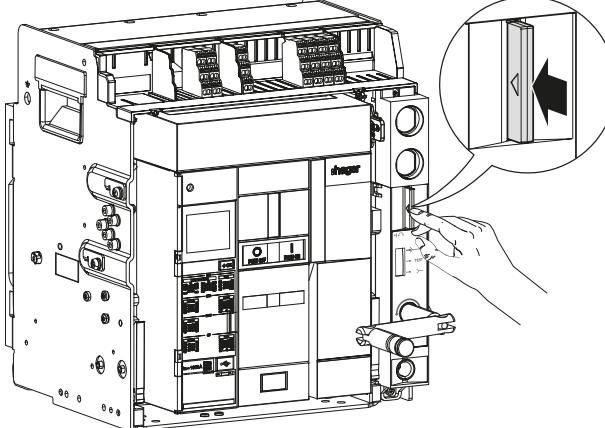Action	Illustration
4 Insert the racking handle into the racking place.	
5 Press the padlocking and position acknowledgement tab.	



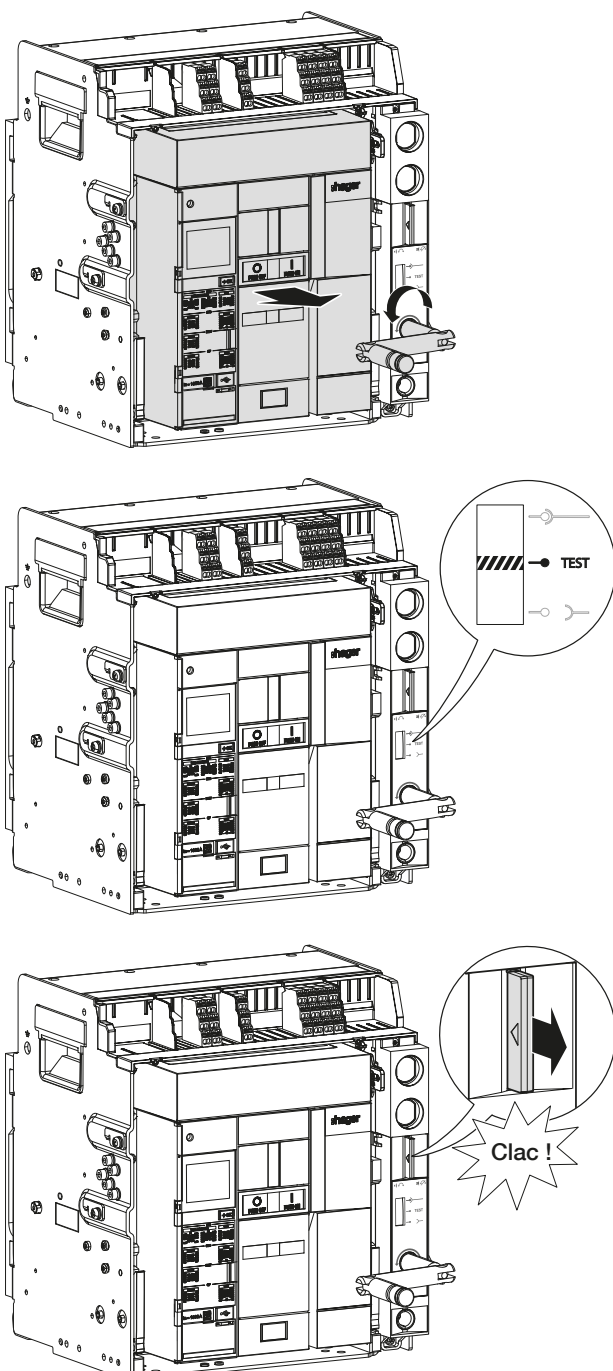
Action	Illustration
6 Turn the racking handle anti-clockwise... ... until the status indicator is displayed: and the padlocking and position acknowledgement tab comes out of its housing.	 The illustration consists of three sequential drawings of a drawout circuit breaker in a chassis. In the first drawing, the racking handle is being turned anti-clockwise. In the second drawing, the status indicator (a rectangle with diagonal lines) is visible, and a callout shows the 'TEST' position. In the third drawing, the padlocking and position acknowledgement tab is extended, and a callout shows the tab moving with the sound 'Clac!'.

ATTENTION

Risk of property damage

If the chassis is not fitted in an electrical panel, ensure it is correctly fastened before changing position.

To change from test position to disconnected position:

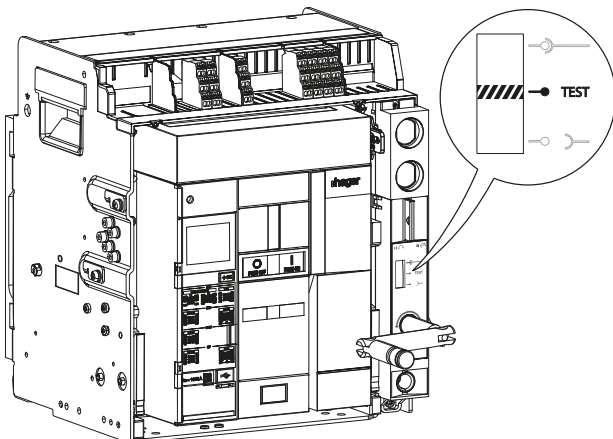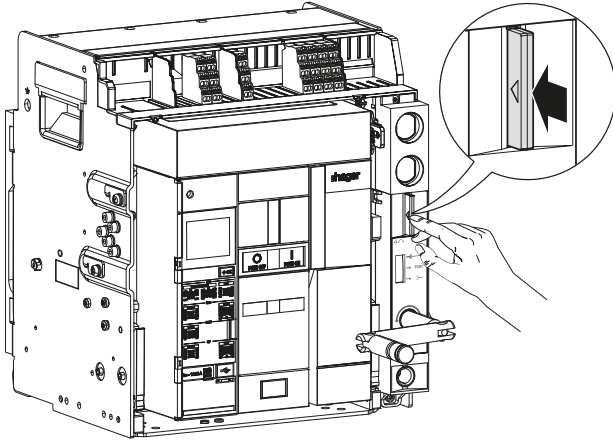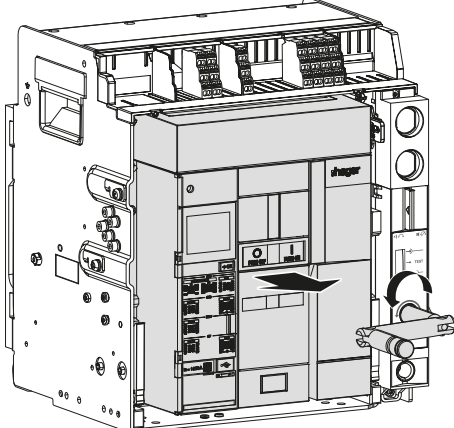Action	Illustration
1 Check that the circuit breaker is in the test position and the mechanical position indicator displays:	
2 Press the padlocking and position acknowledgement tab.	
3 Turn the racking handle anti-clockwise...	

Action	Illustration
3 ... until the status indicator is displayed: and the padlocking and position acknowledgement tab comes out of its housing.	
4 Remove the racking handle.	
5 Place the racking handle back in its place.	







WARNING

Risk of electric shock




Make sure that the device is only operated by qualified personnel in accordance with to the installation standards in force in the relevant country.

To change from disconnected position to test position:

Action	Illustration
1 Verify that the circuit breaker is in the disconnected position and that the mechanical position indicator displays:	
2 Remove the racking handle from its place.	
3 Insert the racking handle into the hole.	

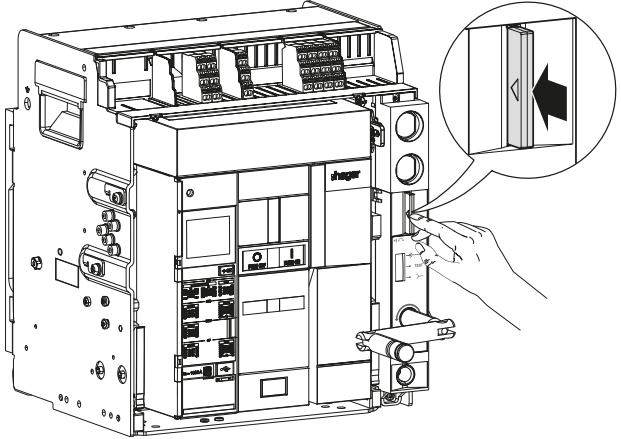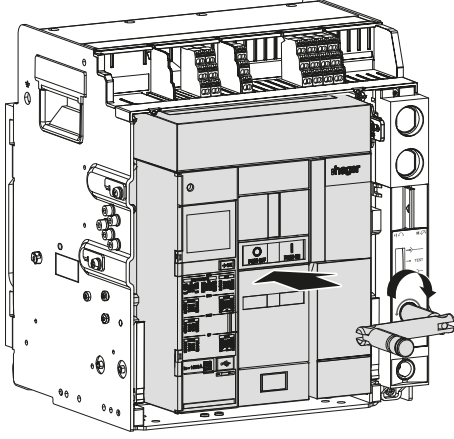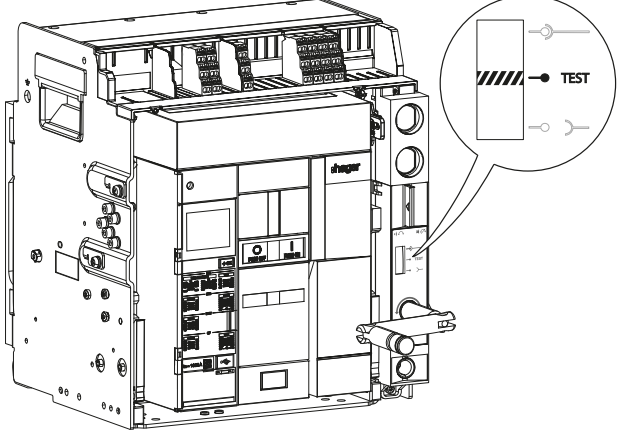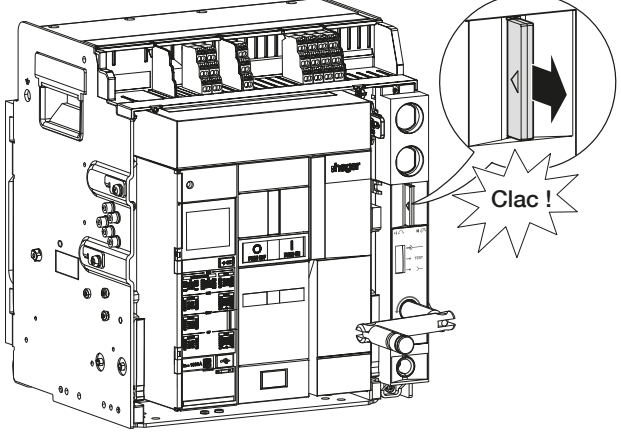Action	Illustration
4 Press the padlocking and position acknowledgement tab.	
5 Turn the racking handle clockwise...	
... until the status indicator is displayed:	
and the padlocking and position acknowledgement tab comes out of its housing.	

To change from test position to connected position:

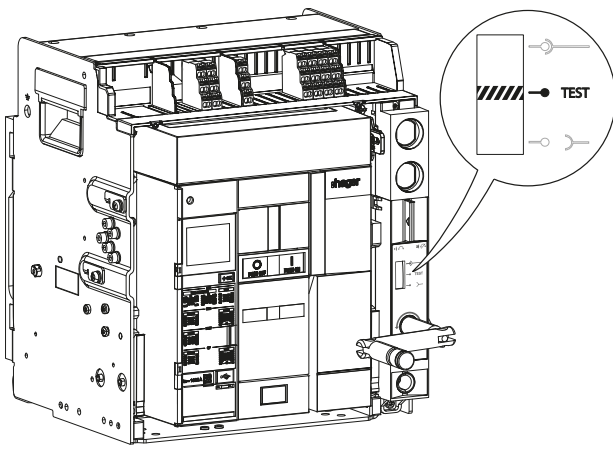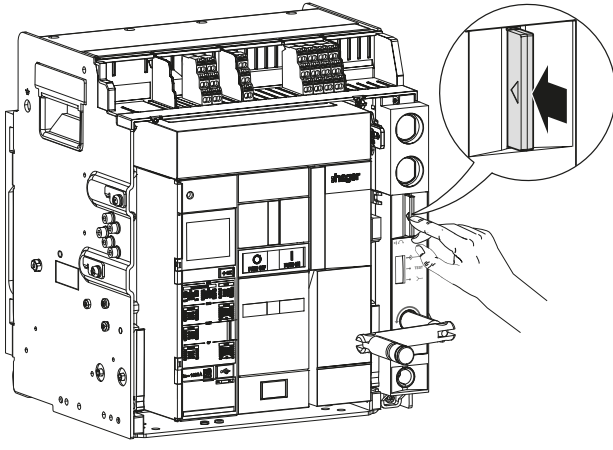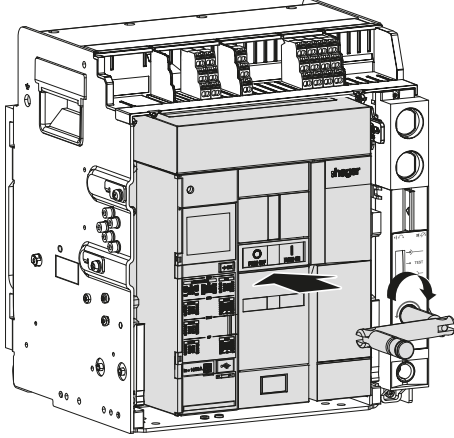Action	Illustration
1 Check that the circuit breaker is in the test position and the mechanical position indicator displays:	
2 Press the padlocking and position acknowledgement tab.	
3 Turn the racking handle clockwise...	

Action	Illustration
3 ... until the status indicator is displayed: and the padlocking and position acknowledgement tab comes out of its housing.	
4 Remove the racking handle.	
5 Place the racking handle back in its place.	




CAUTION

Risk of the circuit breaker falling out

Risk of injury by crushing.

Before handling the circuit breaker, ensure the chassis is fastened within the electrical distribution board. Ensure the device is only handled by qualified personnel equipped with lifting equipment and suitable safety equipment.

Action	Illustration
1 Check that the circuit breaker is in the disconnected position (cf. Chapters 8.1 Changing from the connected position to the test position and 8.2 Changing from the test position to the disconnected position).	
2 The circuit breaker remains in the chassis in the disconnected position. Pull the guide rails as far as possible while holding the upper part of the circuit breaker.	
3 Slide the circuit breaker from the chassis on its guide rails.	

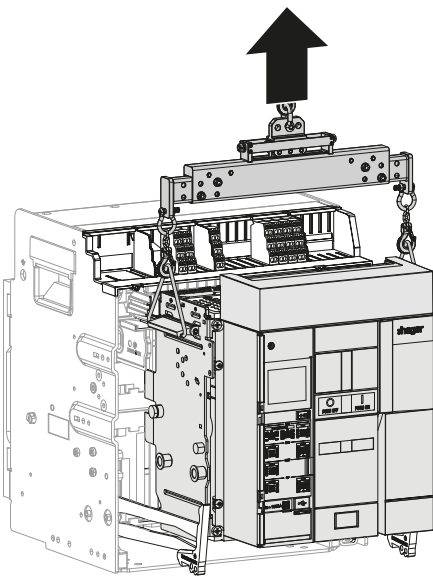Action	Illustration
4 Remove the circuit breaker from the guide rails (see Chapter 14.2 Handling drawout circuit breakers).	 A technical line drawing of an electrical cabinet with its front door open. Inside, a circuit breaker is being lifted out of its slot. A crane with a hook is attached to the top of the circuit breaker, and a large black arrow points upwards from the crane, indicating the direction of removal. The circuit breaker is shown partially detached from the guide rails.









CAUTION

Risk of the circuit breaker falling out


Risk of injury by crushing.

Before handling the circuit breaker, ensure the chassis is fastened within the electrical distribution board. Ensure the device is only handled by qualified personnel equipped with lifting equipment and suitable safety equipment.

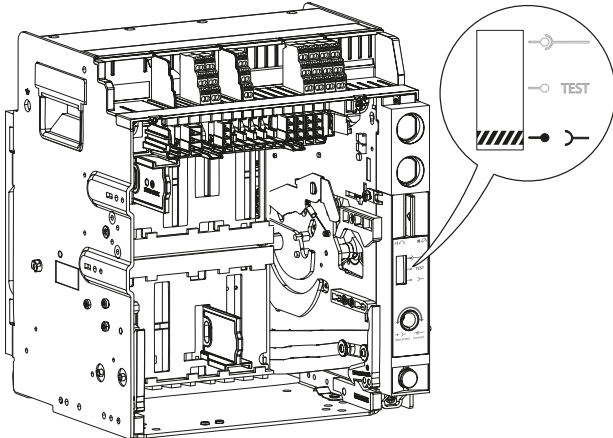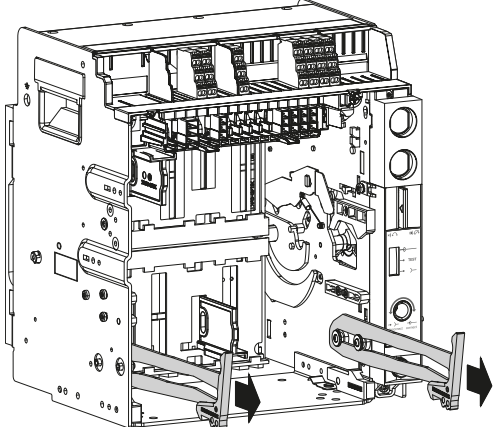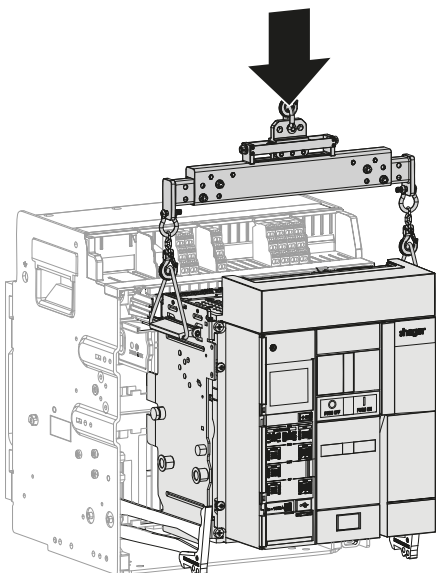Action	Illustration
1 Check that the chassis is in the disconnected position.	
2 Pull the guide rails as far as possible.	
3 Using suitable lifting equipment, position the circuit breaker on the guide rails.	

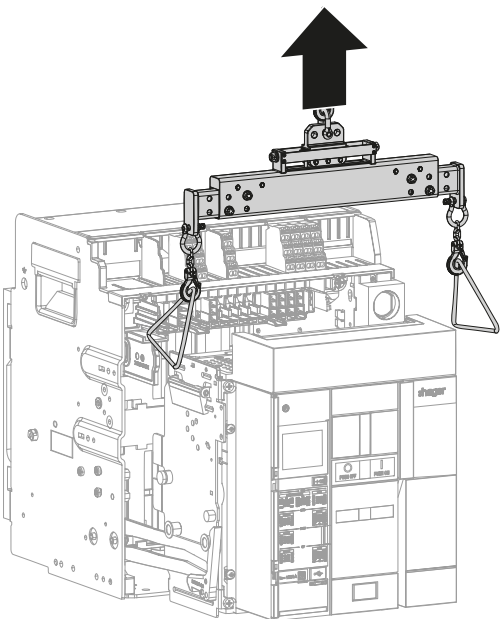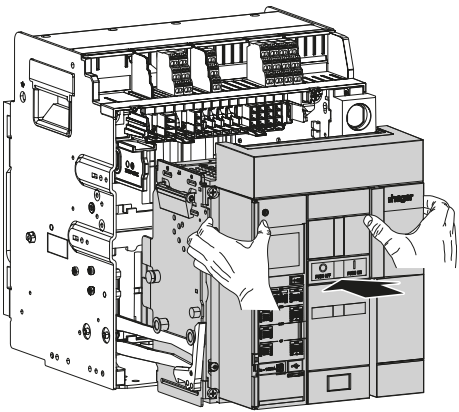
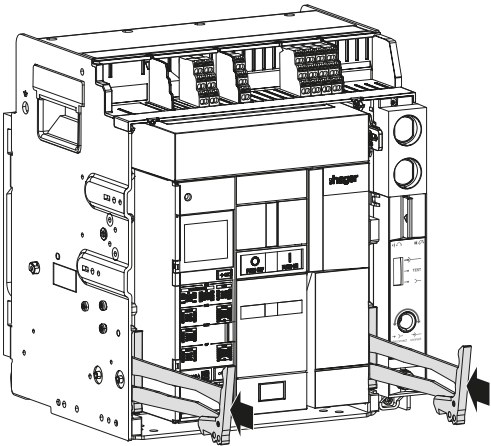
Action	Illustration
4 Remove the lifting equipment.	
5 Push the circuit breaker to the back of the chassis without pushing on the guide rails.	
6 Push the guide rails to the back of the chassis.	

Use a pallet truck to move the hw+ transport box.


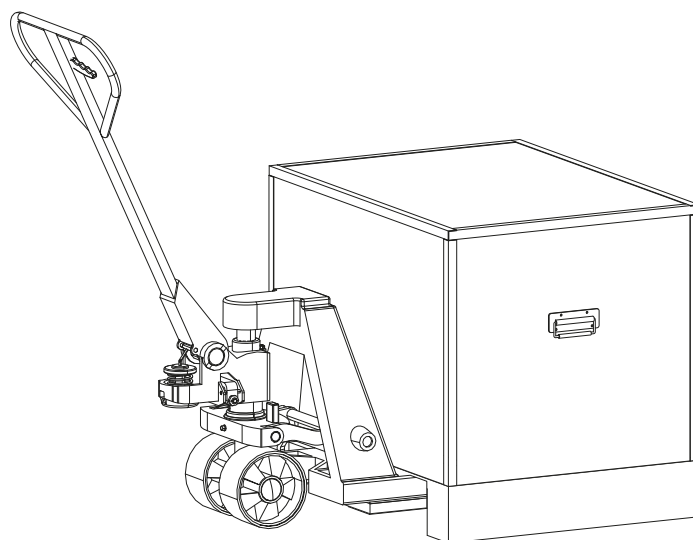


Store the circuit breaker:

- in its original transport box,

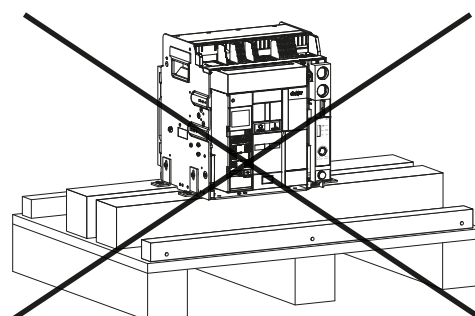
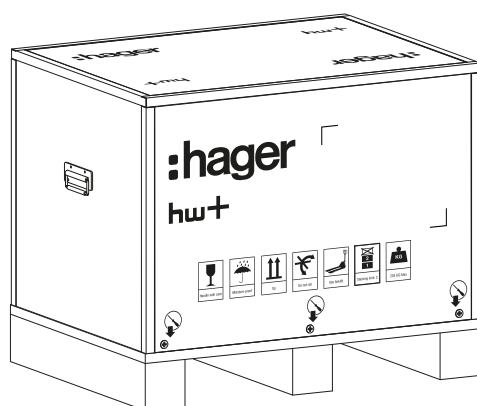


- indoors only

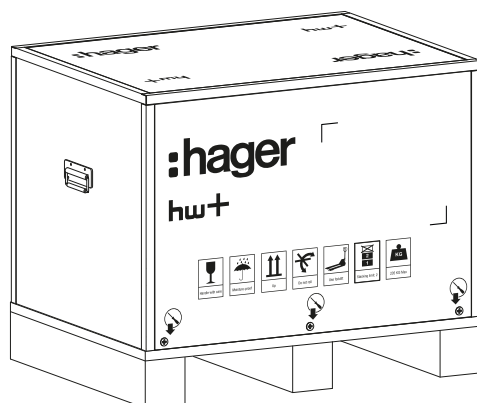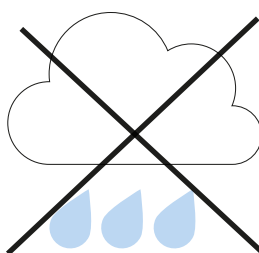

- At a temperature between -40 °C and 70 °C.
- In an environment as described in chapter **Circuit breaker operating conditions.**

Do not store more than two circuit breakers in their original packaging one on top of the other.

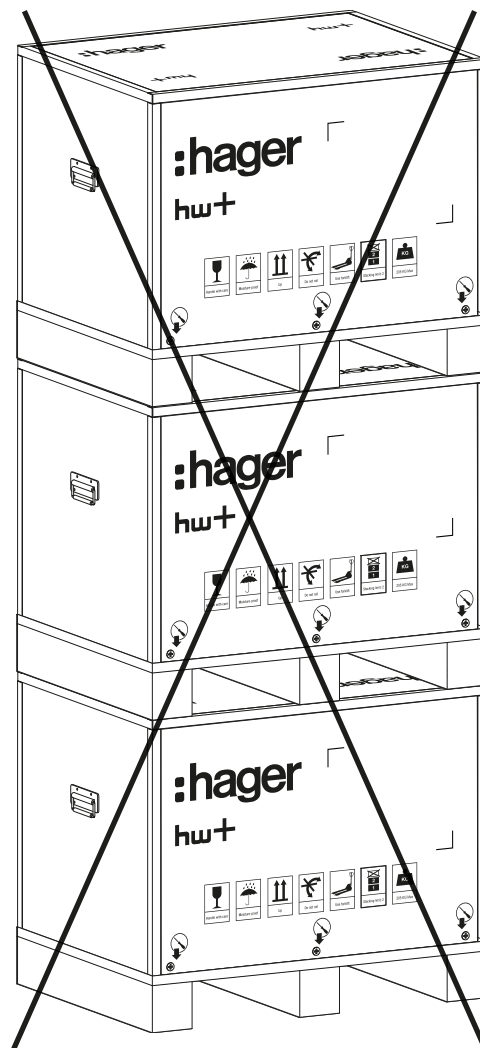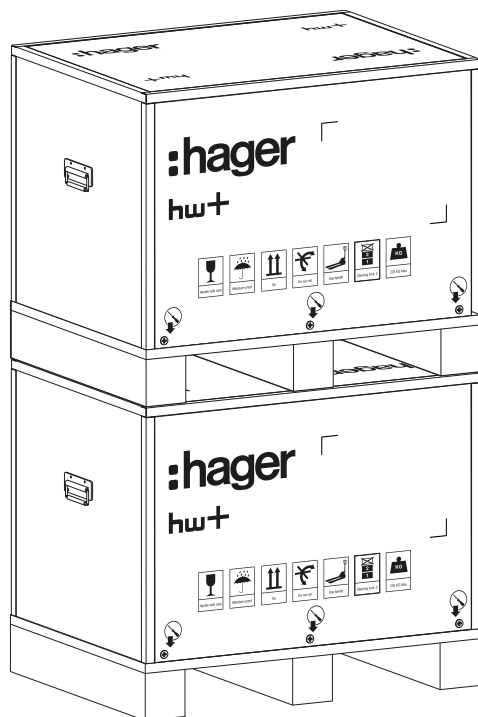


HW1 air circuit breakers can be identified by means of the various labels affixed to the product or packaging.

ATTENTION

For more information on the codification and the references indicated on the labels, refer to the Technical Catalogue 6LE007334A.


Drawout circuit breaker

Fixed circuit breaker

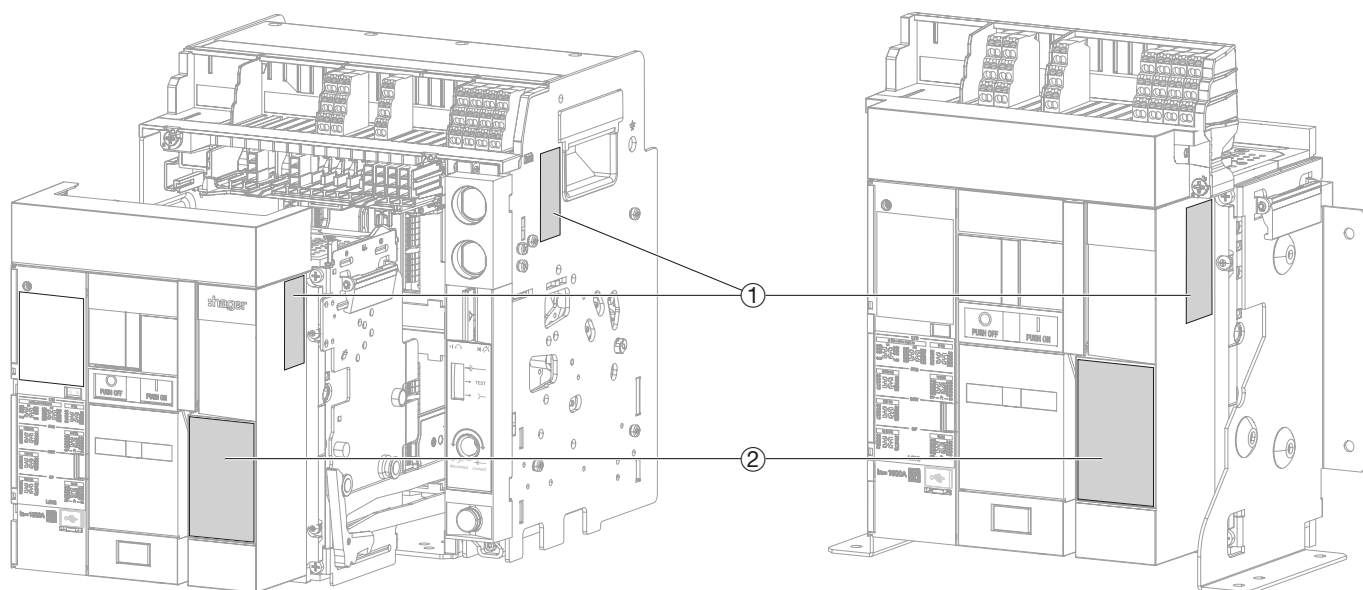

Chassis only

Packaging

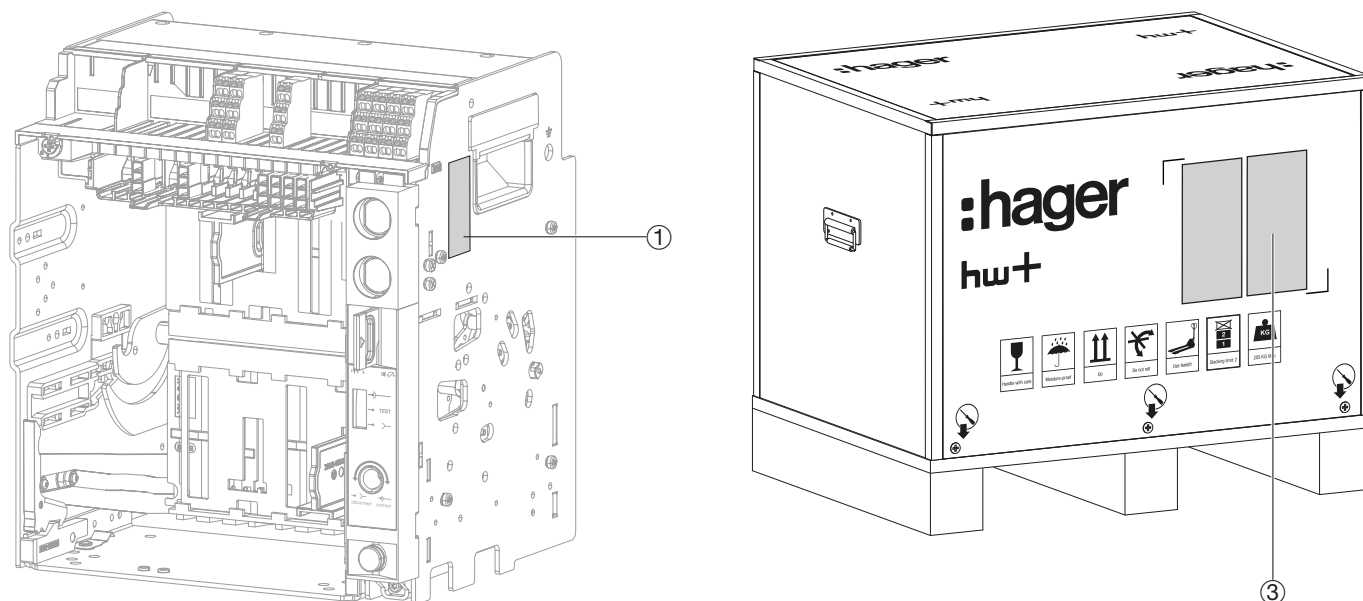

① Identification label on the circuit breaker and the chassis

② Circuit breaker rating label

③ Identification label on the packaging

Identification label on the circuit breaker and the chassis

①

②

③

④

HW1M416DB

ACB HW1 55kA 1600A 4P DO sentinel

HW1C4EH CHA 4P

HWY045H FC UP

HWY045H FC DWN

HWW452H TU LSIG

HWW464H In 1600A

HWX004H MO 250V AC

HWX060H CC 200-250V AC

HWX023H SH SH1/UV2 200-250V AC

HWX033H UV UV1/SH2 200-250V AC

HWX040H AX

HWX091H RTC

HWX090H OAC

HWX050H FS

HW1M416DB3AAAAAA0AAAA0AA0A00

SO00000025689

C0000001


Hager Electro SAS

BP3 - 67215 OBERNAI


CEDEX - FRANCE

- ① Circuit breaker reference
- ② Circuit breaker designation
- ③ List of accessories mounted
- ④ Configuration identifier

Circuit breaker technical description label

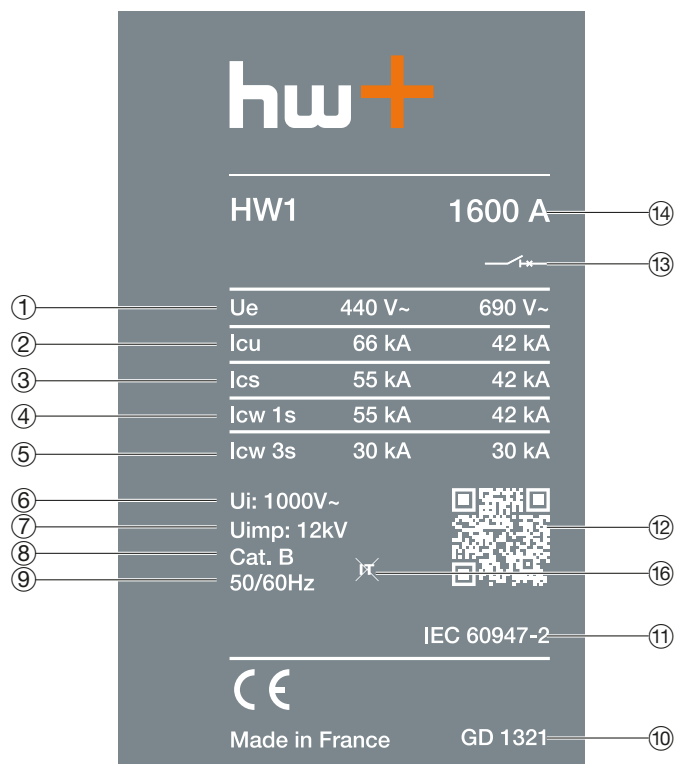

Switch-disconnector technical description label

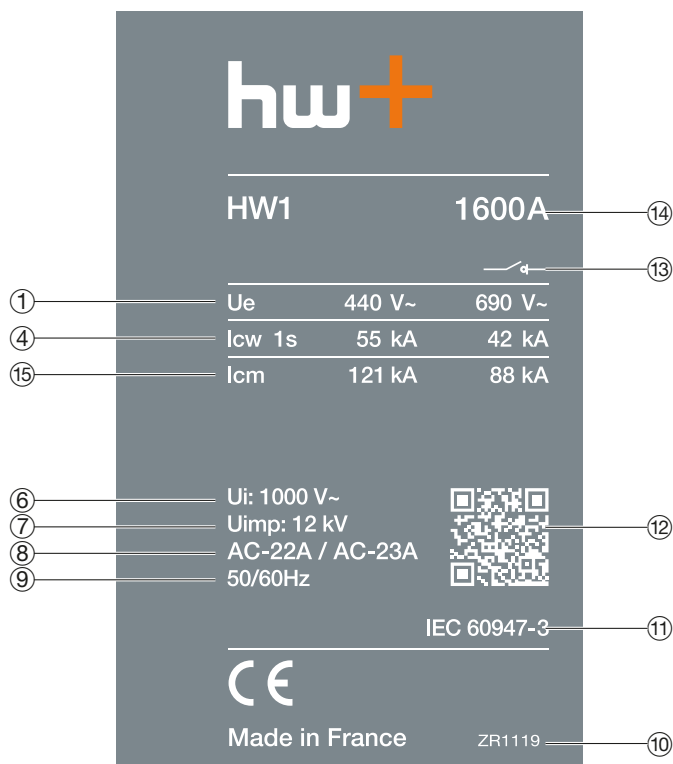

- ① Ue: Operating voltage
- ② Icu: Rated ultimate short-circuit breaking capacity at the rated operating voltage Ue
- ③ Ics: Rated operational short-circuit breaking capacity
- ④ Icw 1 s: Rated short-time withstand current for 1 second
- ⑤ Icw 3s: Rated short-time withstand current for 3 seconds
- ⑥ Ui: Rated insulation voltage
- ⑦ Uimp: Rated impulse withstand voltage
- ⑧ Category
- ⑨ Frequency
- ⑩ Manufacturing date code
- ⑪ Standards
- ⑫ QR code to access the documentation online
- ⑬ Symbol of a circuit breaker suitable for isolation or symbol of a switch-disconnector
- ⑭ Maximum rating of the circuit breaker
- ⑮ Icm: Rated short-circuit making capacity
- ⑯ Not suitable for protection in an IT earthing system


	:hager DISJONCTEUR OUVERT AIR CIRCUIT BREAKER OFFENER LEISTUNFSSCHALTER	HW1 Sentinel 1600 A 4 P D/O 55/55 kA 440 VAC 50-60 Hz Made in France
①	1110557286 Pos. 00000 HW1M416DB2VCAD00C1ACA111AAA	
②	CE hw+ Hager Electro SAS-BP3-67215 OBERNAI CEDEX-FRANCE HW1M416DB 1x	

- | | | | | |
|---|---|---|----------------------------|--|
|  | |  | | 6 |
| ③ | - HW1C4EH | | CHASSIS HW1 4P | |
| | - HWY041H | TOP | TERMINAL CONNECTION FC | |
| | - HWY041H | DWN | TERMINAL CONNECTION FC | |
| | - HWY241H | | INTERPHASE BARRIERS HW1 4P | |
| | - HWW451H | | OCR SENTINEL LSI | |
| | - HWW468H | | RATING PLUG 1250A | |
| | - HWX023H | SH1/UV2 | SH 200-250V AC | |
| | - HWX033H | SH2/UV1 | UV 200-250V AC | |
| | - HWX028H | | CLOSING COIL 200-250V AC | |
| | - HWX040H | 4x--1x | SWITCH AX | |
| | - HWX090H | | OAC | |
| | - HWX070H | | ON/OFF CYCLE COUNTER | |
| | - HWX091H | | READY TO CLOSE CONTACT | |
| | - HWY090H | | PUSH BUTTON COVER | |
| | - HWY238H | | RACKING INTERLOCK | |
| - HWY260H | | OFF LOCKING KEY ADAPTOR ... | | |
| - HWY701 | | RONIS KEY LOCK TYPE 1 ... | | |
| - HWX050H | 5x | POSITION SWITCHES (PS) | | |
| - ... | | | | |
| Made in France | | | | |
| ④ | HW1M416DB2VCAD00C1ACA111AAA | | | 1110557286 Pos. 000001
 |
| | Hager Electro SAS-BP3-67215 OBERNAI CEDEX-FRANCE | | | |
| HW1M416DB | | 
3 250613 1236502 | | |

Remove the product from its case following the procedure below:

Action	Illustration
1 Remove the 6 screws (3 on each side) which hold the case on the pallet.	
2 Remove the case using the side handles.	
3 Remove the adhesive tape then open the plastic protection to gain access to the circuit breaker.	

To remove a fixed circuit breaker from its pallet, proceed as follows:

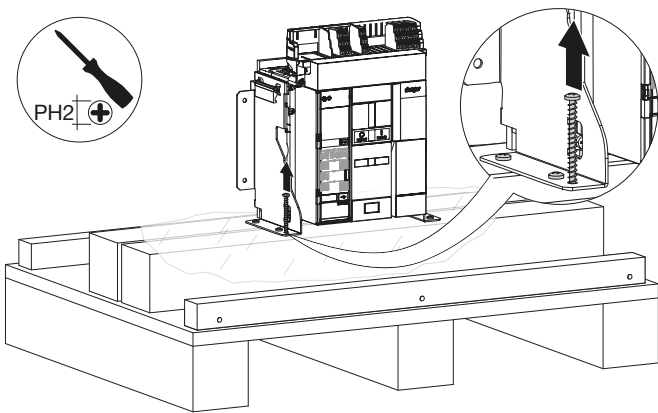Action	Illustration
1 Remove the 6 screws holding the circuit breaker in place.	



CAUTION




Risk of the circuit breaker falling out

Risk of injury by crushing.

Ensure the device is only handled by qualified personnel equipped with lifting equipment and suitable safety equipment.

To remove a withdrawable circuit breaker with chassis from its pallet, proceed as follows:

Action	Illustration
1 Put the circuit breaker in the disconnected position (see Chapters 8.1 Changing from the connected position to the test position and 8.2 Changing from the test position to the disconnected position).	
2 Pull the guide rails as far as possible.	
3 Slide the circuit breaker from the chassis on its guide rails.	

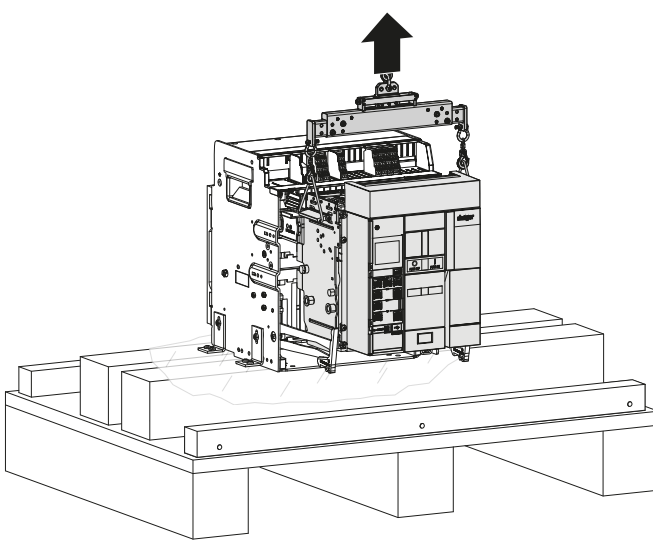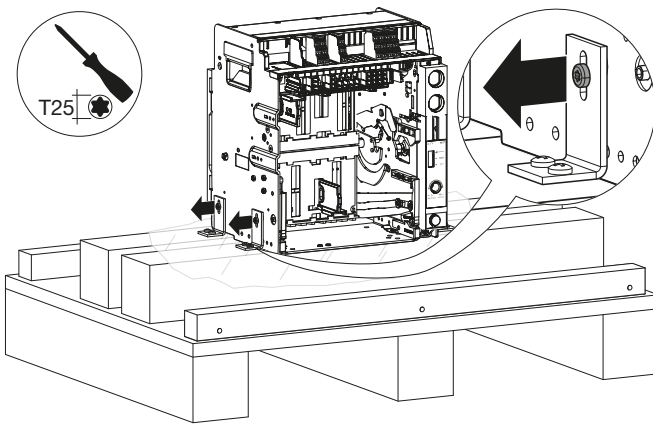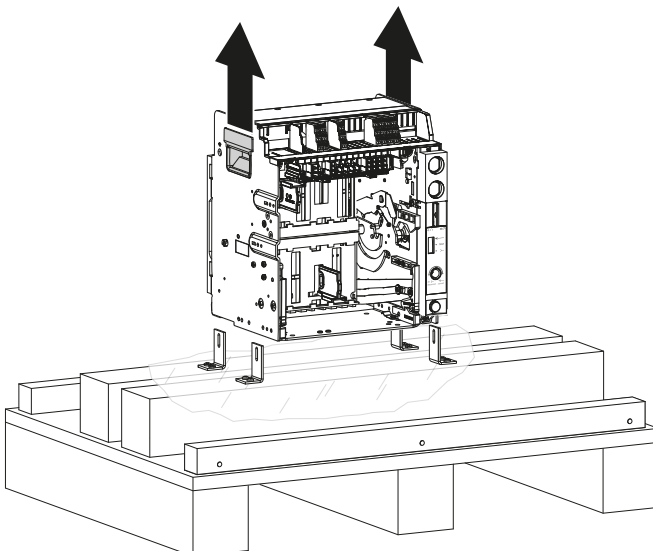Action	Illustration
4 Remove the circuit breaker from the guide rails using an appropriate lifting device.	 A technical line drawing showing a circuit breaker unit being lifted upwards from a metal rail assembly. A large black arrow points upwards from the top of the unit, indicating the direction of movement. The unit is shown in a partially disassembled state, with its internal components visible.
5 Remove the 4 screws attaching the chassis to the brackets.	 A technical line drawing showing a circuit breaker chassis being detached from its mounting brackets. A circular inset on the left shows a T25 screwdriver being used to remove a screw. A circular inset on the right shows a bracket being detached from the chassis, with a black arrow pointing left to indicate the direction of removal. The chassis is shown in a partially disassembled state, with its internal components visible.
6 Remove the chassis from the pallet using the lifting handles and placing it in an appropriate place.	 A technical line drawing showing a circuit breaker chassis being lifted upwards from a metal rail assembly. Two large black arrows point upwards from the top of the unit, indicating the direction of movement. The unit is shown in a partially disassembled state, with its internal components visible.



CAUTION

Risk of the circuit breaker falling out

Risk of injury by crushing.

Ensure the device is only handled by qualified personnel equipped with lifting equipment and suitable safety equipment.


The fixed circuit breaker, withdrawable circuit breaker and chassis have lifting handles to be used for handling.

Ensure you have a lifting system corresponding to the weight of the circuit breaker or chassis to be moved.

Weight of the HW1 circuit breakers (without accessories)


Product	Number of poles	Weight
Fixed circuit breaker	3 poles	14 kg
Withdrawable circuit breaker (without chassis)		15 kg
Chassis		13 kg
Fixed circuit breaker	4 poles	18 kg
Withdrawable circuit breaker (without chassis)		19 kg
Chassis		15 kg

Use the lifting handles on the side of the circuit breaker.

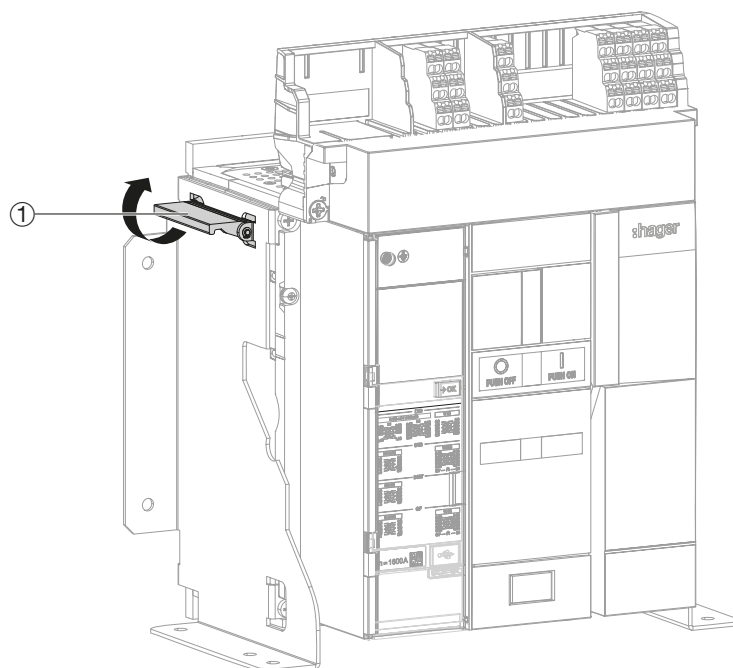


① Lifting handle

It is recommended that the circuit breaker be handled by 2 persons or that a lifting system be used.

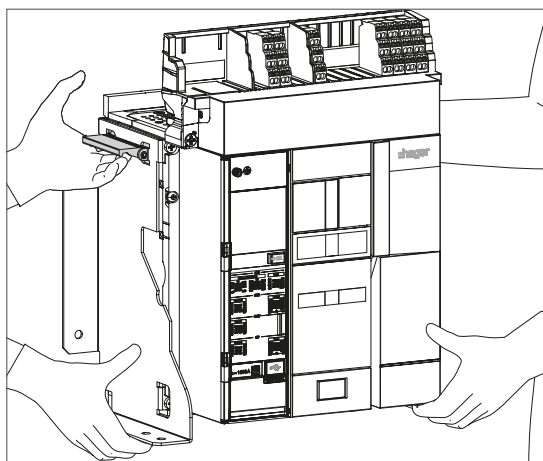

or

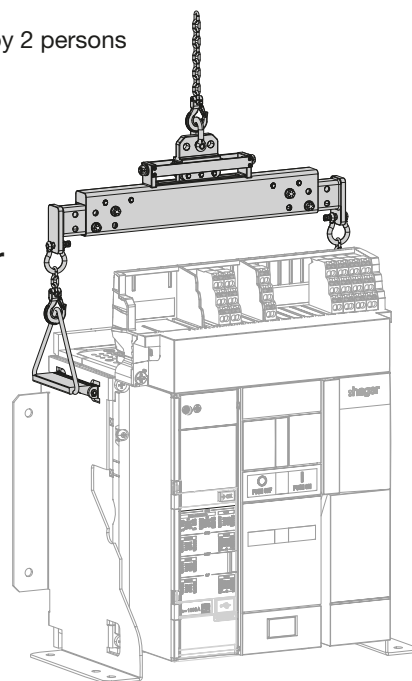

ATTENTION

Risk of property damage

Never move a withdrawable circuit breaker in its chassis. Always move the two elements separately.

ATTENTION


Risk of the circuit breaker falling out

Risk of injury by crushing.

To handle circuit breakers, wear suitable personal protective equipment (PPE).


Handling the chassis

Use the lifting handles on the side of the circuit breaker.

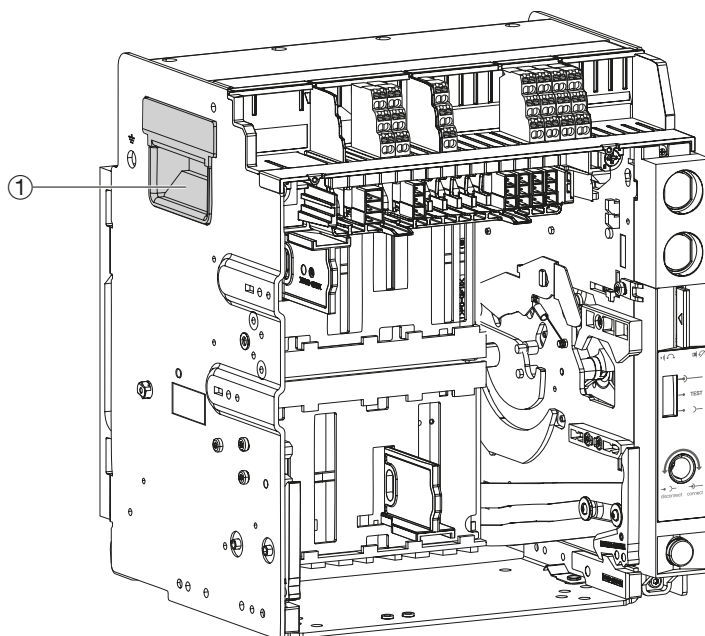


It is recommended that the chassis be handled by 2 persons or that a lifting system be used.

① Lifting handle

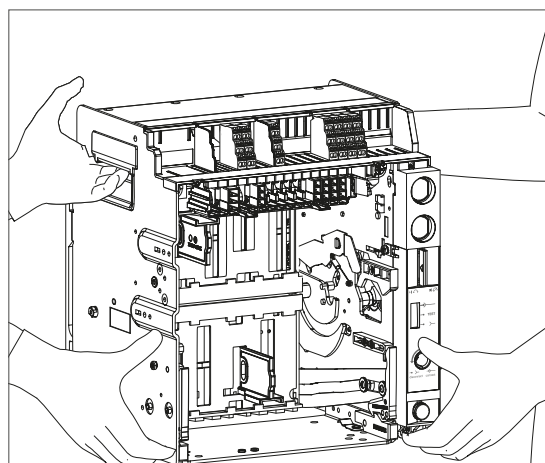


or

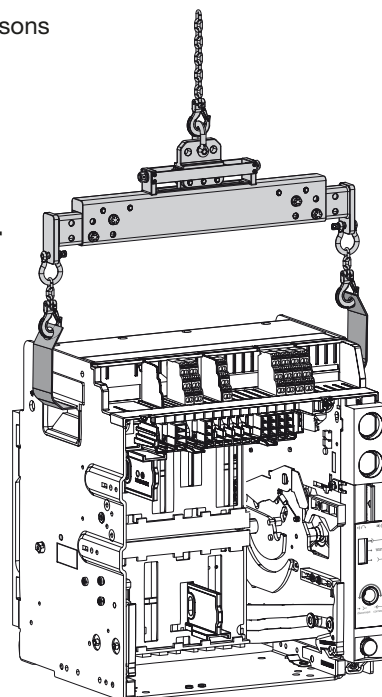



Handling the circuit breaker

Use the lifting handles on the side of the circuit breaker.

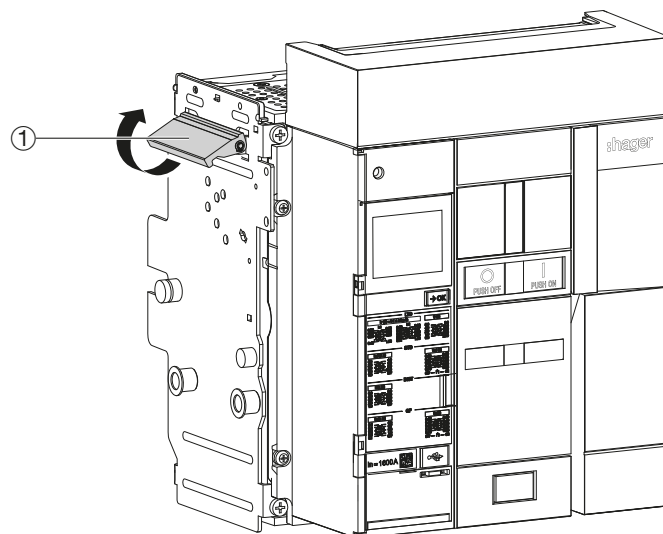


① Lifting handle

It is recommended that the circuit breaker be handled by 2 persons or that a lifting system be used.

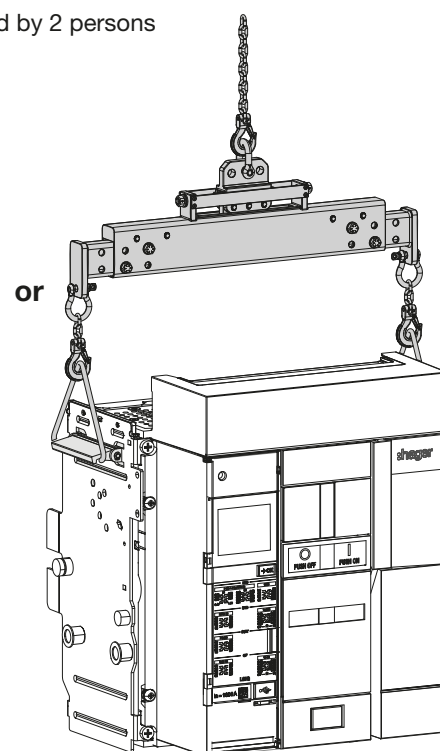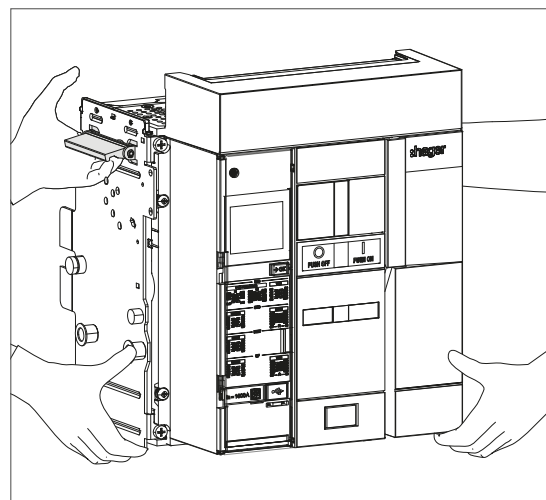


To install an HW1 circuit breaker, comply with the following dimensions for mounting:




3 poles - Fixed version

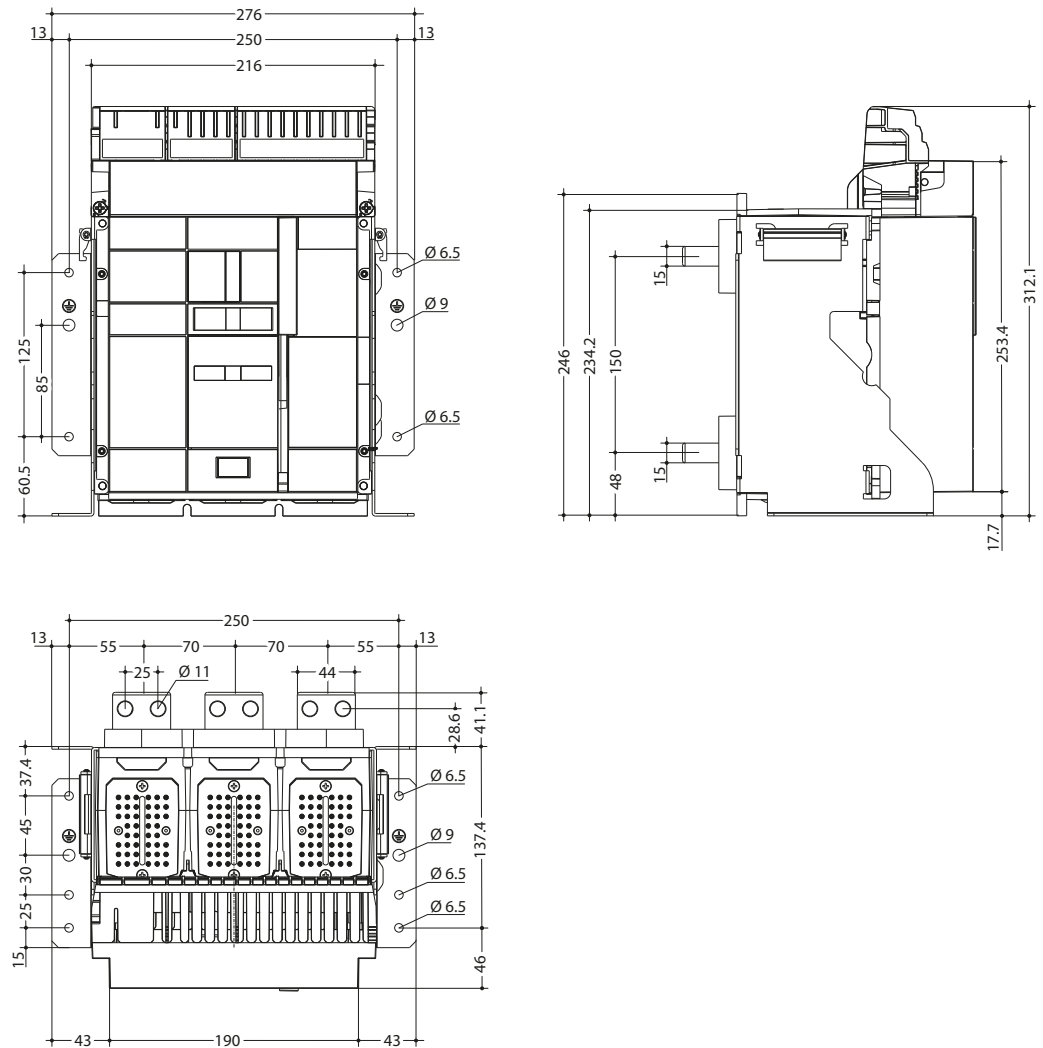


4 poles - Fixed version

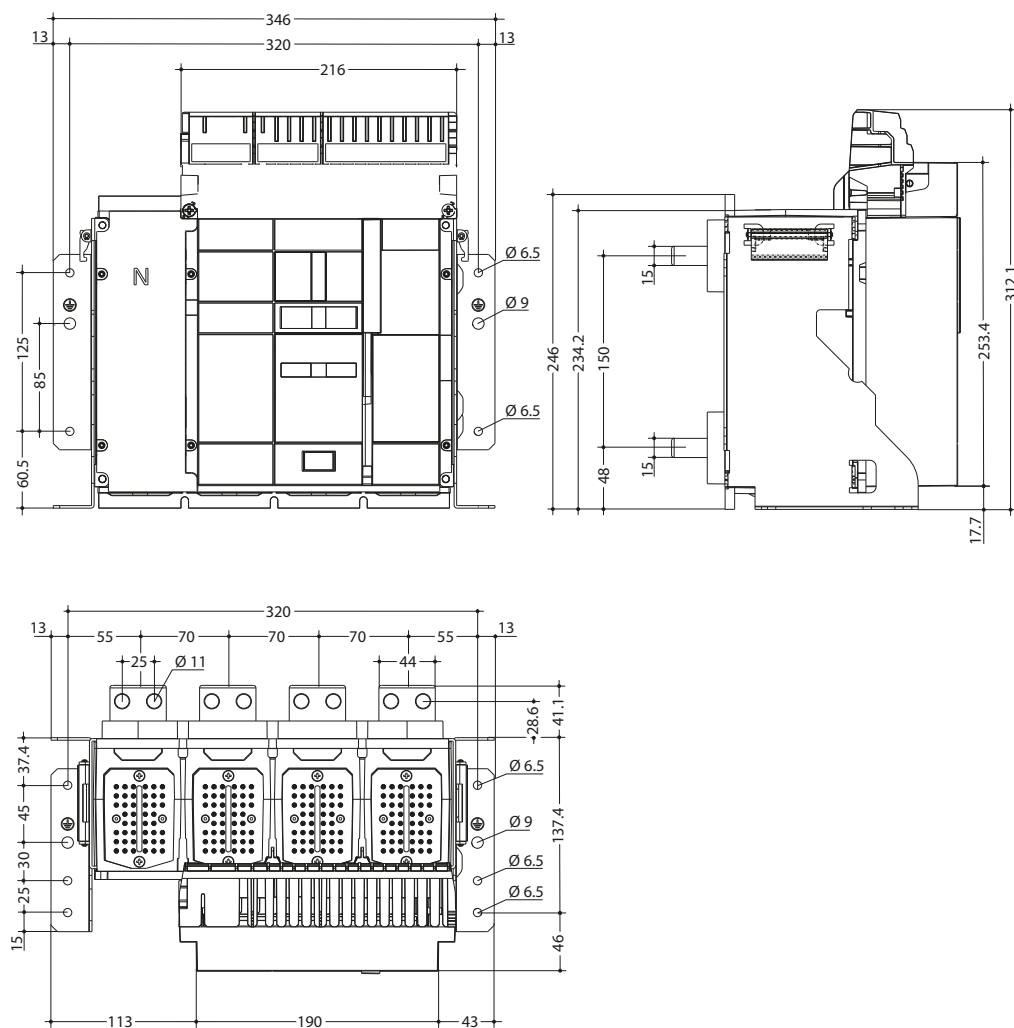


3 poles - Drawout version

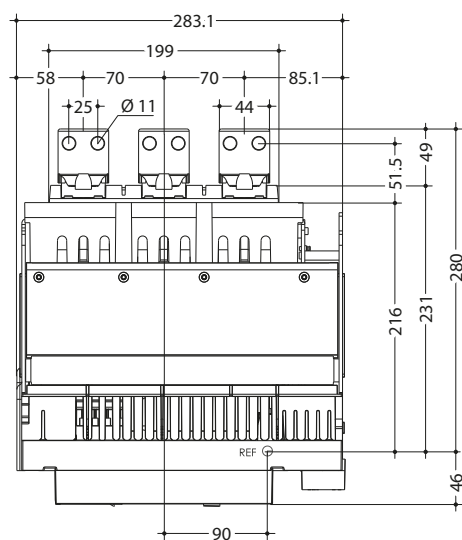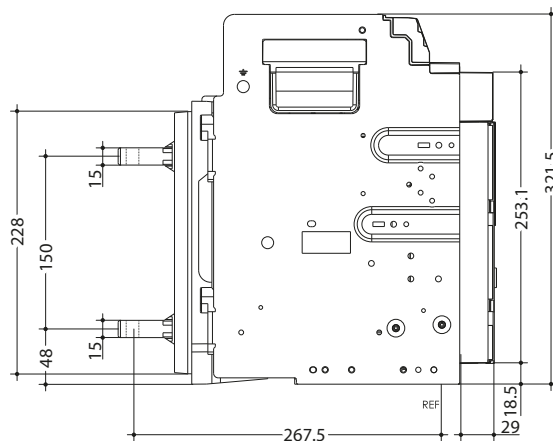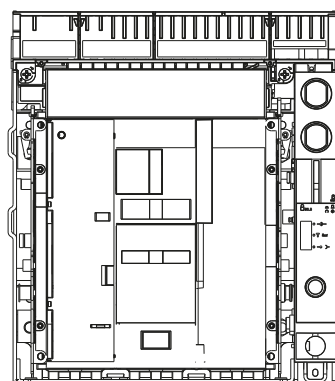

Test position

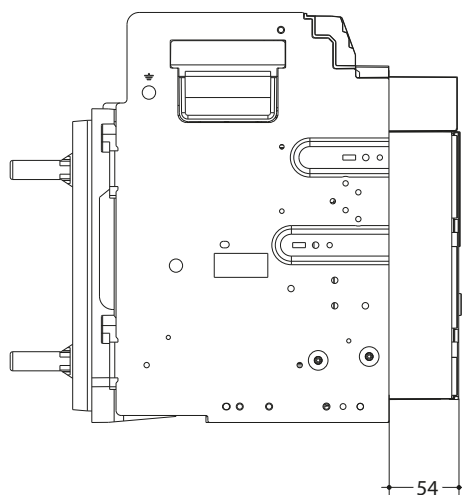


Disconnected position

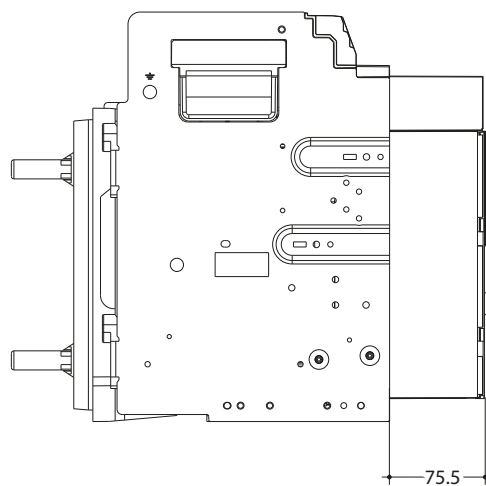


Chassis mounting


Bottom view

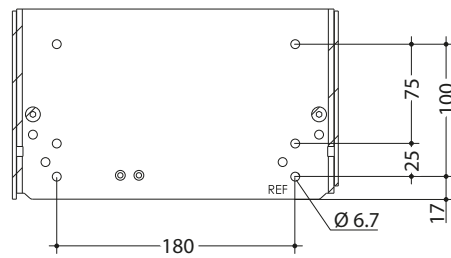


Rear view

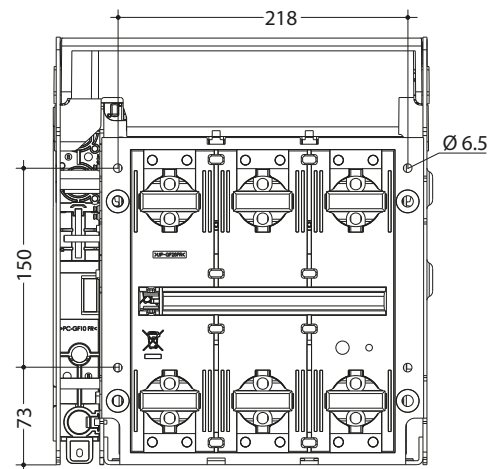


4 poles - Drawout version

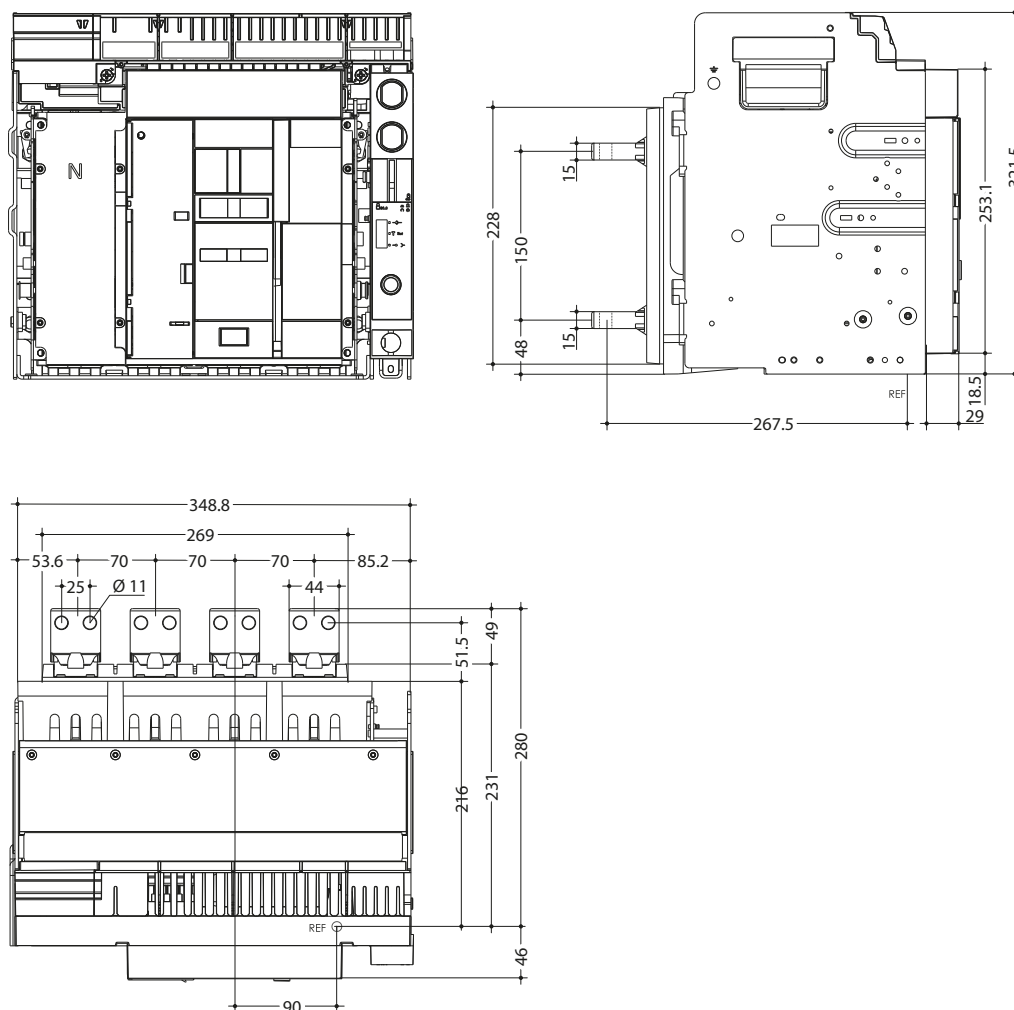

Test position

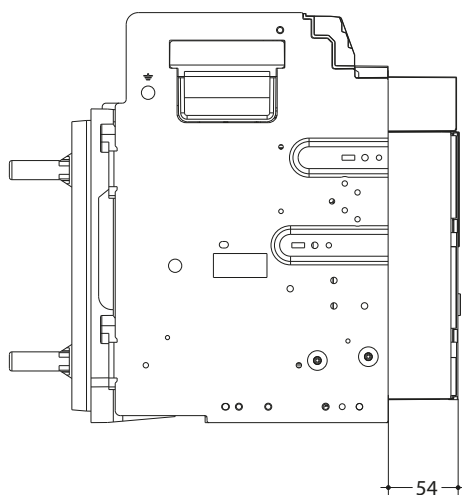


Disconnected position

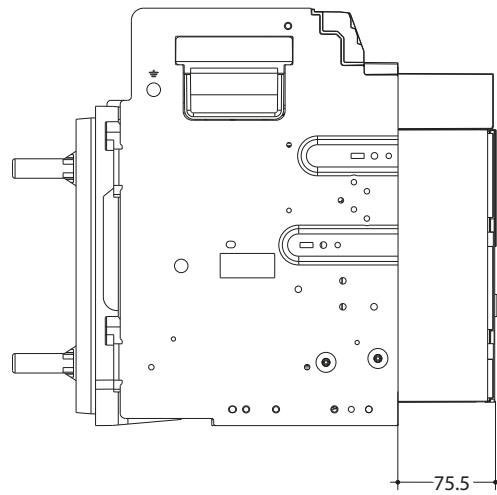


Chassis mounting

Bottom view

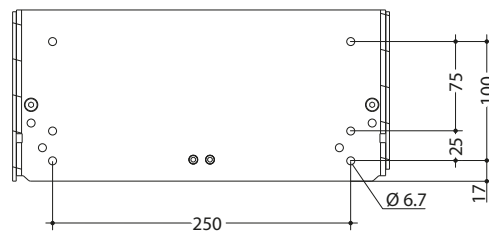


Rear view

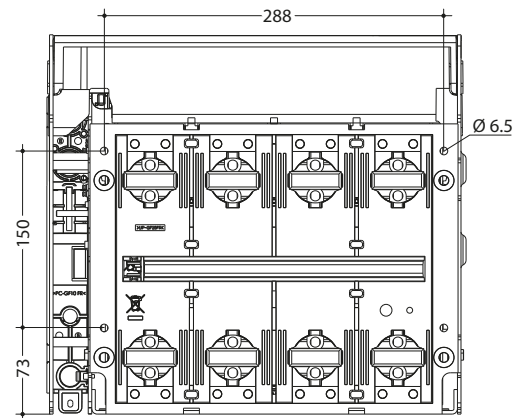

Rear horizontal RC connections

 
Side view




Rear horizontal RC connections

With SP spreaders for fixed or drawout 3-pole circuit breakers


Rear view

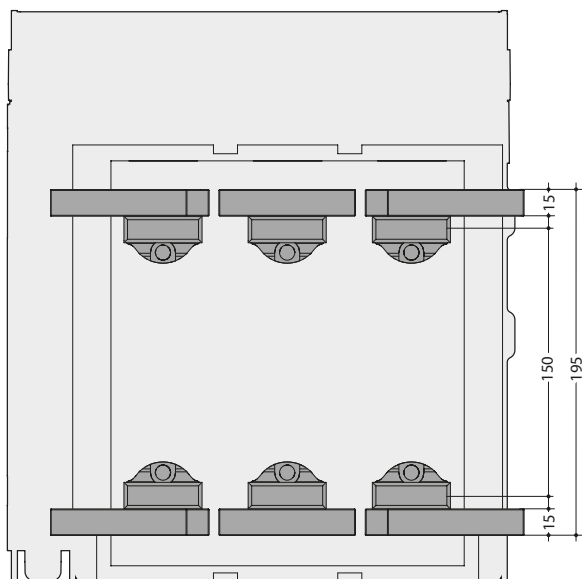

Side view

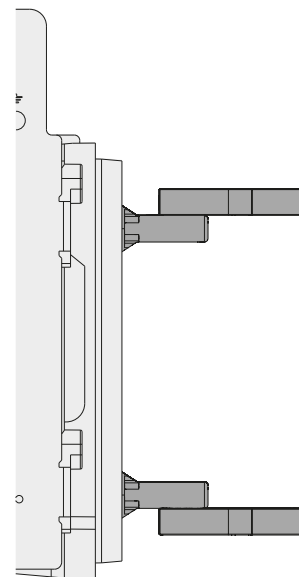

Top view

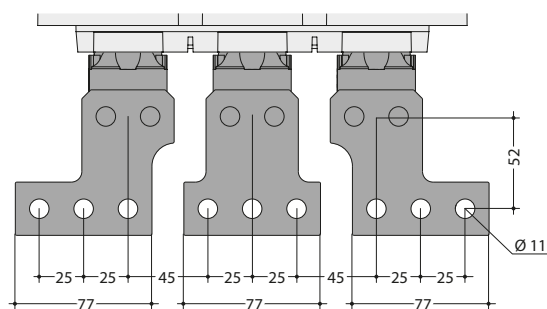


The dimensions given are valid for the fixed and drawout versions.

Rear horizontal RC connections


With SP spreaders for fixed or drawout 4-pole circuit breakers

Rear view

Side view

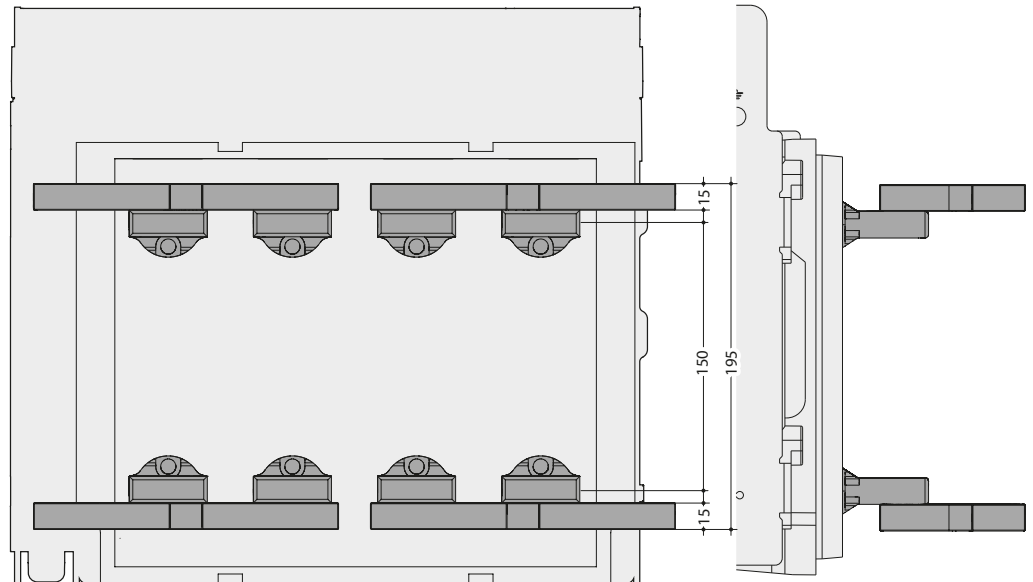

Top view

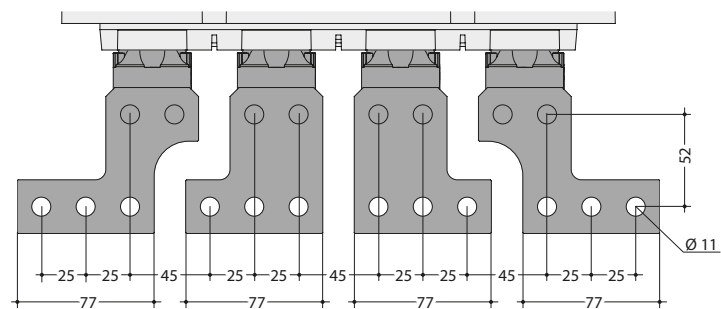


The illustration above shows a drawout version.
The dimensions given are valid for the fixed and drawout versions.

Rear horizontal RC connections


Long for UNIMES type distribution board for fixed or drawout 3-pole or 4-pole circuit breaker

Rear view

Side view

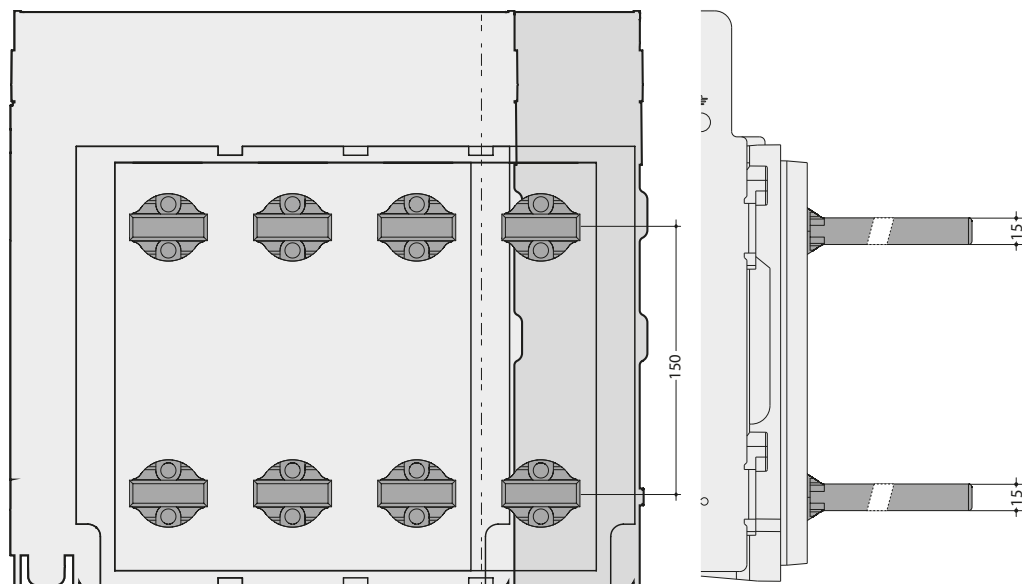

Top view

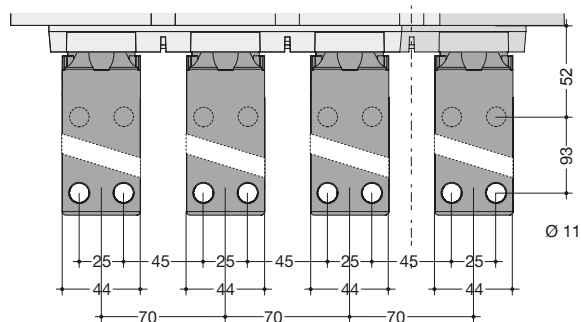


The illustration above shows a drawout version.
The dimensions given are valid for the fixed and drawout versions.


Rear vertical RC connections

For fixed or drawout 3-pole or 4-pole version


Rear view

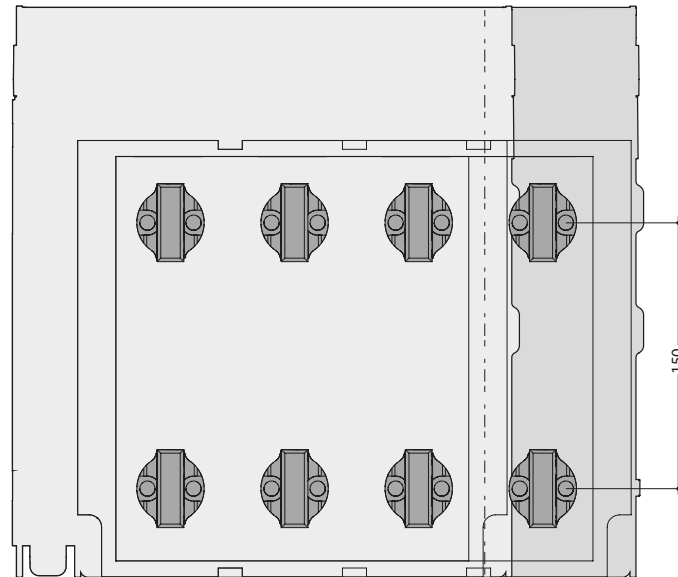

Side view

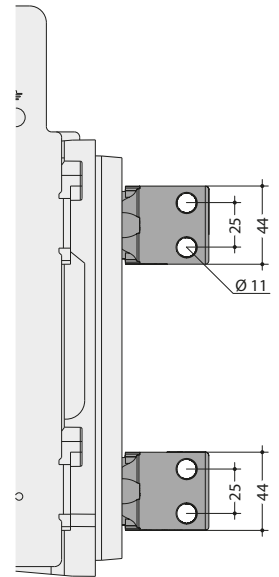

Top view

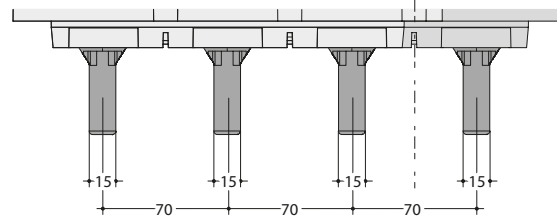


The dimensions given are valid for the fixed and withdrawable versions.

Rear vertical RC connections

Long for UNIMES type distribution board for fixed or drawout 3-pole or 4-pole circuit breaker

Rear view

Side view

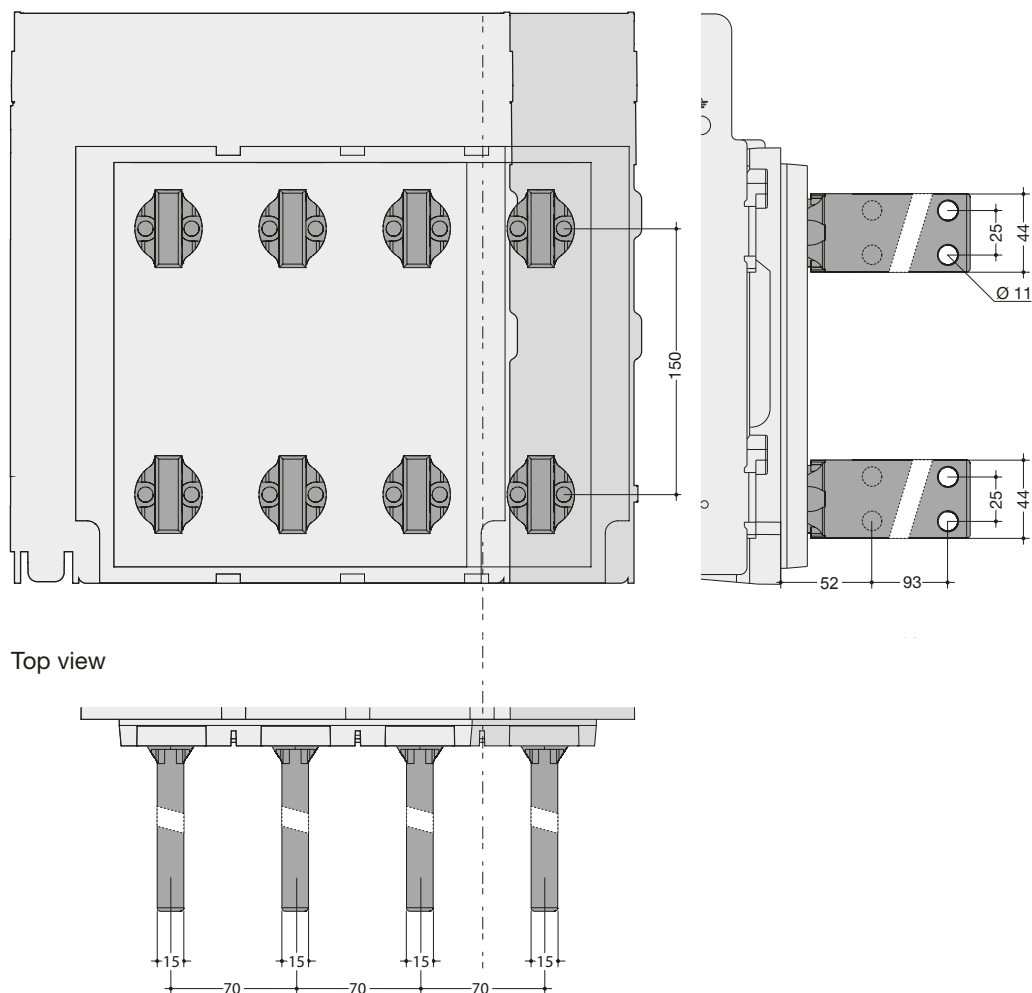

The dimensions given are valid for the fixed and withdrawable versions.

Front connections for fixed 3-pole or 4-pole circuit breaker

Side view




FC front connections

For drawout 3-pole or 4-pole circuit breaker

Rear view

Side view

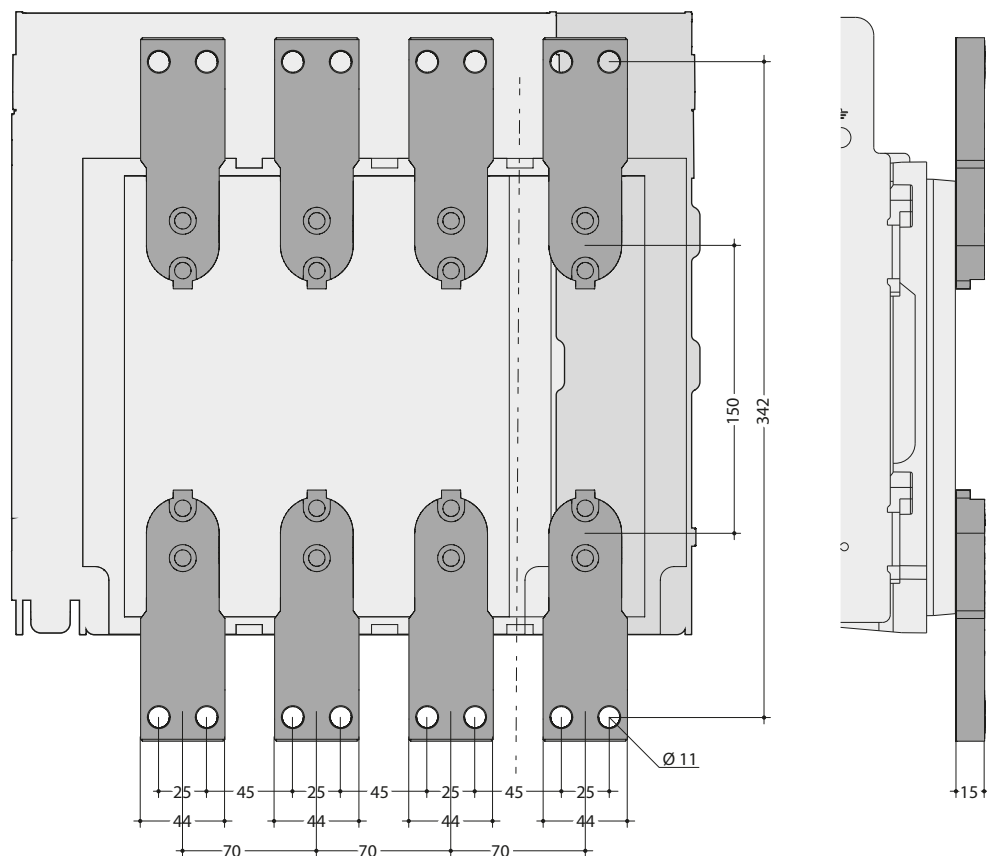


FC front connections

For drawout 3-pole or 4-pole circuit breaker with short terminal extensions in bottom position

Rear view


Side view

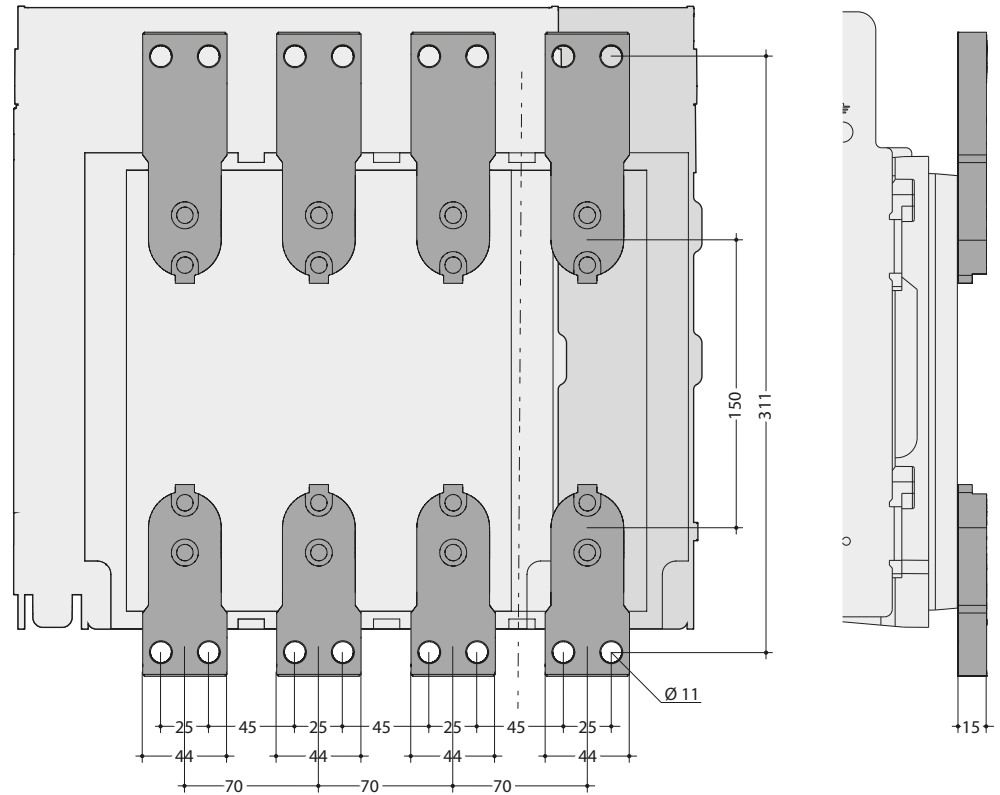


FC front connections with SP spreaders

For fixed 3 pole circuit breaker

Rear view

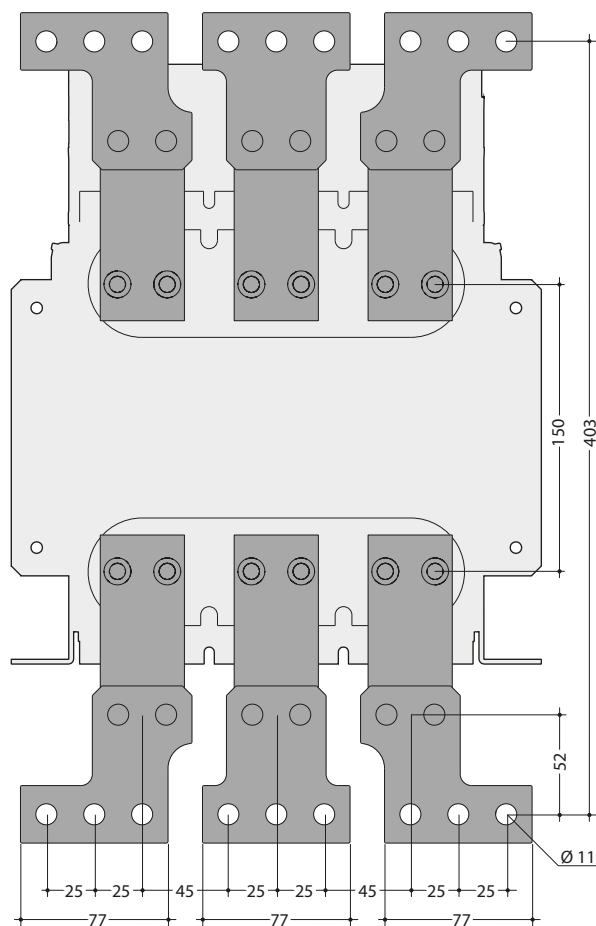


Side view

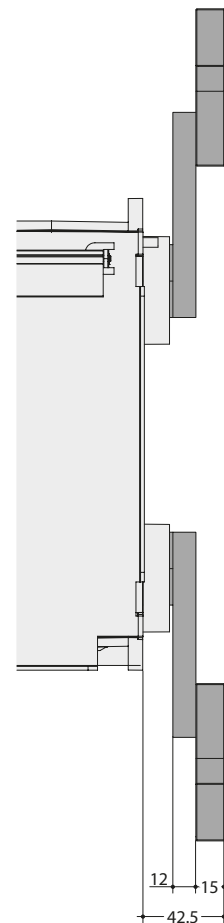


FC front connections with SP spreaders

For fixed 4 pole circuit breaker

Rear view

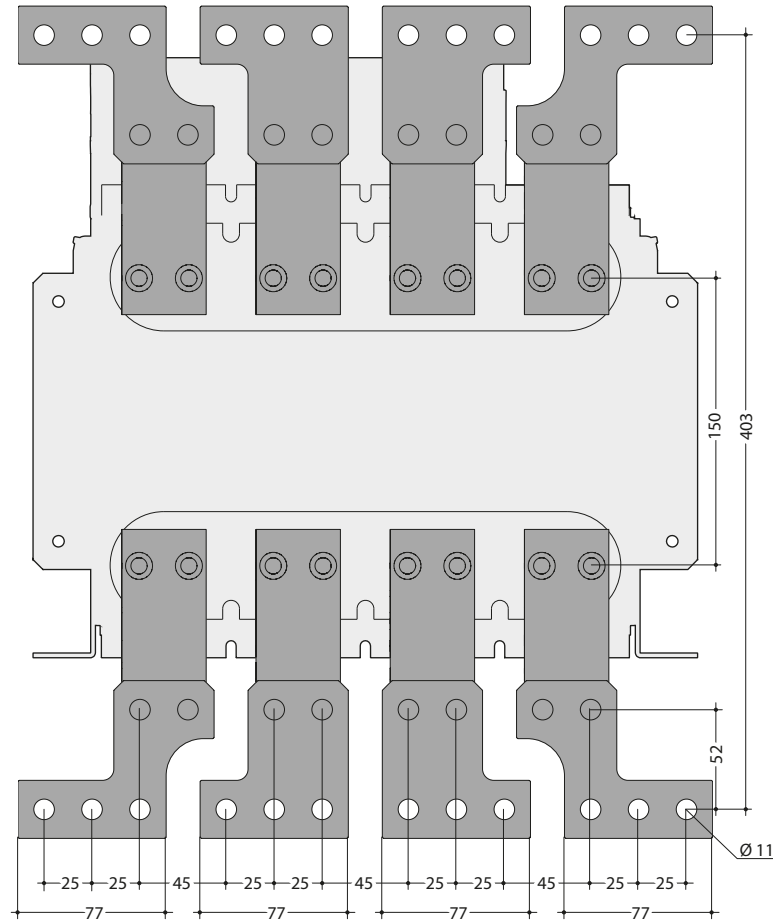


Side view

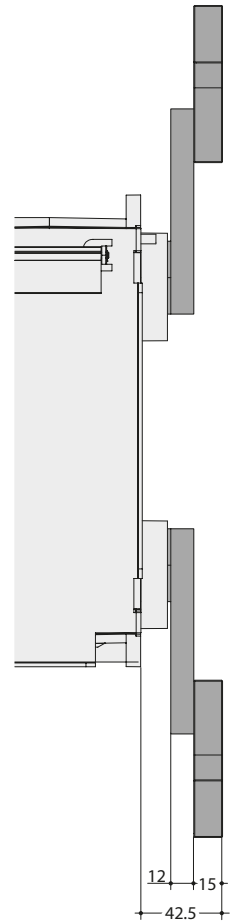


FC front connections with SP spreaders

For drawout 3 pole circuit breaker

Rear view

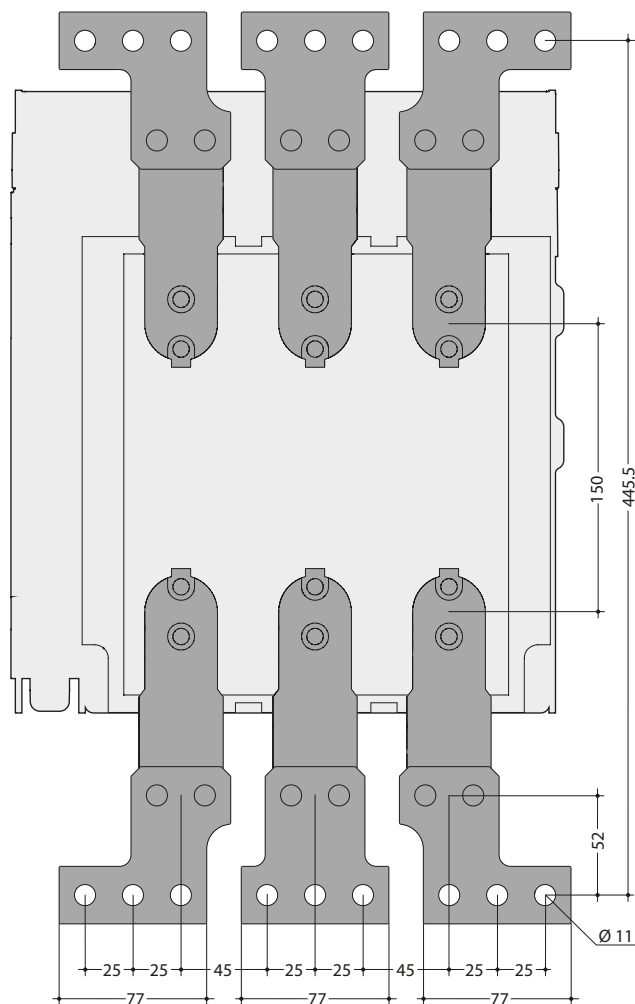


Side view

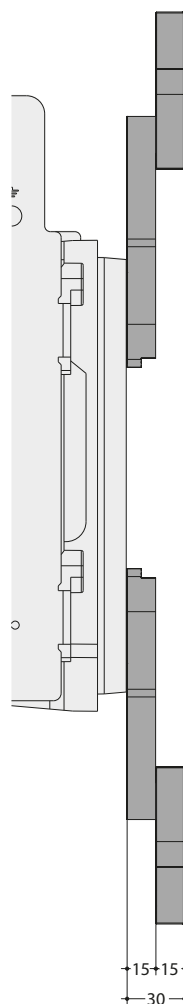


FC front connections with SP spreaders

For drawout 4 pole circuit breaker

Rear view

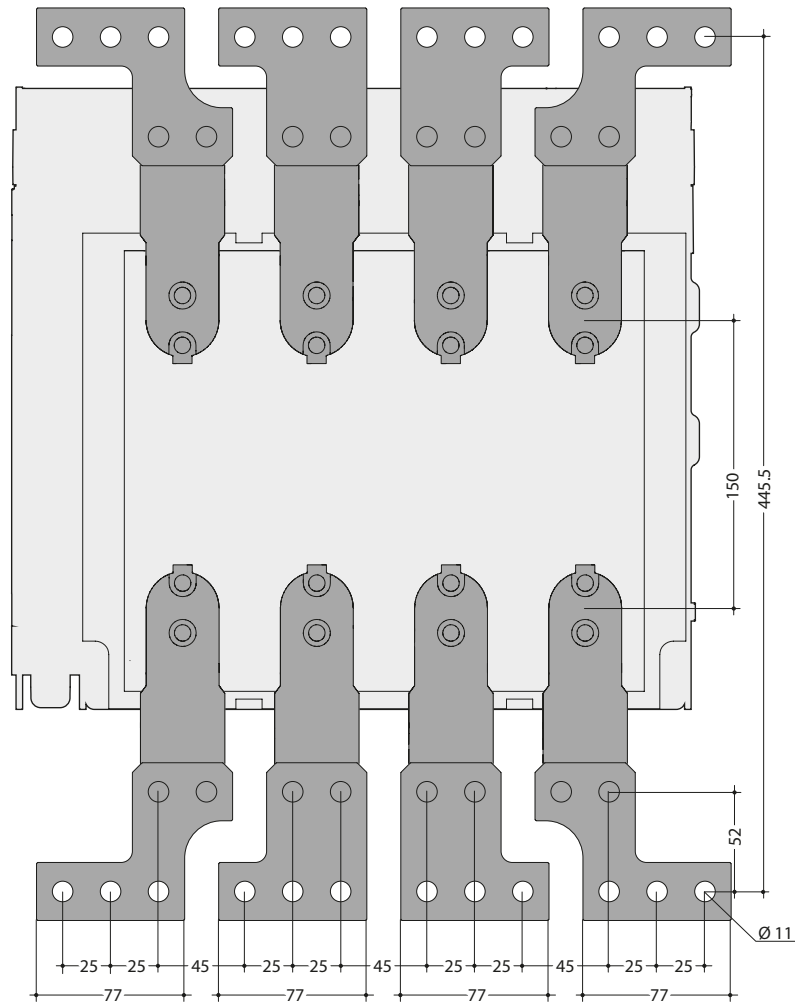


Side view

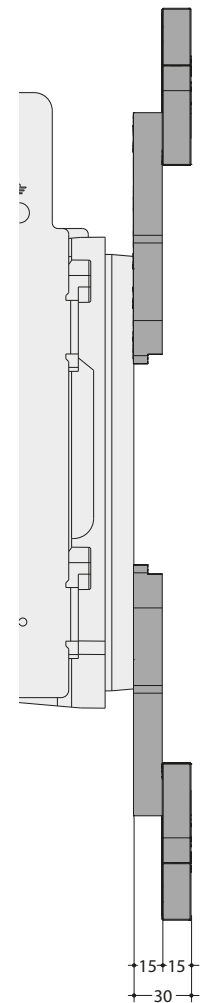


FC front connections with SP spreaders

For drawout 3-pole circuit breaker with short terminal extensions in bottom position

Rear view

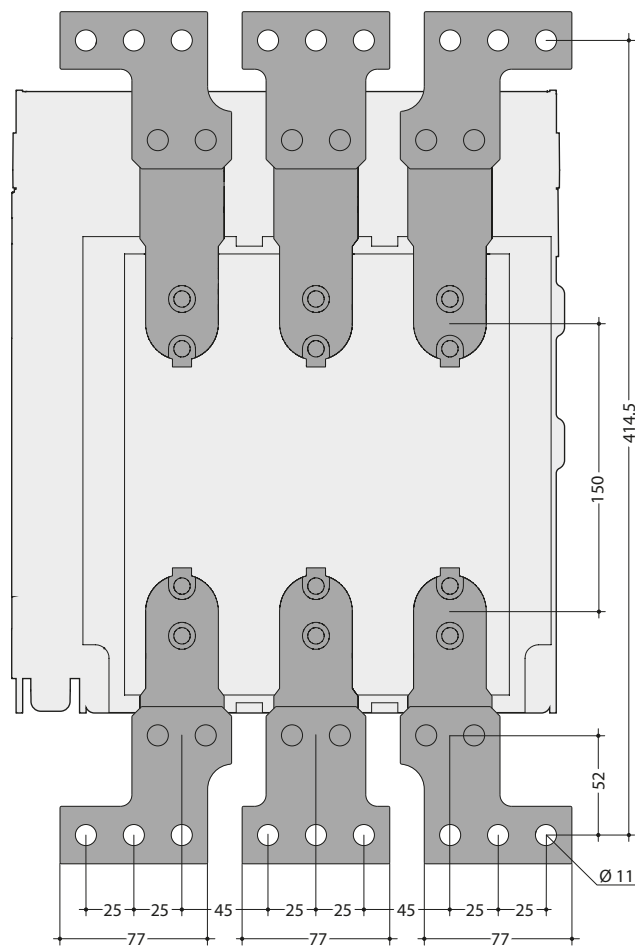


Side view

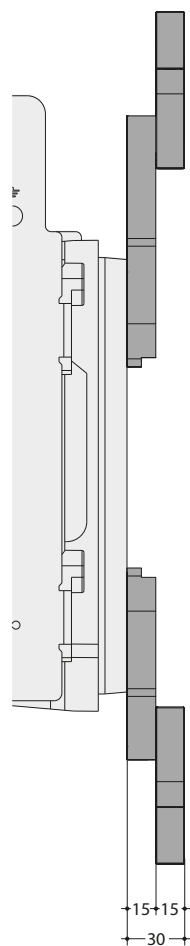

For drawout 4-pole circuit breaker with short terminal extensions in bottom position


Side view

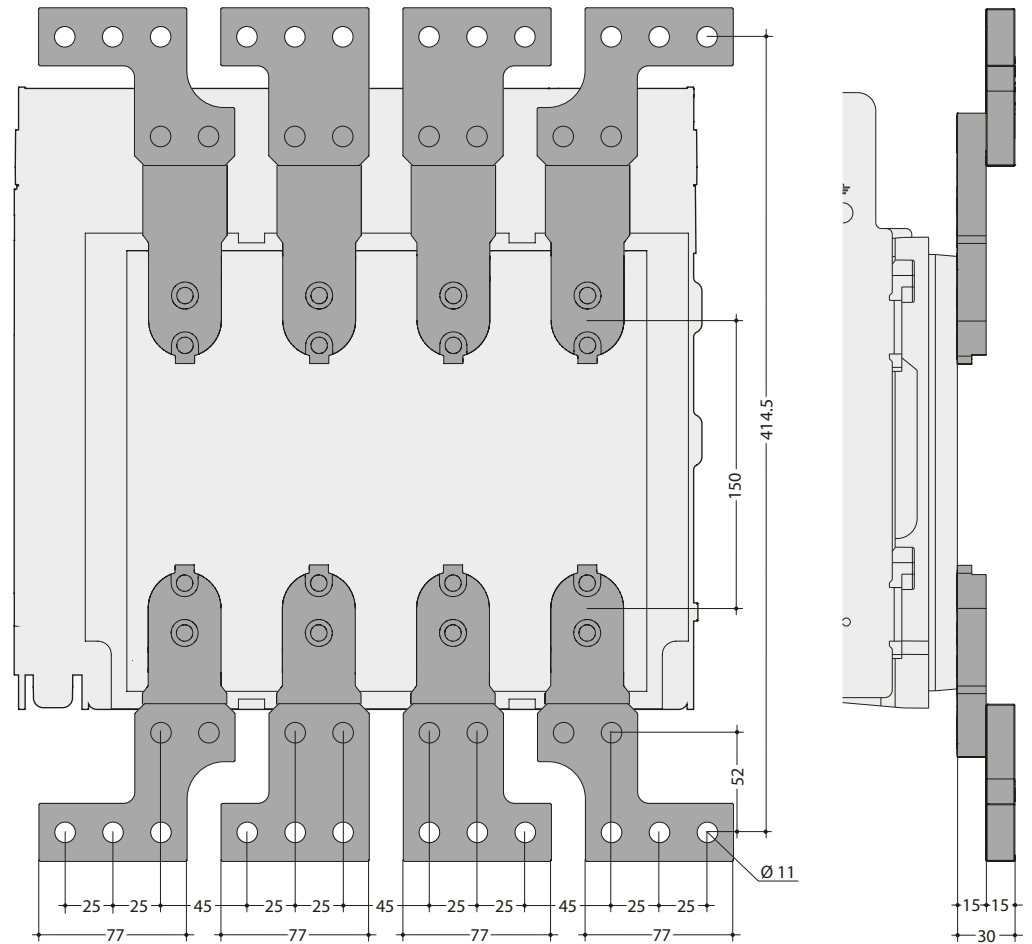


FC front connections with VCA vertical connectors

In front for fixed 3- or 4-pole circuit breaker

Rear view

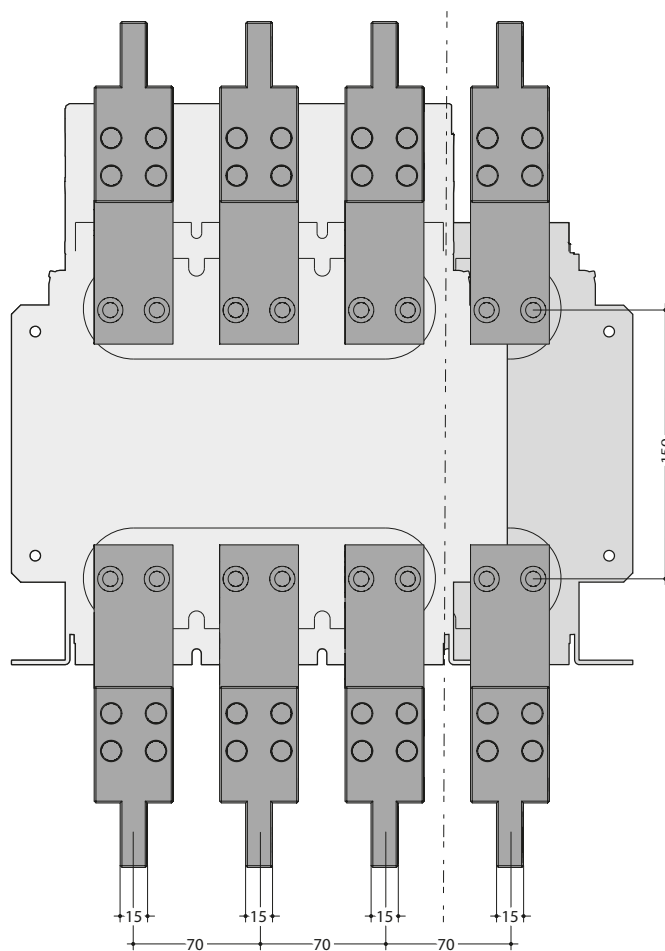

Side view

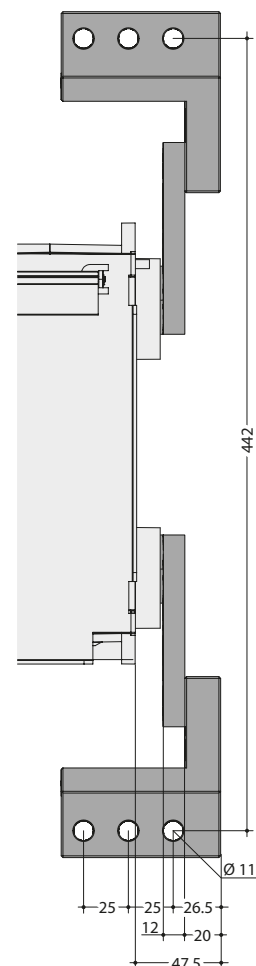


FC front connections with VCA vertical connectors

At rear for fixed 3- or 4-pole circuit breaker


Rear view

Side view

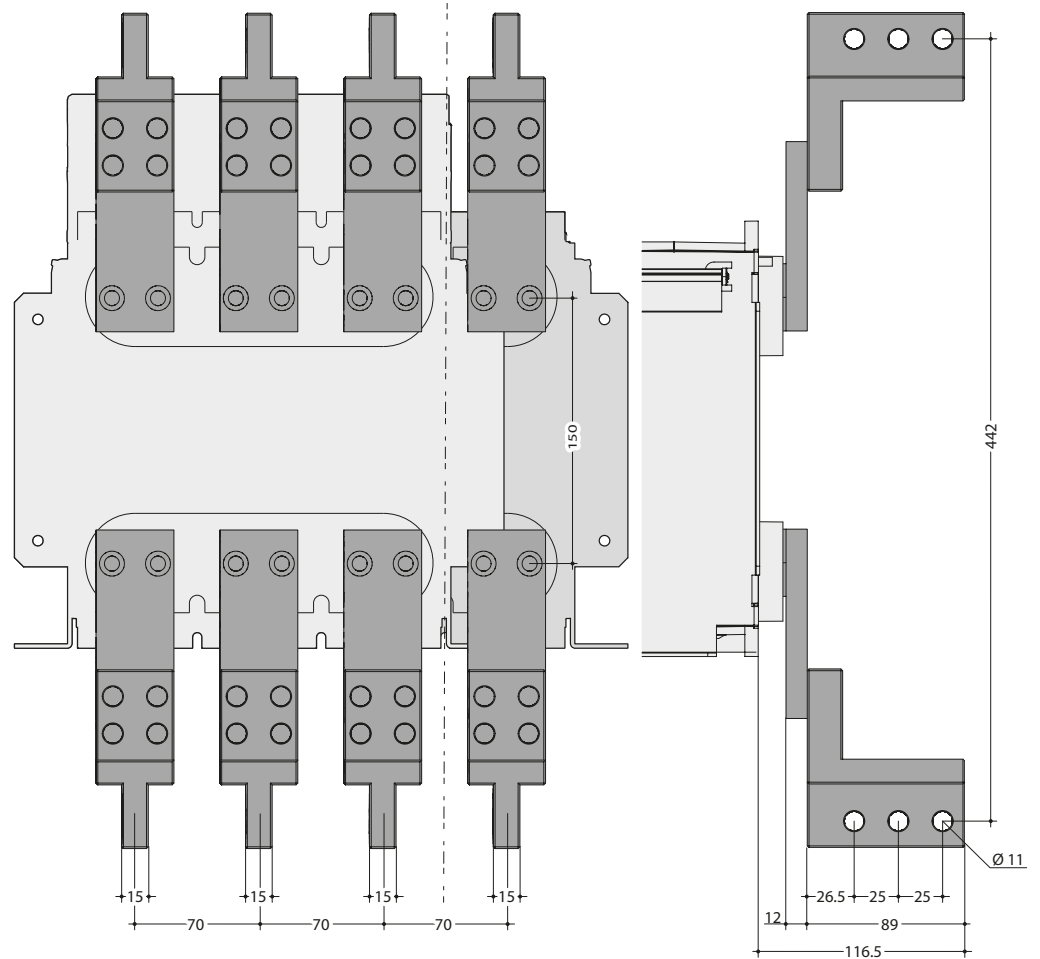

In front for drawout 3-pole or 4-pole circuit breaker

Side view

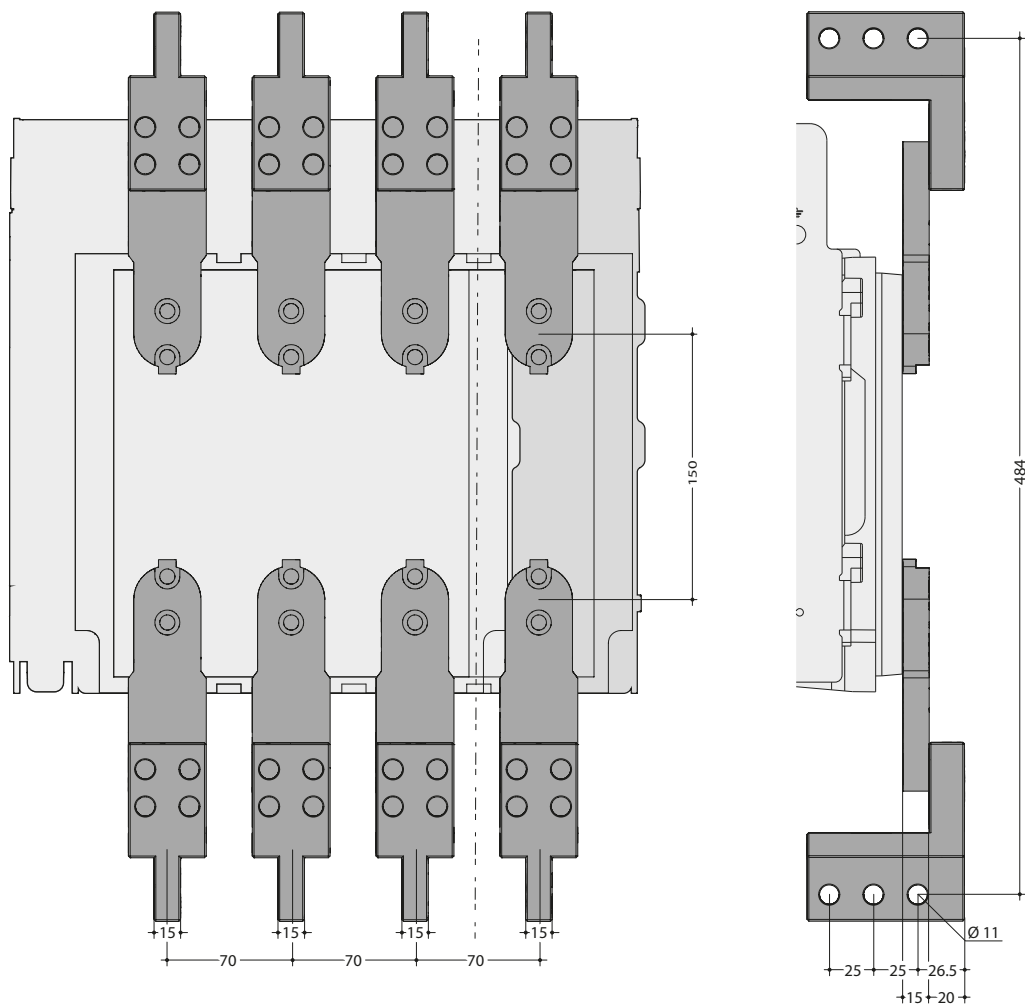


FC front connections with VCA vertical connectors

At rear for drawout 3- or 4-pole circuit breaker

Rear view


Side view

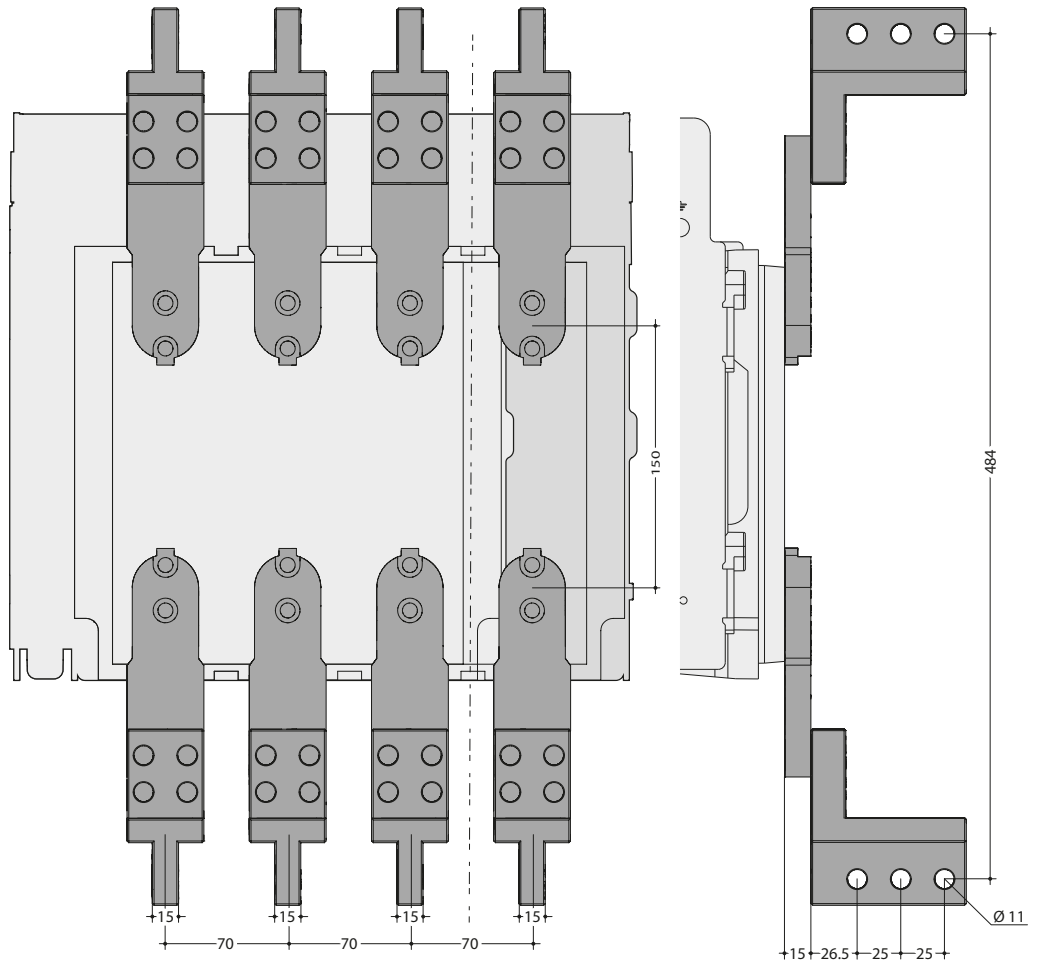


The door frame must be positioned in relation to the **reference point** between the circuit breaker and the distribution board door.

The **reference point** is one of the product's fastening holes.


Fixed 3 and 4 pole circuit breaker, fastening on a plate or mounting rails.

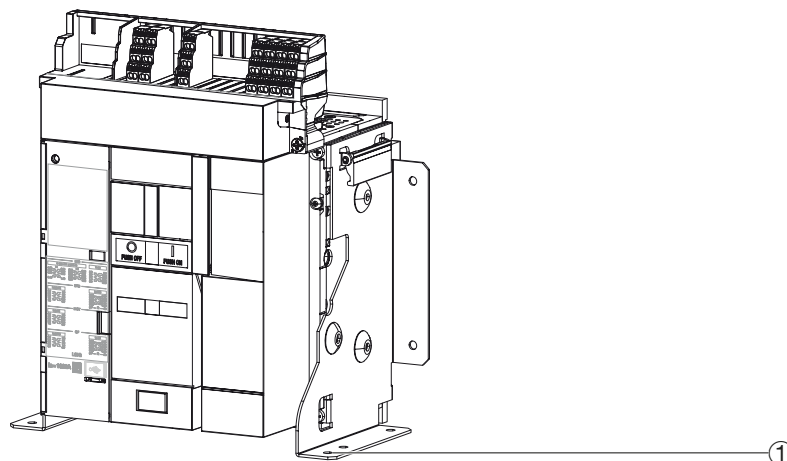

Fixed 3 and 4 pole circuit breaker, mounting on a panel at the rear of the product.

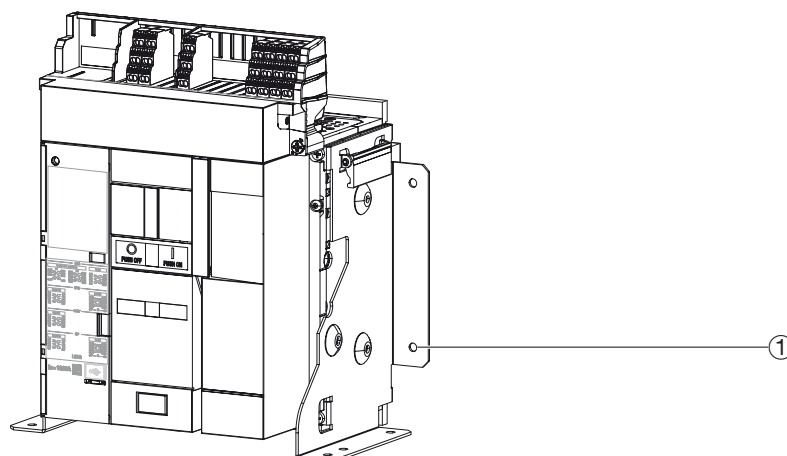


Withdrawable 3 and 4 pole circuit breaker, fastening on a plate or mounting rails.

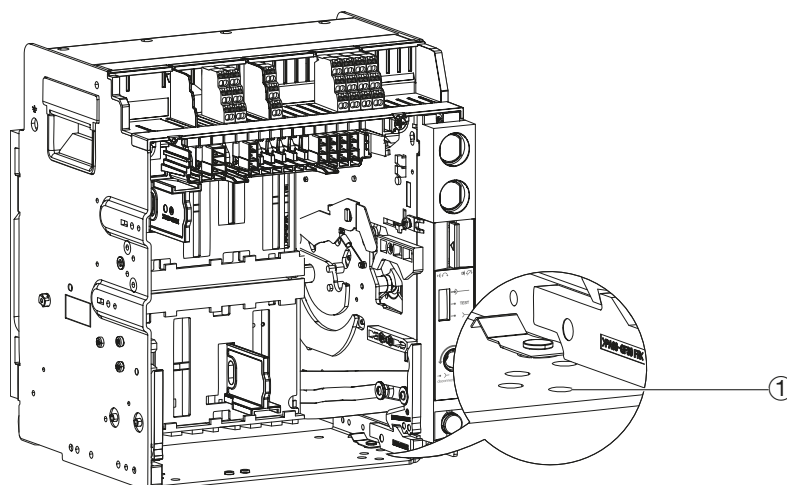


① Reference point

Comply with the following dimensions to install a door frame:


Fixed 3 pole circuit breaker

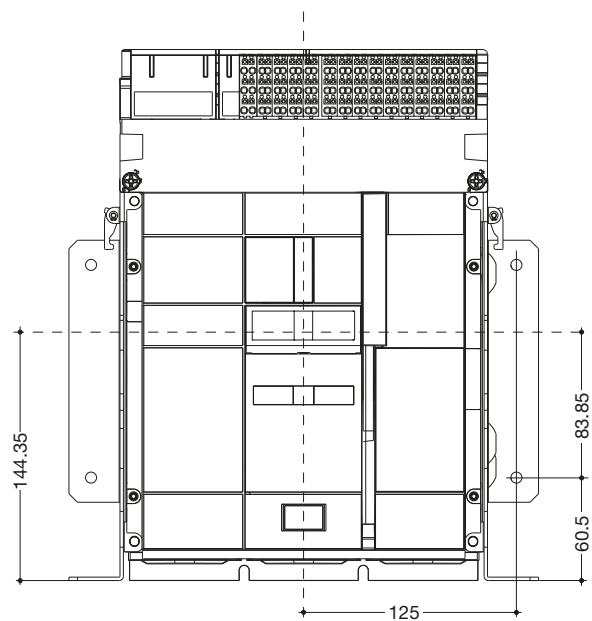


Fixed 4 pole circuit breaker

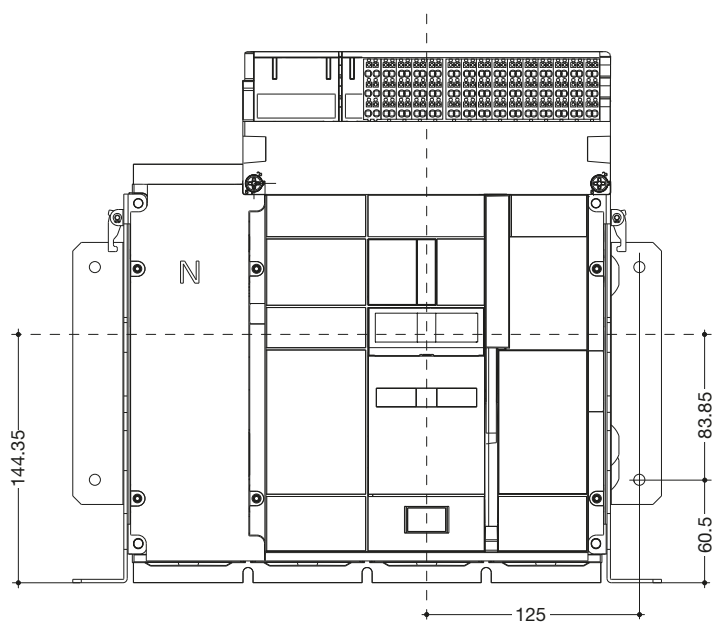


Drawout 3 pole circuit breaker

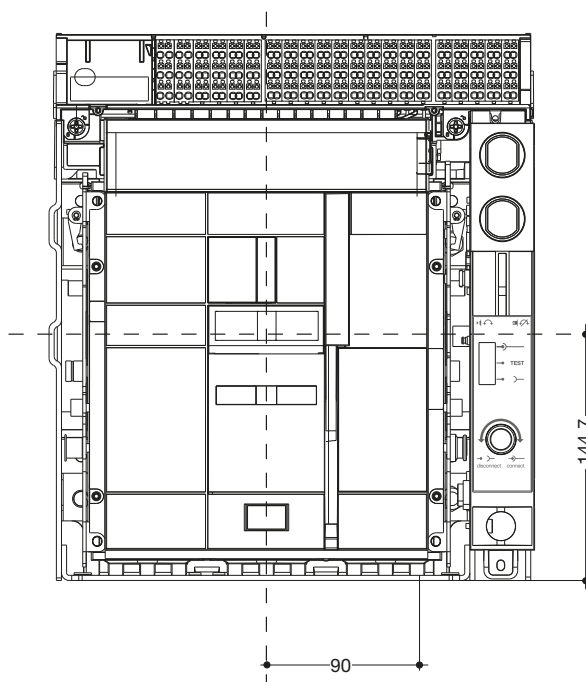


Drawout 4 pole circuit breaker

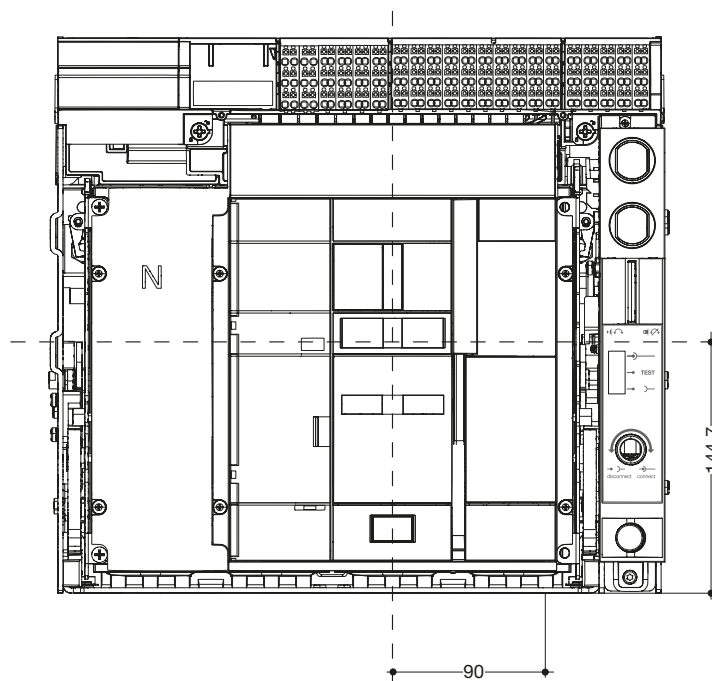


DF Door Frame

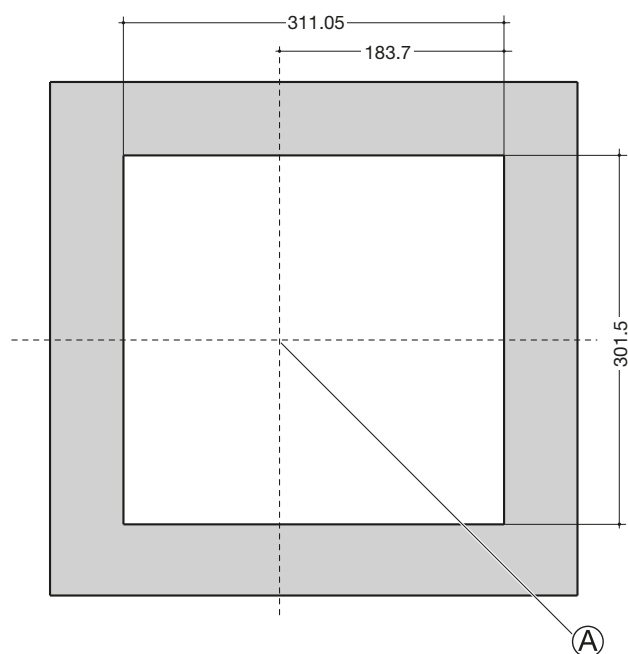

Align the centre **A** of the circuit breaker with the centre **A** of the door frame.

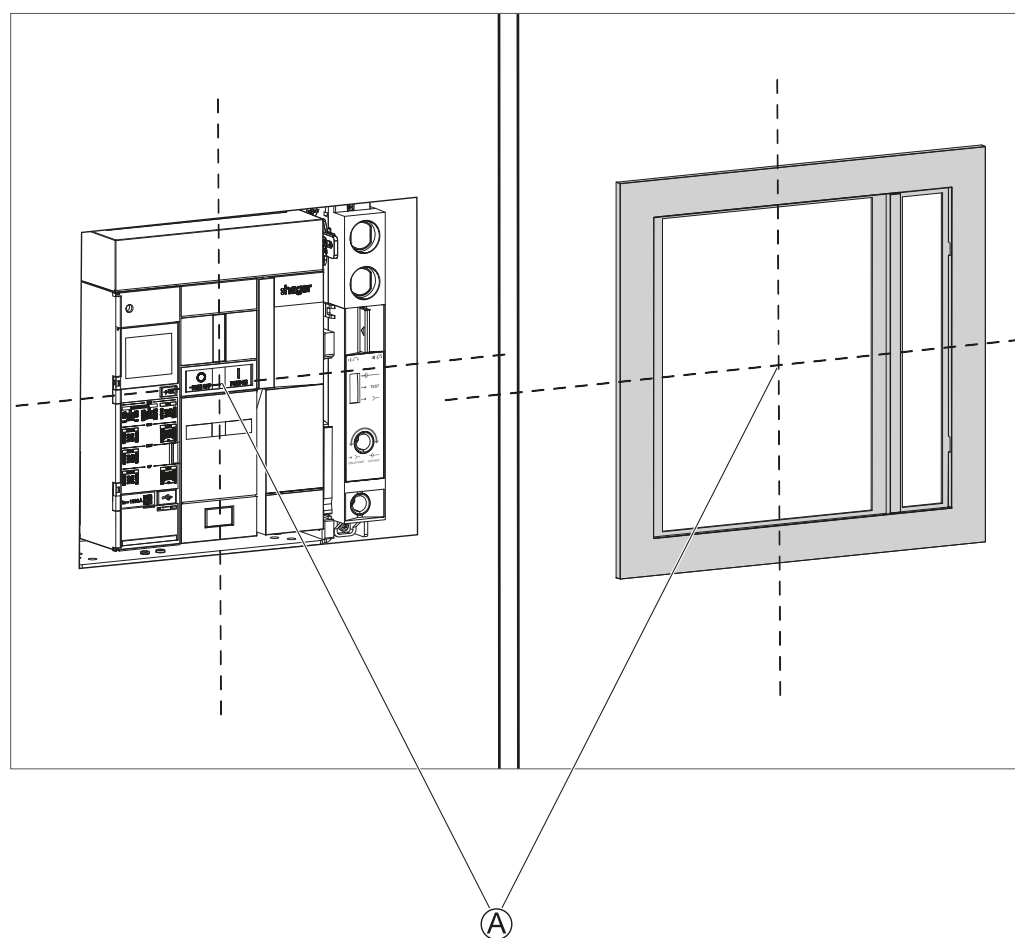

Comply with the following dimensions to install an HTD210H panel display:

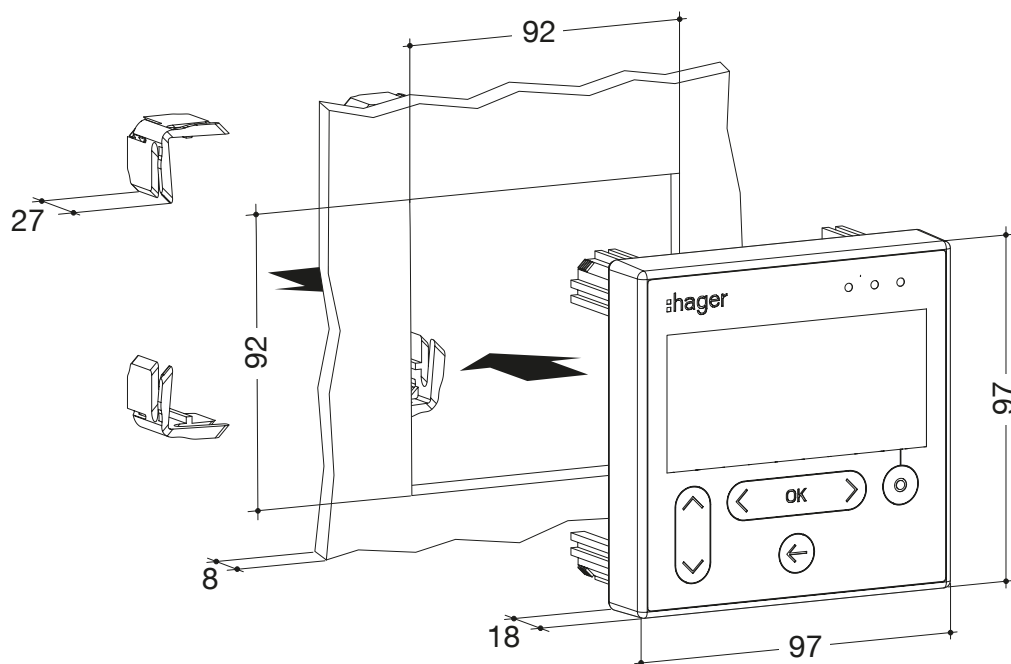

Dimensions	Width (mm)	Height (mm)	Depth (mm)
HTD210H	97	97	18 (45 with fastening clips)
Panel cut-out	92	92	8 max.




WARNING

Risk of electric shock


Danger to life, risk of injury due to electric shock, or risk of serious injury.

Make sure that the device is only operated by qualified personnel in accordance with to the installation standards in force in the relevant country.

To ensure the safety of people and the installation, comply with the following safety clearances:

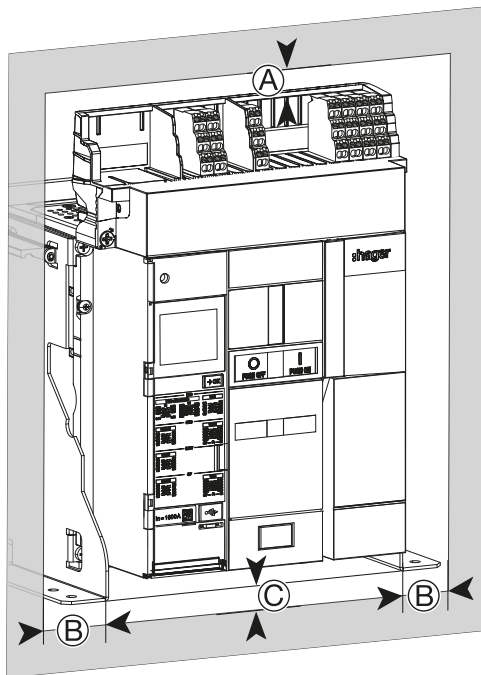

Fixed circuit breaker

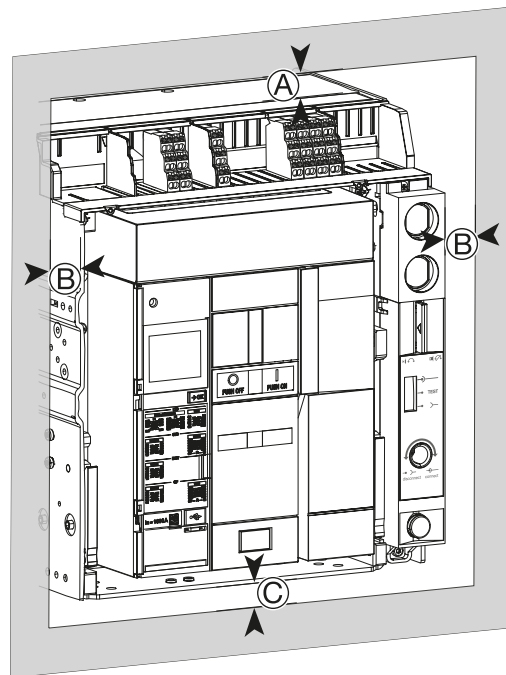

Withdrawable circuit breaker

Circuit breaker	Distance	Insulating material	Metallic material	Circuit breaker live (mm)
Fixed	Ⓐ	0	0	150
	Ⓑ	0	0	60
	Ⓒ	0	0	0
Withdrawable	Ⓐ	0	0	0
	Ⓑ	0	0	60
	Ⓒ	0	0	0



DANGER


Risk of electric shock, electrocution or electric arc

Danger to life, risk of injury due to electric shock, or risk of serious injury.

Ensure that the device is only installed by qualified personnel in accordance with the installation standards in force in the relevant country and that they are equipped with personal protective equipment (PPE).



Before installing, ensure that:





All of the circuit breaker's power sources are shut off, the circuit breaker is open, closing spring discharged and in the disconnected position.

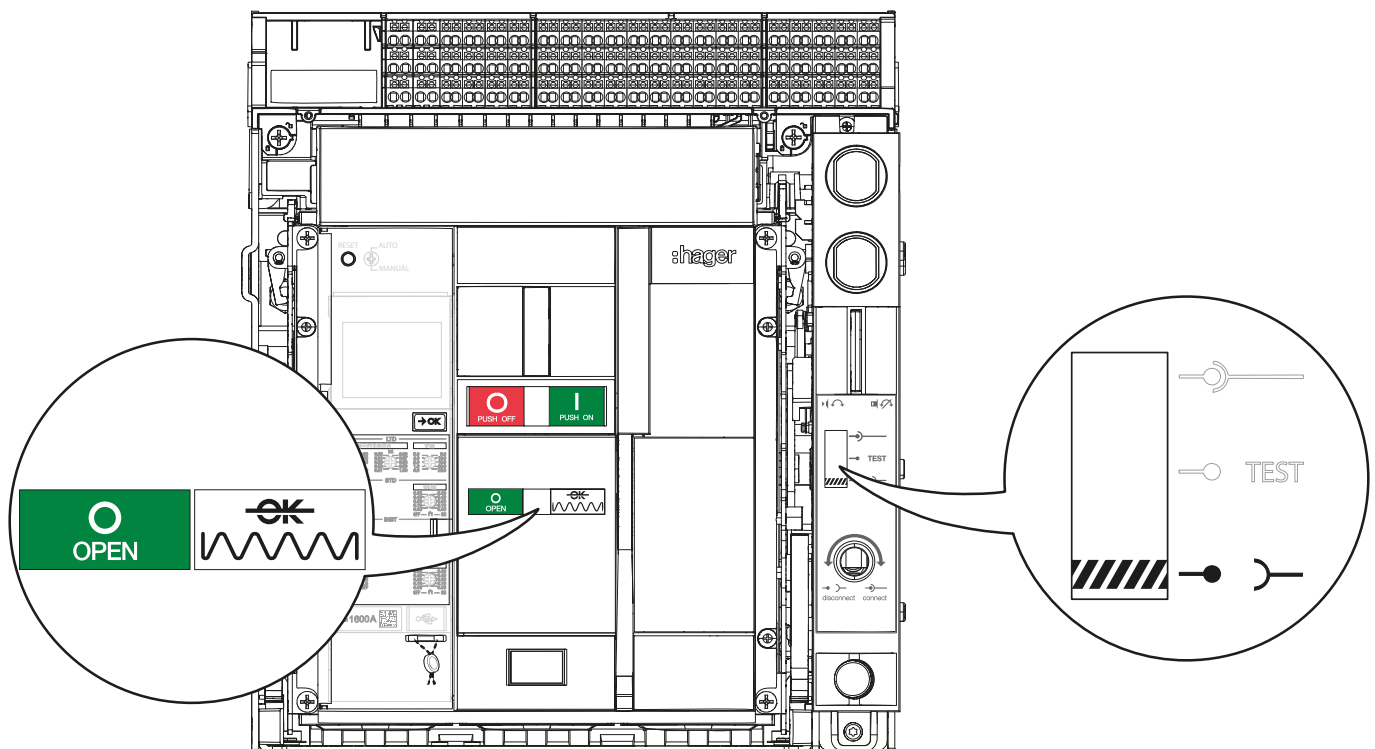



17.2.1 Fastening on a plate or mounting rails



To fasten a fixed circuit breaker on a horizontal support, proceed as follows:

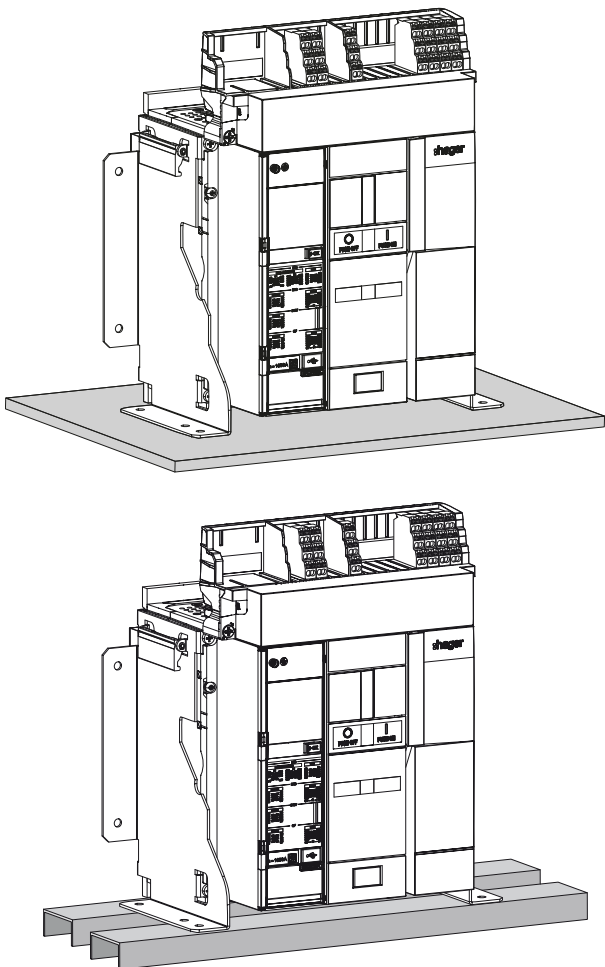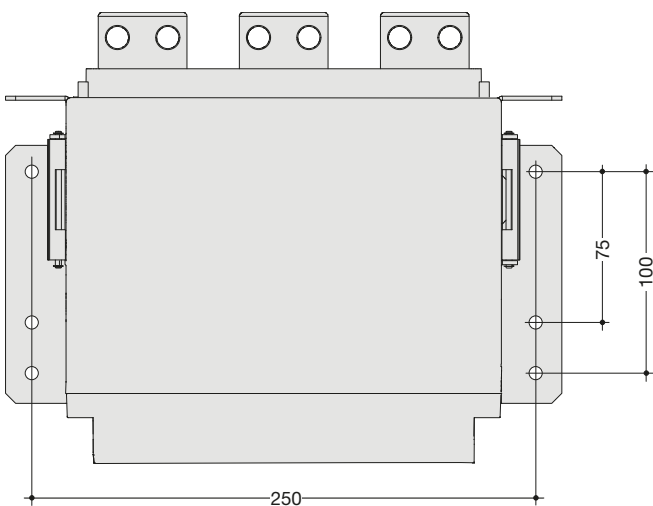Action	Illustration
1 Be sure to mount the circuit breaker on a plate with sufficient resistance or on mounting supports that are stable enough.	
2 Identify at least 4 mounting holes (2 on each side) complying with the following dimensions. 3 poles	

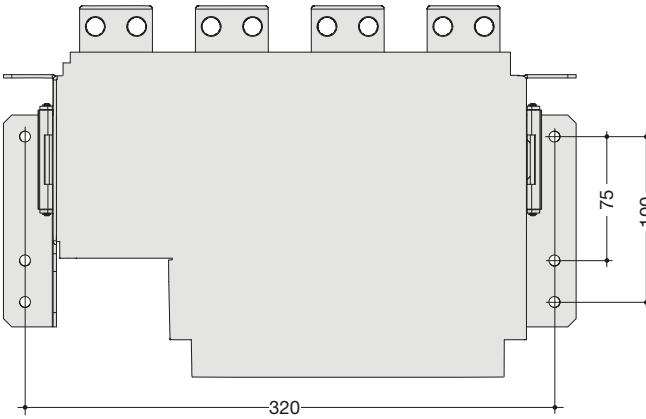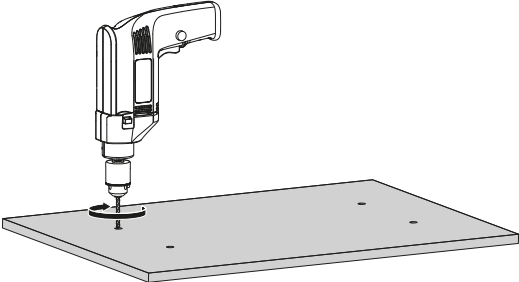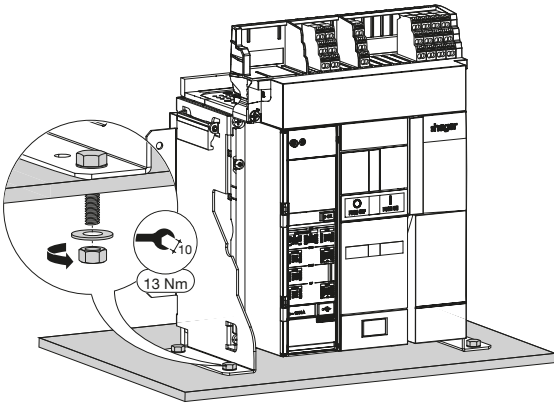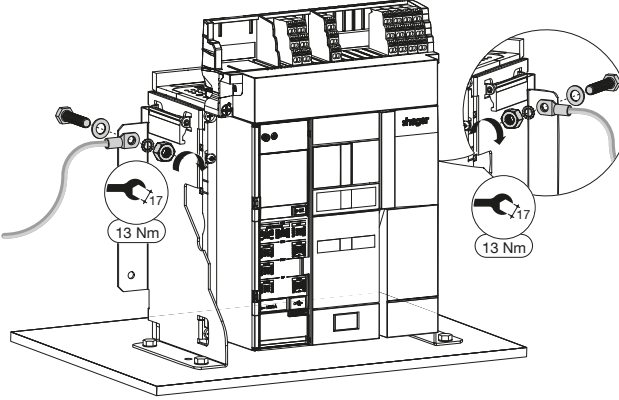Action	Illustration
2 (continued) 4 poles	
3 Drill the 4 fixing holes (Ø mini 6.5 mm).	
4 Mount the circuit breaker using M6 screws.	
5 If the mounting plate is not connected to the earth, connect an earthing conductor to each side of the mounting plate using an M6 screw and an unused drilled hole. It is recommended that an earthing conductor with a cross-section of 16 mm² be used.	

Fastening on a panel at the rear of the product

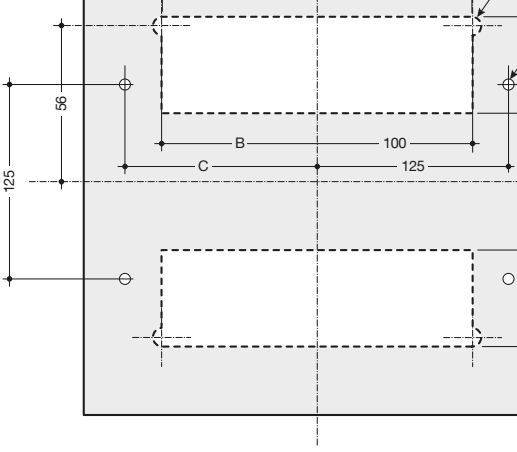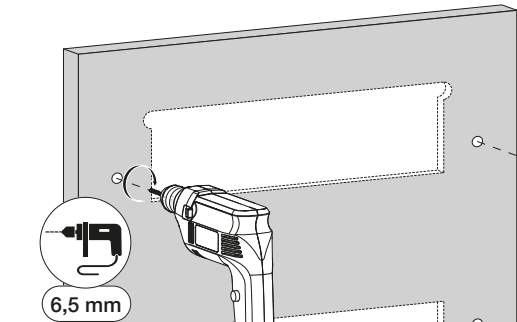Action	Illustration												
1 To allow access to the rear connections, provide 2 cut-outs in the panel, then identify at least 4 mounting holes complying with the following dimensions. The circuit breaker must always be fastened by at least four screws.	 <table border="1" data-bbox="906 965 1289 1149"> <thead> <tr> <th></th><th>3P</th><th>4P</th></tr> </thead> <tbody> <tr> <td>A (mm)</td><td>99,5</td><td>169,5</td></tr> <tr> <td>B (mm)</td><td>100</td><td>170</td></tr> <tr> <td>C (mm)</td><td>125</td><td>195</td></tr> </tbody> </table>		3P	4P	A (mm)	99,5	169,5	B (mm)	100	170	C (mm)	125	195
	3P	4P											
A (mm)	99,5	169,5											
B (mm)	100	170											
C (mm)	125	195											
2 Drill the 4 fixing holes (Ø mini 6.5 mm).													

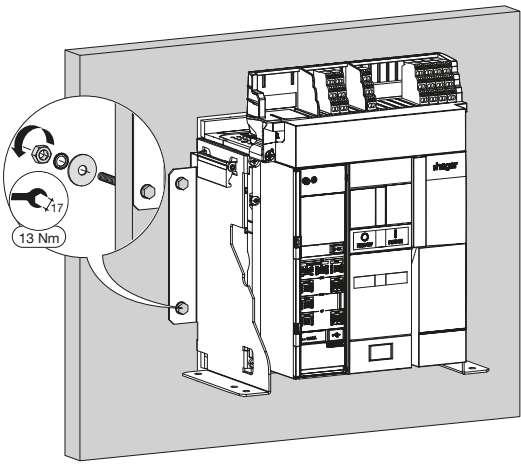
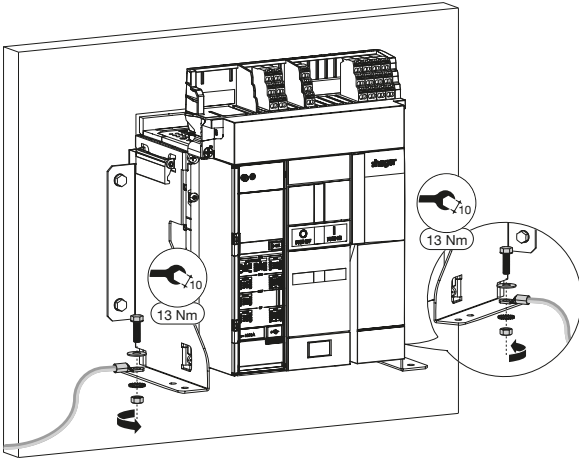
Action	Illustration
3 Mount the circuit breaker using M6 screws.	
4 If the panel is not earthed, connect an earthing cable to each side mounting plate using an M6 screw and an unused hole. It is recommended that an earthing conductor with a cross-section of 16 mm² be used.	





ATTENTION

Risk of property damage

Always mount the chassis before racking in or racking out the circuit breaker.

To mount the chassis of a withdrawable circuit breaker, proceed as follows:

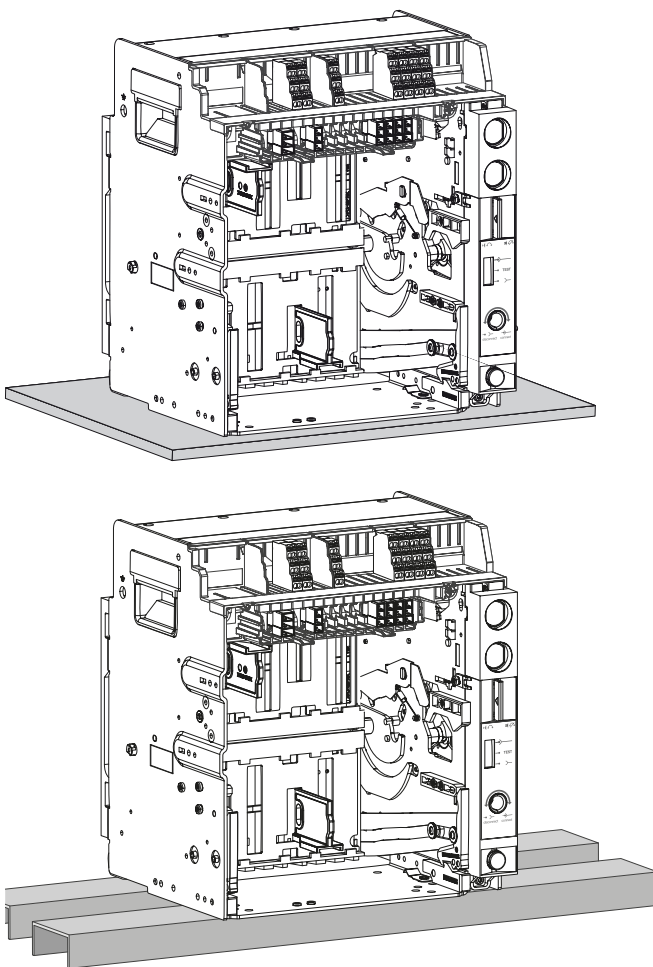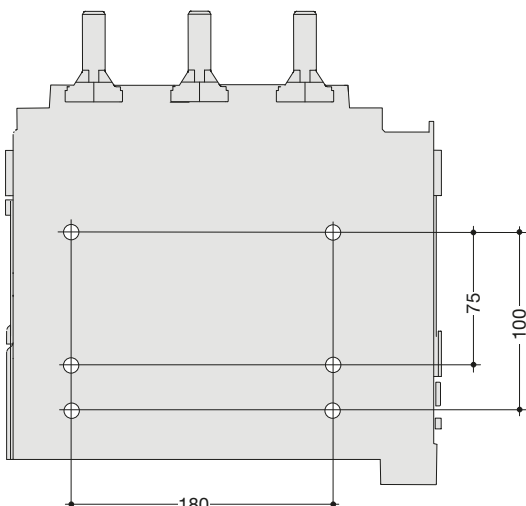Action	Illustration
1 The circuit breaker must first be removed from the chassis. Be sure to mount the circuit breaker on a plate with sufficient resistance or on mounting supports that are stable enough.	
2 Identify at least 4 mounting holes (2 on each side) complying with the following dimensions. 3 poles	

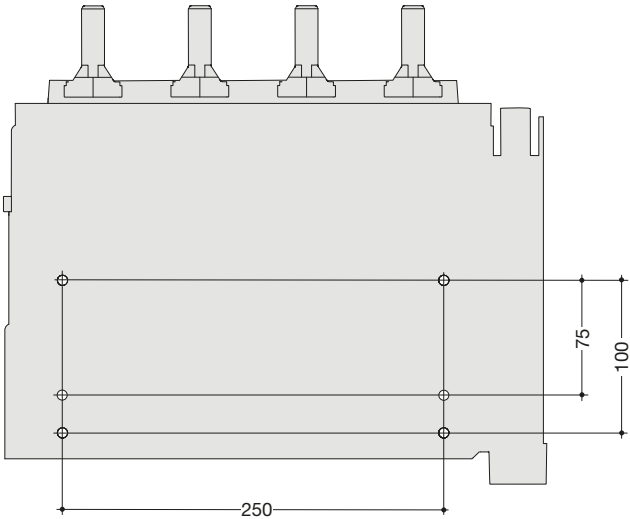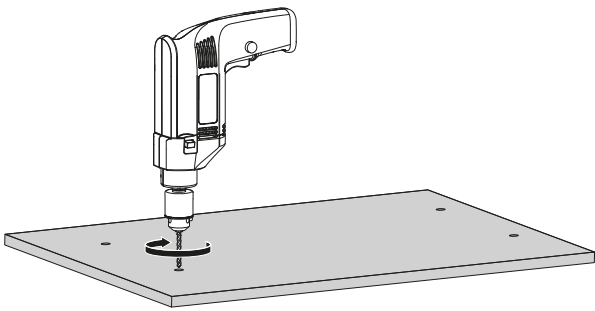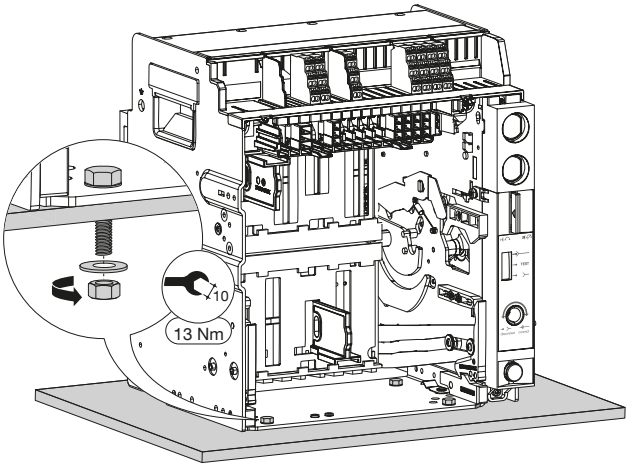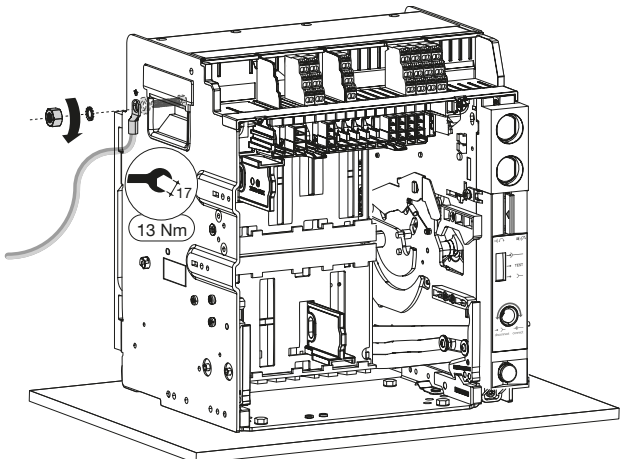Action	Illustration
2 (continued) 4 poles	
3 Drill the 4 fixing holes (Ø mini 6.5 mm).	
4 Mount the chassis using M6 screws.	
5 If the plate is not earthed, connect an earthing conductor directly to the chassis using an M10 screw. It is recommended that an earthing conductor with a cross-section of 16 mm² be used.	

ATTENTION



Risk of property damage

The connecting bars must be shaped and positioned so that they are perfectly adapted to the rear sockets before tightening using bolts.

The connecting bars must be resting on a support attached to the electrical distribution board, not directly on the rear sockets.

If a short circuit occurs, the deformation of the connecting bars must not damage the fastening of the rear connections. To guarantee this, one of the connecting bar supports should be used at maximum distance, according to the short-circuit currents as indicated below:

Presumed short circuit current (kA)	Distance A (mm)
42	350
55	300
66	250

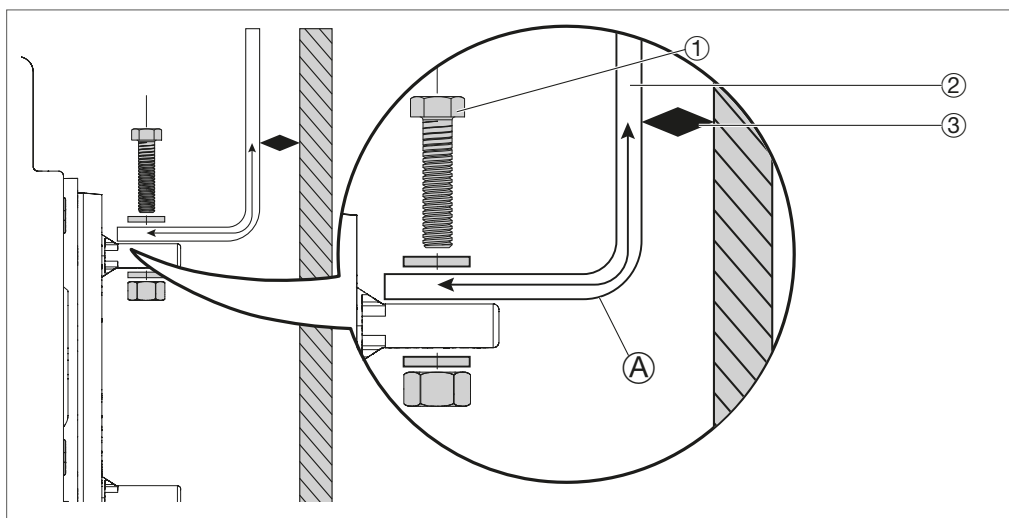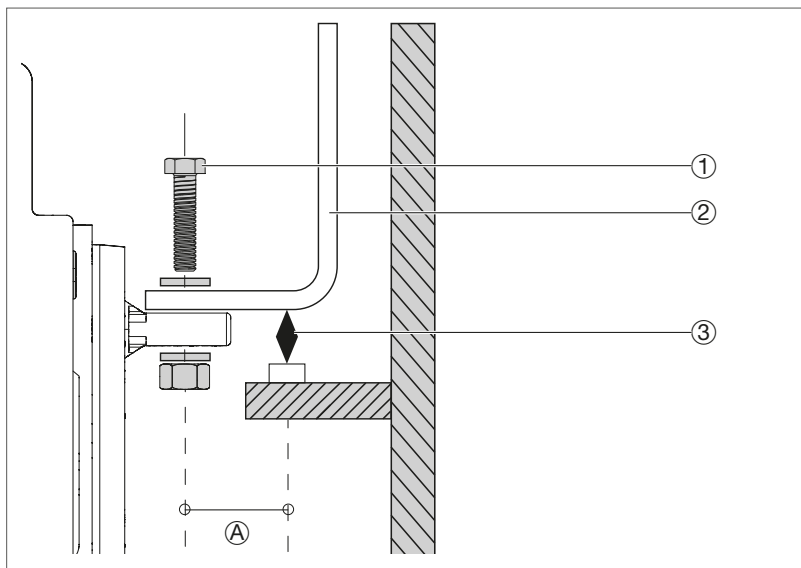



- ① Tightening bolt
- ② Connecting bar
- ③ Connecting bars holder

ATTENTION

Risk of property damage

The connecting cables must be fastened to the electrical cabinet to avoid dragging on the rear connections. Cable retaining bars are indicated for this.

If necessary, extend the rear sockets using terminal extensions for cables, then connect them to the connection cables.

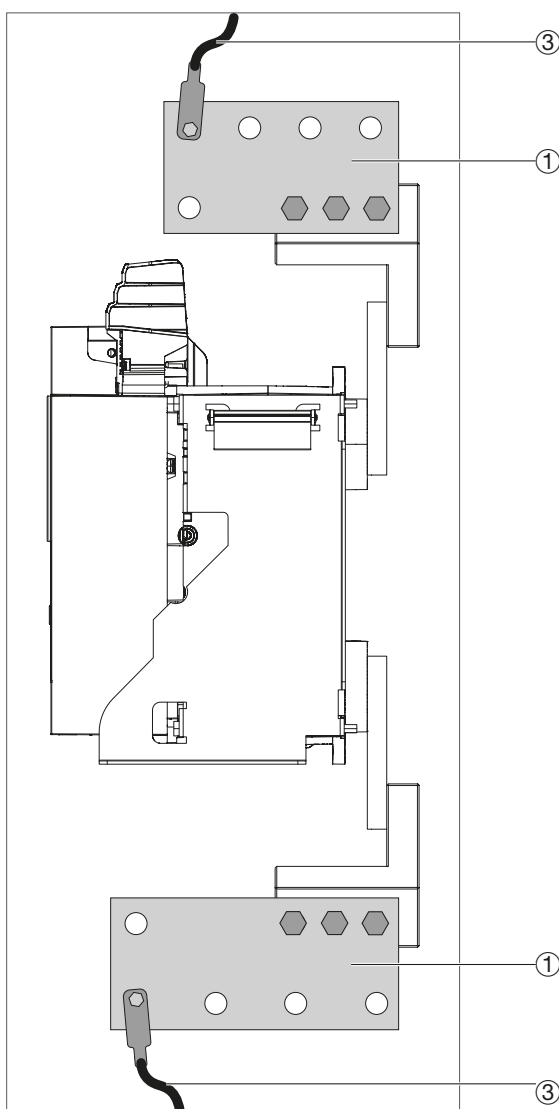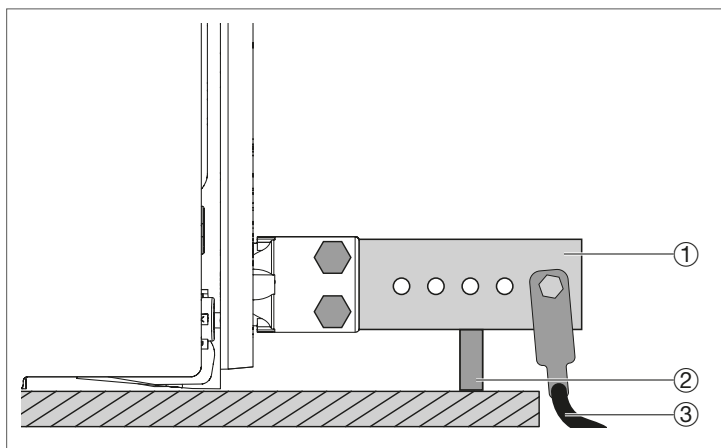

ATTENTION

Hager does not provide either the cable terminals or the bar extensions for cables.

To create these parts, refer to chapter 15 Fastening dimensions.

- ① Terminal extensions for cables
- ② Connection cable support
- ③ Connection cable

For the installation of protection accessories, refer to the following manuals:


Accessories	Instructions
IB interphase barrier	6LE007544A
Cut-off chamber cover	6LE007513A
DF Door Frame	6LE007512A
Terminal block protection cover	-

IB interphase barrier

The interphase barriers are safety accessories designed to strengthen the isolation between the phases at the rear connections.

ATTENTION

- The use of interphase barriers is mandatory for supply voltages over 500 V AC.
- The use of interphase barriers is incompatible with the SP spreaders.

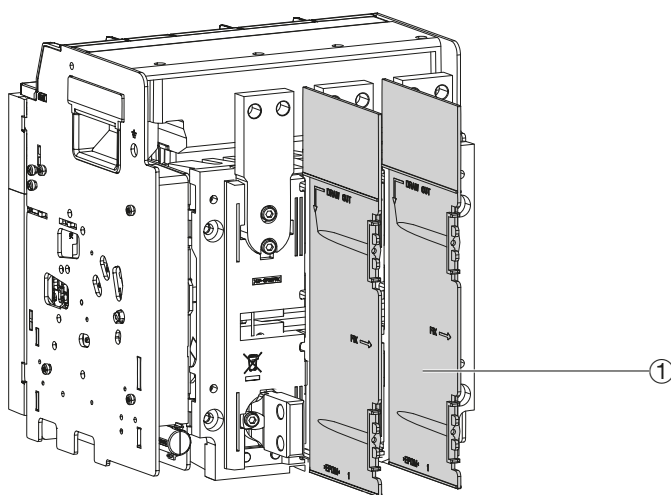


① IB interphase barrier

Cut-off chamber cover

The cut-off chamber cover is an accessory mounted on fixed circuit breakers connected with front connections.

This cover prevents the ionized gases produced during trippings from reaching the connections and thus avoids electric arcing between the connections.

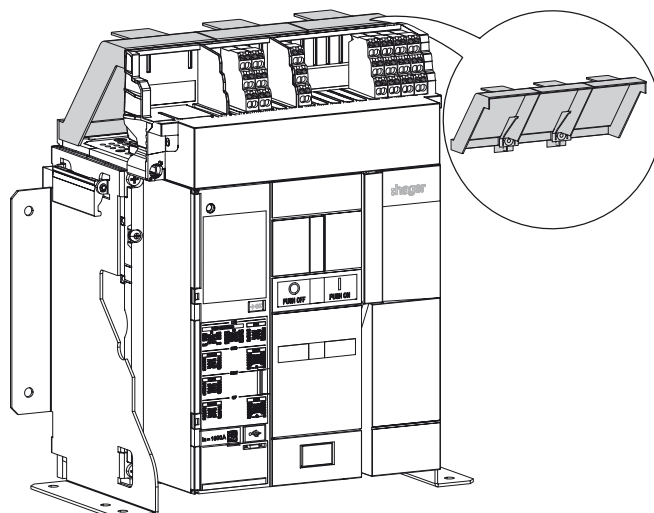


DF Door Frame

The door frame is fitted on the cut-out in the electrical distribution board door and raised the protection class to IP30.

It is used for a fixed or withdrawable circuit breaker.


For a withdrawable circuit breaker, the IP30 protection level is guaranteed in the connected position and in the test position.

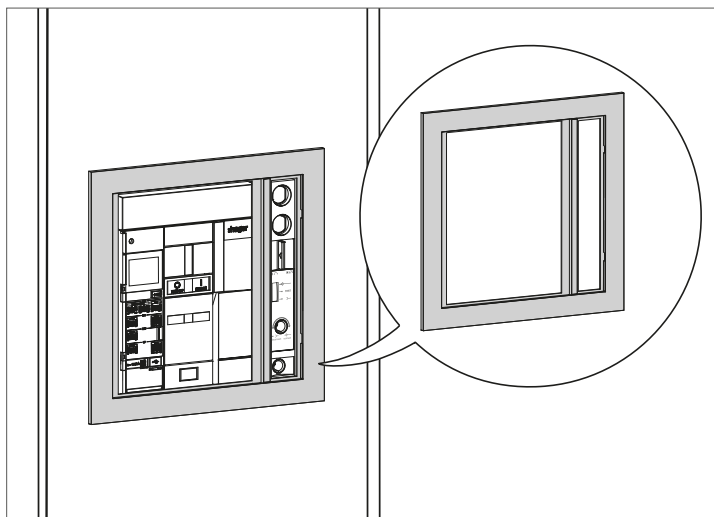

Terminal block protection cover

The cover offers protection and prevents accidental access to the terminal blocks.

Fasten the cover using the two screws supplied.

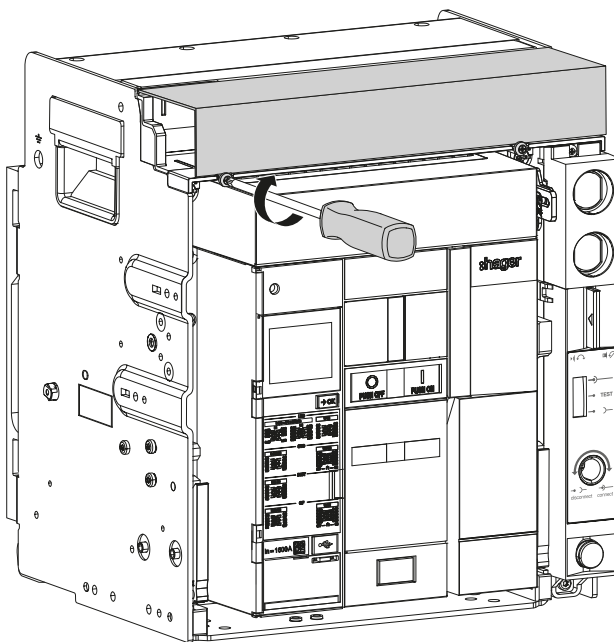


For the installation of accessories and auxiliaries, refer to the following instructions:

Accessories	Instructions
Terminal blocks TB	6LE007543A

Terminal blocks TB

The terminal blocks TB are used to connect to the various circuit breaker accessories and auxiliary devices. For a pre-configured circuit breaker, all the accessories, including terminal blocks TB, are delivered pre-fitted. If the accessories are installed later, the terminal blocks TB must be purchased separately.


Care must then be taken to ensure they are fitted in the right place.

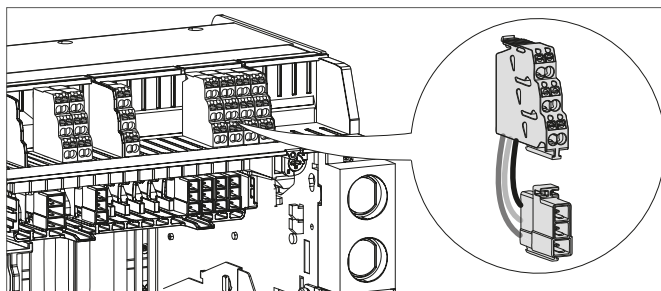

The OAC output alarm contacts module has 5 digital output contacts. By default, these contacts are pre-assigned to an alarm, trip or operating event. The assignment cannot be changed on the sentinel trip unit but it can be reprogrammed on the sentinel Energy trip unit. It is fitted behind the trip unit.

By default, it allows the following alarms to be signalled:

- with the sentinel trip unit:
 - LTD trips on one output, STD/INST/MCR on one output and GF on one output,
 - overload pre-alarm,
 - HWF trip.
- with the sentinel Energy trip unit
 - LTD trip,
 - grouped alarm (configured on Short Time Delay, Instantaneous or MCR),
 - GF trip,
 - PTA 1 overload prealarm,
 - HWF trip.

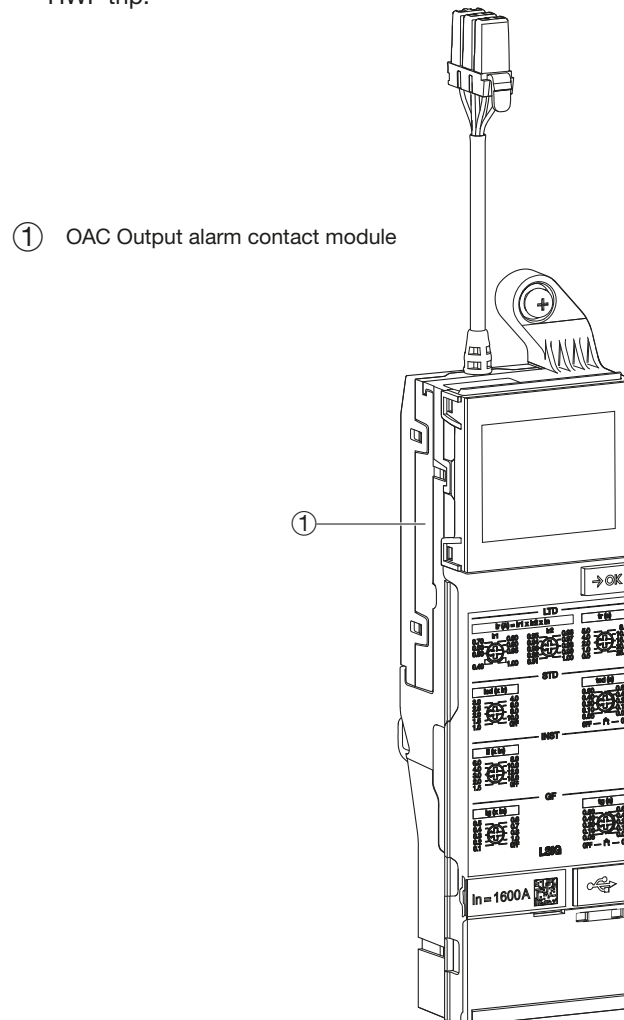


ATTENTION

An external 24V DC SELV power supply (recommended Hager reference HTG911H) connected on the TU terminal blocks of the circuit breaker is necessary to use the OAC output alarm contacts module (see Chapter 17.9 Connecting the inputs).

ATTENTION

For installation of the OAC output alarm contacts module, refer to the 6LE007430A manual.

Output alarm contact OAC wiring diagram

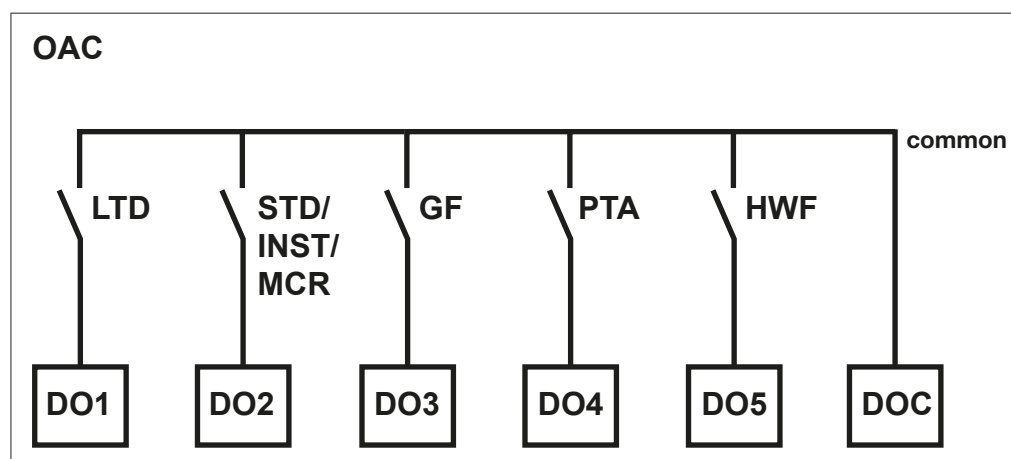

Characteristics of the OAC output alarm contacts: 2 A/230V AC and 2 A/24V DC

ATTENTION

The OAC output alarm contacts retain their state even when the circuit breaker opens thanks to the external 24V DC power supply.

• LSIG tripping operations

	Contact No.	Not active	Active
LTD output contact	DO1	open	closed
STD/INST/MCR output contact or grouped alarm with the sentinel Energy trip unit	DO2	open	closed
GF output contact	DO3	open	closed

• Overload pre-alarm

	Contact No.	Not active	Current level > 90 x Ir
PTA output contact	DO4	open	closed

• Tripping due to a critical system alarm

	Contact No.	Not active	Active
HWF output contact	DO5	open	closed


ATTENTION

For programming the output contacts with the sentinel Energy trip unit, see the sentinel Energy hw+ 6LE008147A electronic trip unit user manual.


ATTENTION

The LTD, STD/INST/MCR, GF and HWF output contacts are acknowledged when the tripping screens on the trip unit are reset or during activation of the RR/DI input (see Chapter 17.9 Connecting the inputs).

Fixed circuit breaker

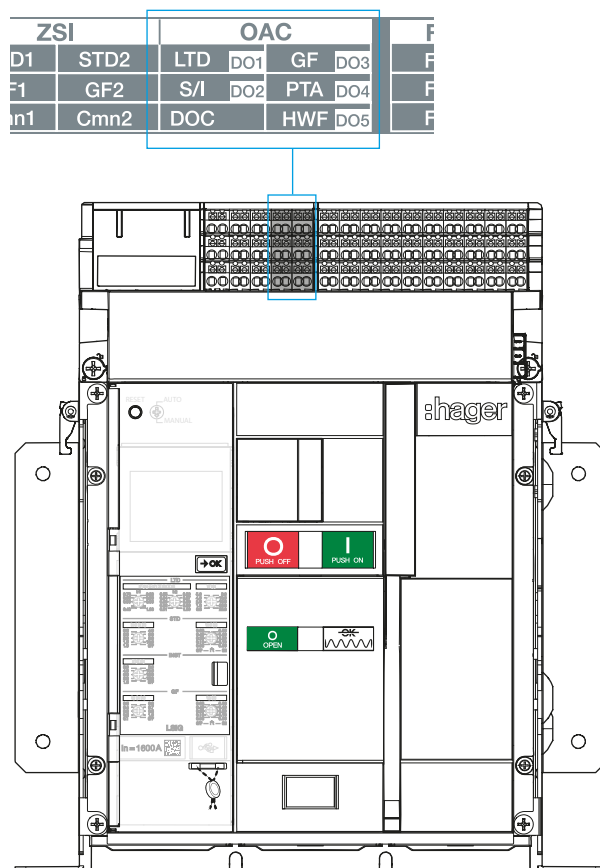


Withdrawable circuit breaker

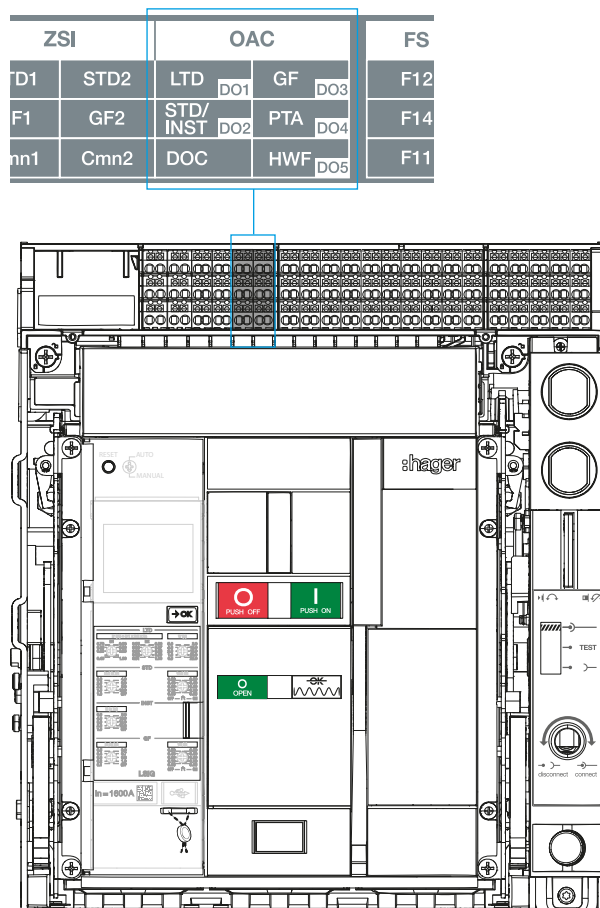

Several inputs can be connected to the circuit breaker:

Wiring diagram of the 24V DC external power supply

Wire an external 24V DC SELV power supply (recommended reference Hager HTG911H) to the 24V + and - terminals.

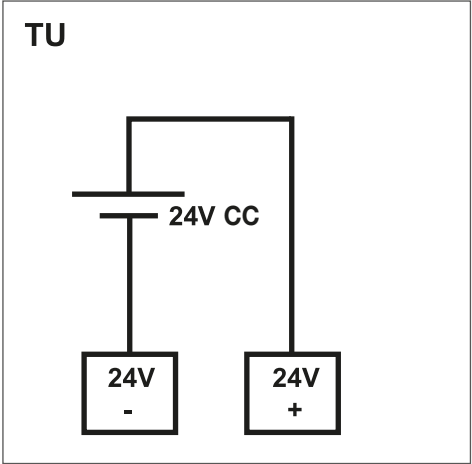

Take the power consumption of the following devices into account when dimensioning the external 24V DC power supply.

sentinel Energy trip unit	60 mA
HTD210H panel display	85 mA
Modbus RTU communication module	14 mA
Modbus TCP communication module	38 mA
OAC alarm output contacts module	34 mA


Wiring diagram of the RR/DI digital input

The RR/DI digital input is used to remotely acknowledge the sentinel trip unit's trip pop-ups and remotely reset the OAC alarm output contacts. It can be used for one of the following control functions on the sentinel Energy trip unit:

- remote acknowledgement of the trip alarms on the trip unit and remote reset of the output alarm contacts,
- switching between tariff meters T1 and T2,
- inhibition of advanced protections,
- switching between profile A and B.

It is configured by default for remote acknowledgement of the sentinel trip unit's trip pop-ups and the remote reset of the OAC alarm output contacts with the sentinel Energy trip unit (refer to the 6LE008147A hw+ sentinel Energy electronic trip unit user manual).

The digital input must be powered with 24V DC in accordance with the following diagram.

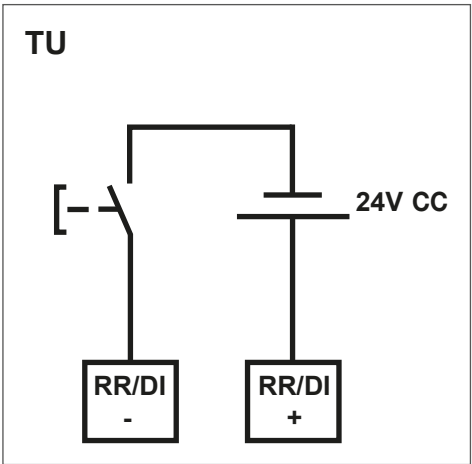

The Zone Selective Interlocking (ZSI) function is designed to limit the electro-dynamic constraints on the installation in case of a short circuit fault or earth fault.

The devices, conductors, bar sheathing and busbars can thus benefit from this limitation.

The installed circuit breakers are linked together by cable to determine which circuit breaker should trip first. If an electrical fault appears between two linked circuit breakers connected together by the ZSI function, the downstream circuit breaker is unable to clear it. Thanks to zone selectivity, the circuit breaker upstream of the fault trips without waiting till the end of its time delay.


hw+ circuit breakers can be linked with h3+ Energy circuit breakers.

For zone selectivity to work correctly, the ZSI hw+ circuit breakers and the ZSI1/ZSI2 sockets of the Energy h3+ circuit breakers must be connected together.

The installation plan should also include one or more connection terminals inside the electrical cabinet to allow:

- connection between several circuit breakers connected to a single upstream circuit breaker,
- connection between an hw+ circuit breaker and an Energy h3+ circuit breaker.

ZSI inputs and outputs wiring diagram

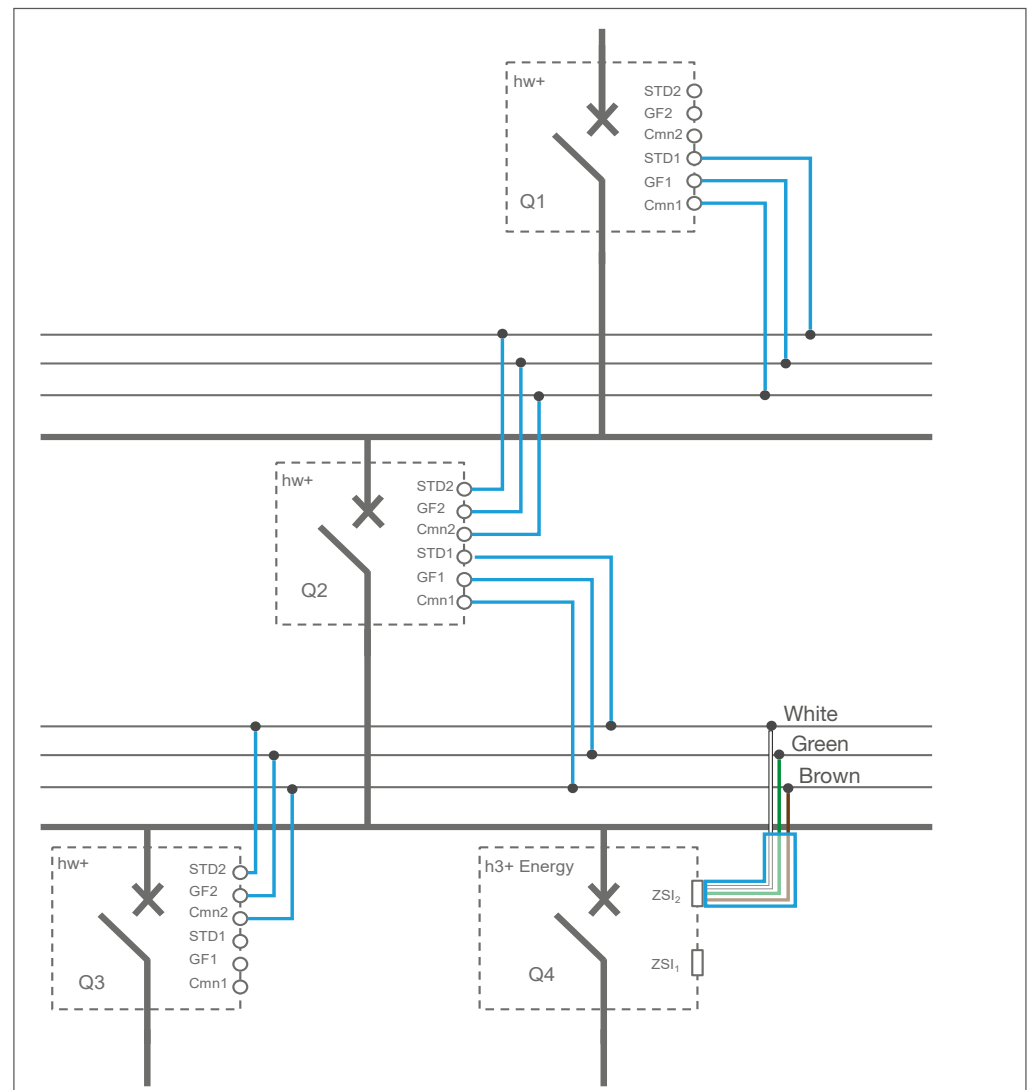

ATTENTION

Refer to the h3+ communication system manual for the connection of ZSI1/ZSI2 sockets and the use of associated accessories.

17.10 Connecting the ZSI input and output contacts

For zone selectivity on the STD protection and/or the earth fault protection:

Connection to downstream circuit breakers:

STD1: selectivity on the Short time delay protection

GF1: selectivity on the earth fault protection

Cmn1: common

Connection to the upstream circuit breaker:

STD2: selectivity on the Short time delay protection

GF2: selectivity on the earth fault protection

Cmn2: common

hw+ air circuit breakers have 6 ZSI terminal blocks enabling the upstream or downstream circuit breakers to be connected to deploy zone selectivity (ZSI).


Type of connection	Total number of circuit breakers	Max. distance between 2 circuit breakers
Upstream	3	300 m
Downstream	7	300 m

Recommended connection cable: 1 to 1.5 mm² twisted cable.


ATTENTION

It is recommended that the Hager Power setup software be used to verify the wiring between the circuit breakers.

Fixed circuit breaker

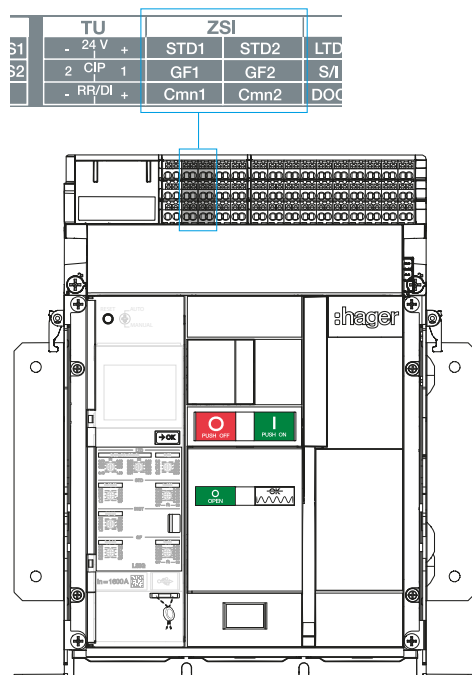

Withdrawable circuit breaker

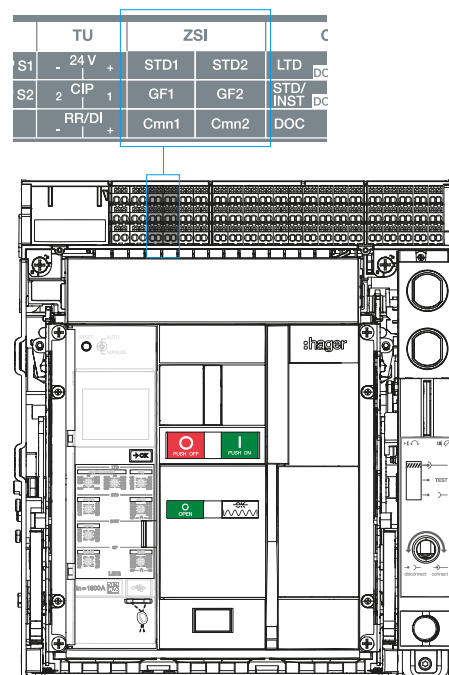

For the installation of control accessories, refer to the following manuals:

Accessories	Instructions
Coils	6LE007405A
MO charging Motor	6LE007406A




Coils

Three types of coils can be installed in the dedicated positions behind the front cover of the circuit breaker:

Shunt trip coil SH or
Undervoltage release coil UV

Closing coil CC

Undervoltage release coil UV
or Shunt trip coil SH

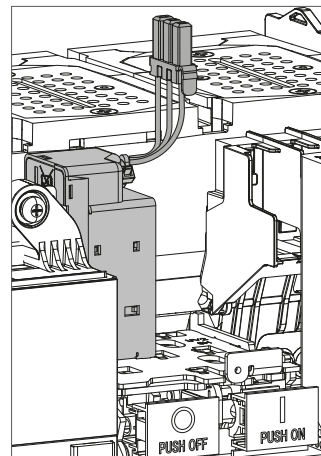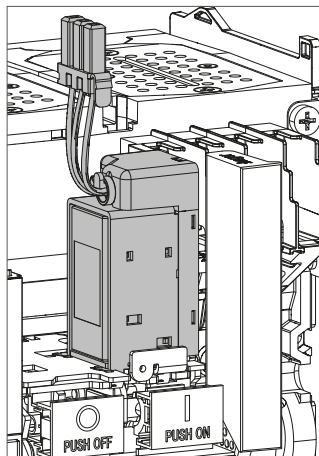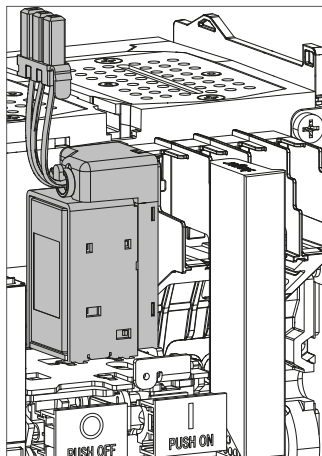

The SH shunt trip coils and CC closing coils can be controlled by the sentinel Energy trip unit using the INS insulating module (See Chapter 17.14 Installation of the communication and display accessories).

ATTENTION

Connection of coils for local or remote control with an Energy sentinel trip unit.

Remote control is available via :

- Modbus if a communication module is installed,
- Hager Power touch Bluetooth application,
- The Hager Power setup software

and only with a sentinel Energy trip unit

The length of the connection cables between:

- the terminals Cx2 and Cx3 of the SH shunt trip coils,
- the terminals A2 and A3 of the CC closing coils,


is limited to 5 m for the 200-250 V coils (beyond that, an intermediate relay is necessary).

Particular case of **SH shunt trip and/or DC closing coils of 380-480V AC** :

- Remote control on a circuit breaker fitted with an Energy trip unit is not possible with a 380-480V AC SH shunt trip and/or CC closing coil.
- Only local control is possible. To achieve this, a jumper of less than 10 cm must be fitted as close as possible to the terminal block between Cx2 and Cx3 (SH or SH2 shunt trip coil) and/or A2 and A3 (DC closing coil).

MO charging Motor

The MO charging motor is positioned on the right side of the charging handle and automatically charges the spring after each time the circuit breaker closes.

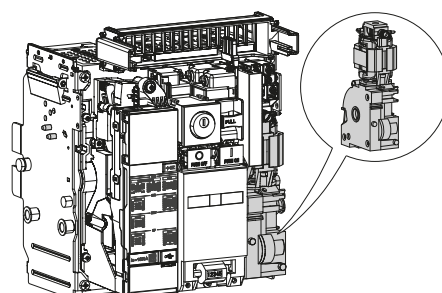


For the installation of signalling accessories, refer to the following manuals:

Accessories	Instructions
PS Position contact	6LE007542A
AX Auxiliary Contact	6LE007407A
RTC Ready-to-Close contact	6LE007623A
CYC Operation Cycle Counter	6LE007487A
OAC Output Alarm Contact module	6LE007430A
FS Fault trip contact	6LE007676A


PS Position contact

This contact indicates the connected, test or disconnected position of the circuit breaker in its chassis.

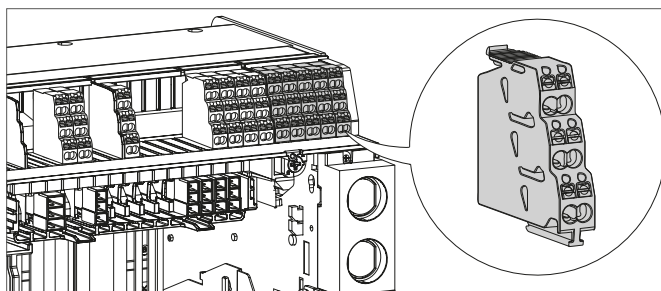

AX Auxiliary Contact

The auxiliary contacts indicate the open or closed position of the circuit breaker power contacts.

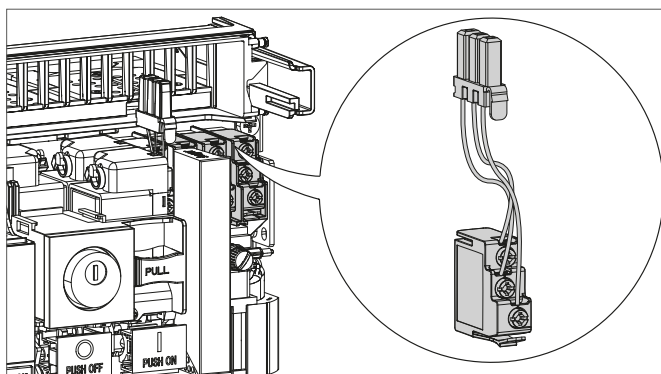


ATTENTION

The contact AX1 is not available on the 3-pole circuit breaker with the sentinel Energy trip unit because of the voltage tap vN.


RTC Ready-to-Close contact

The ready-to-close contact gives the information that the circuit breaker is ready to be closed.

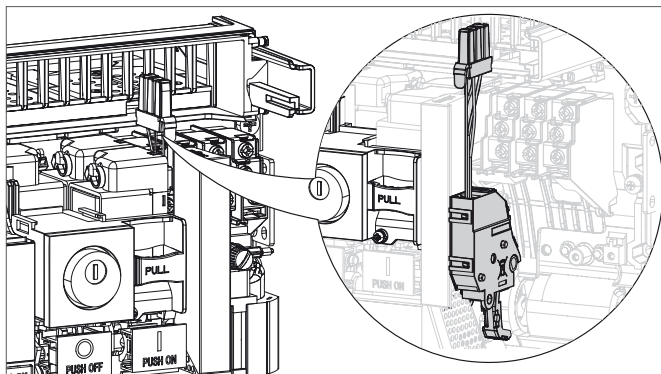

CYC Operation Cycle Counter


The cycle counter shows the number of ON-OFF operations completed by the circuit breaker.

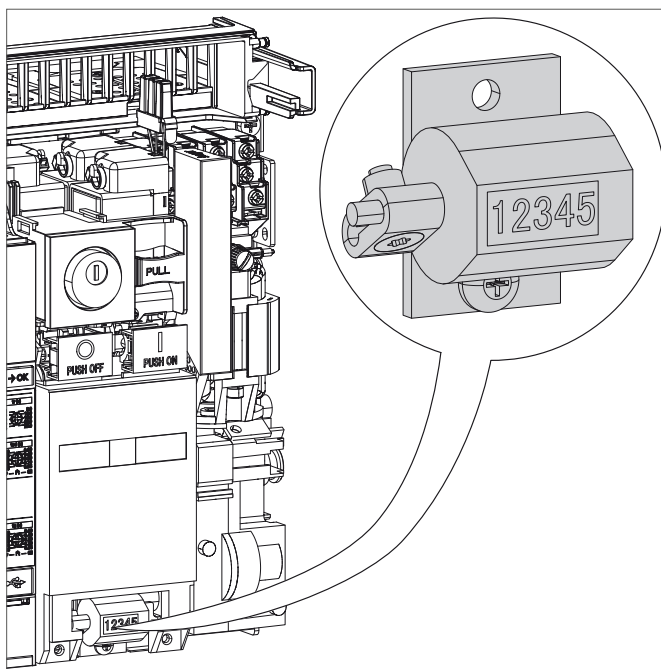

OAC Output Alarm Contact module


The OAC alarm output contacts module has 5 digital output contacts allowing alarm, trip or operating events to be signalled.

For more information, see chapter 17.8 Connecting the output contacts.

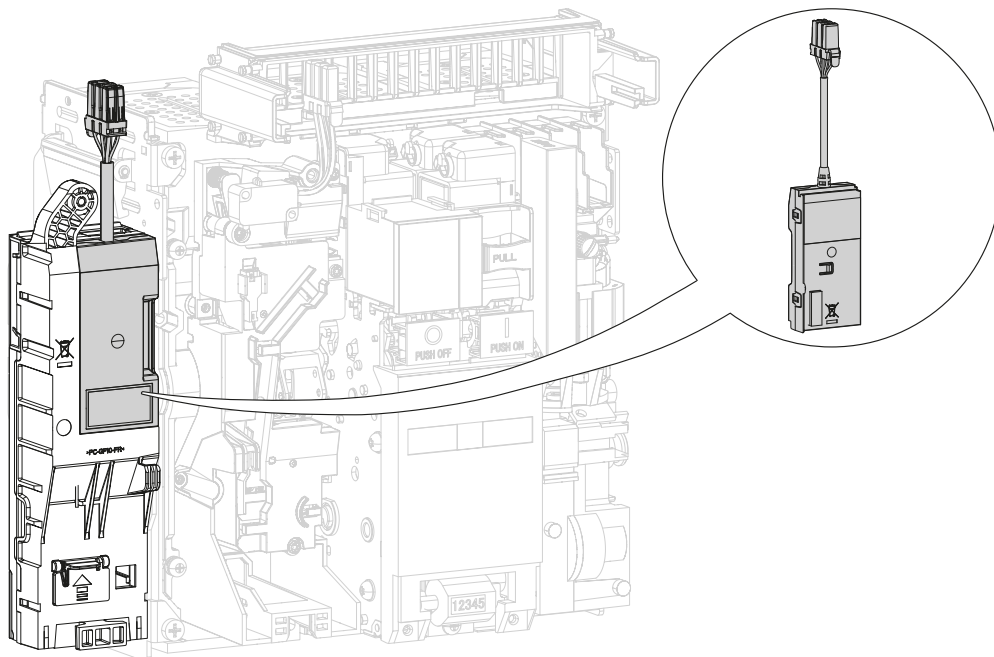

FS Fault trip contact

The trip unit's fault trip contact is used to remotely signal information about the tripped status of the circuit breaker. A second FS2 contact can be fitted.

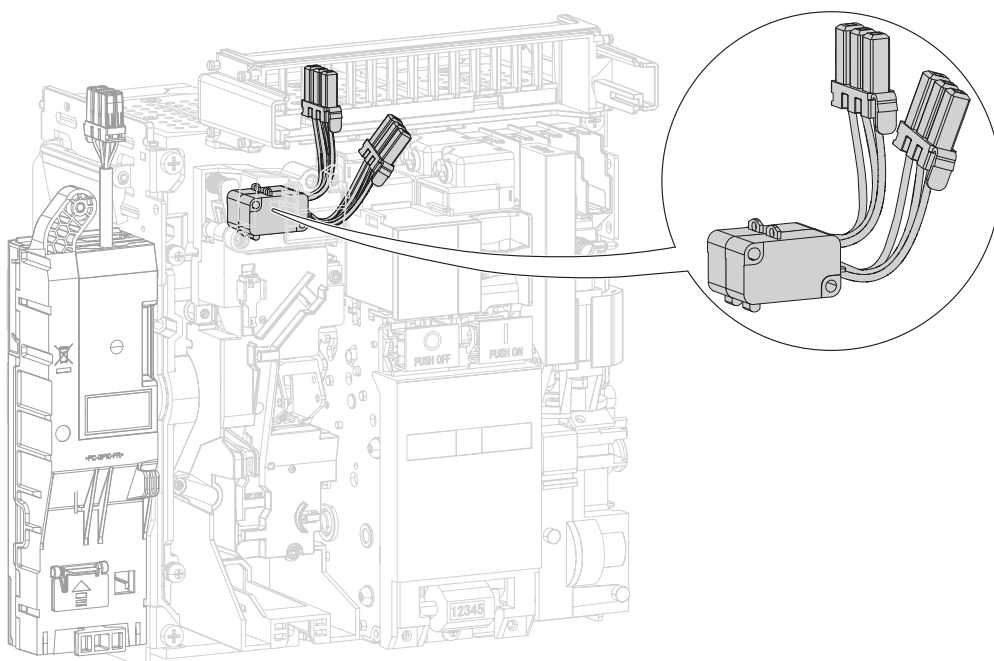


For the installation of neutral protection accessories, refer to the following manuals:

Accessory	Manual
ENCT external neutral current sensor	6LE007514A

ENCT external neutral current sensor

The ENCT external neutral current sensor allows the circuit breaker to provide neutral protection on a 3-pole circuit breaker in a TN earthing system. It is installed on the neutral distribution bar generally located on the left of the circuit breaker. It must be connected to the terminals marked ESP 4th S1 (black wire) and 4th S2 (red wire).

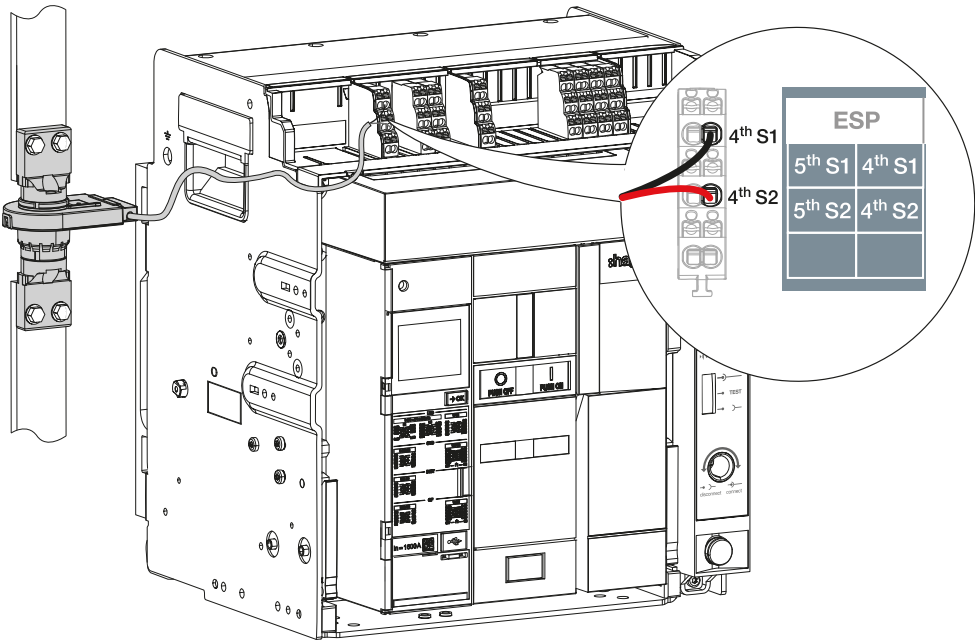

ATTENTION

Terminal block vN

If the 3-pole circuit breaker is equipped with the sentinel Energy trip unit, it is also necessary to connect the vN terminal to the neutral potential.

This connection is essential to obtain correct measurement of phase-neutral voltages V1N, V2N, V3N, powers per phase and for operation of the advanced protections against active power feedback and undervoltage or overvoltage.


AX1/vN	
12	vN
14	
11	

For the installation of communication and display accessories, refer to the following instructions:

Accessories	Instructions
Communication module	6LE009015A
INS insulating module	6LE008004A
Panel display	6LE002999A

Communication module


The HW1 circuit breaker, equipped with a sentinel Energy trip unit can be connected to a Modbus communication network via a Modbus-RTU communication module or a Modbus-TCP communication module. This communication module allows the circuit breaker to be monitored remotely and status, alarm and measurement information to be sent back. Only one communication module can be installed on an hw+ circuit breaker.

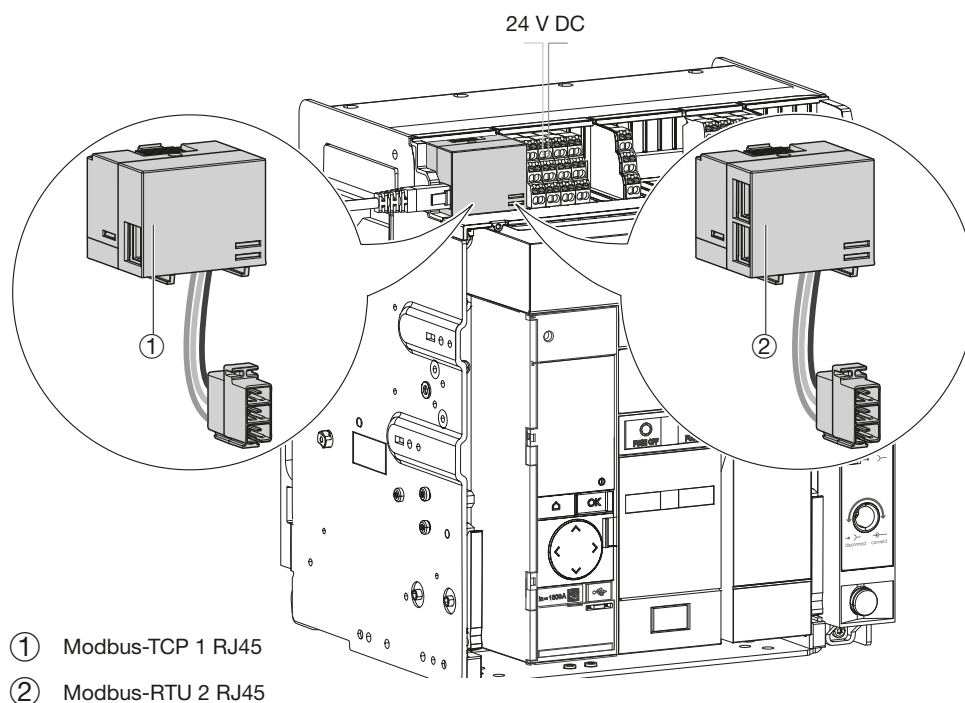

INS insulating module

The INS insulating module must interface with the sentinel Energy trip unit if the remote opening and closing functions of the circuit breaker are to be used from the Bluetooth Hager Power touch application, via modbus if a communication module is installed or from Hager Power setup (USB-C).

This insulating module also prevents the overvoltage caused by the SH or CC coil affecting the trip unit.

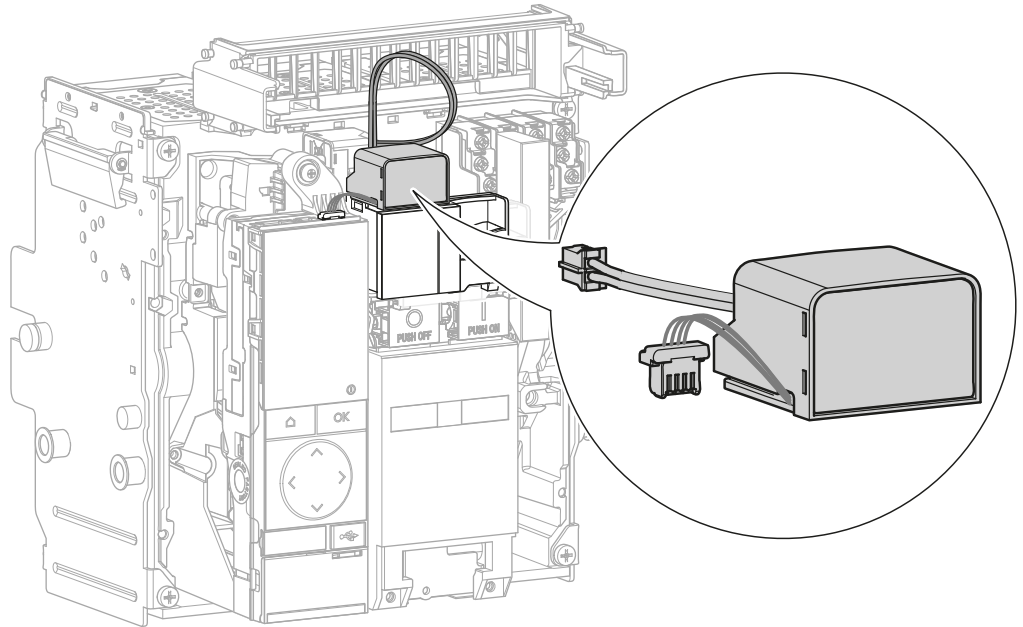**ATTENTION**

The terminals of the CC coils (A1 and A2), SH (C11 and C12) and SH2 (C21 and C22) must be powered for the remote commands to function.


The cable length between the PLC or the action button and the terminal of an SH shunt trip coil or a CC closing coil connected to the INS insulating module must be a maximum of 5 metres.

Panel display

The HTD210H panel display for h3+ Energy circuit breakers is also compatible with hw+ circuit breakers equipped with sentinel Energy trip units. It enables:

- the status, measurement and settings information for a door or panel in the electrical assembly to be displayed,
- the main protection and alarm settings to be modified.

The HWY210H adapter is necessary to connect the HTD210H panel display, a 24V DC power supply and the cables enabling the connection to the terminals CIP 1 and CIP 2.

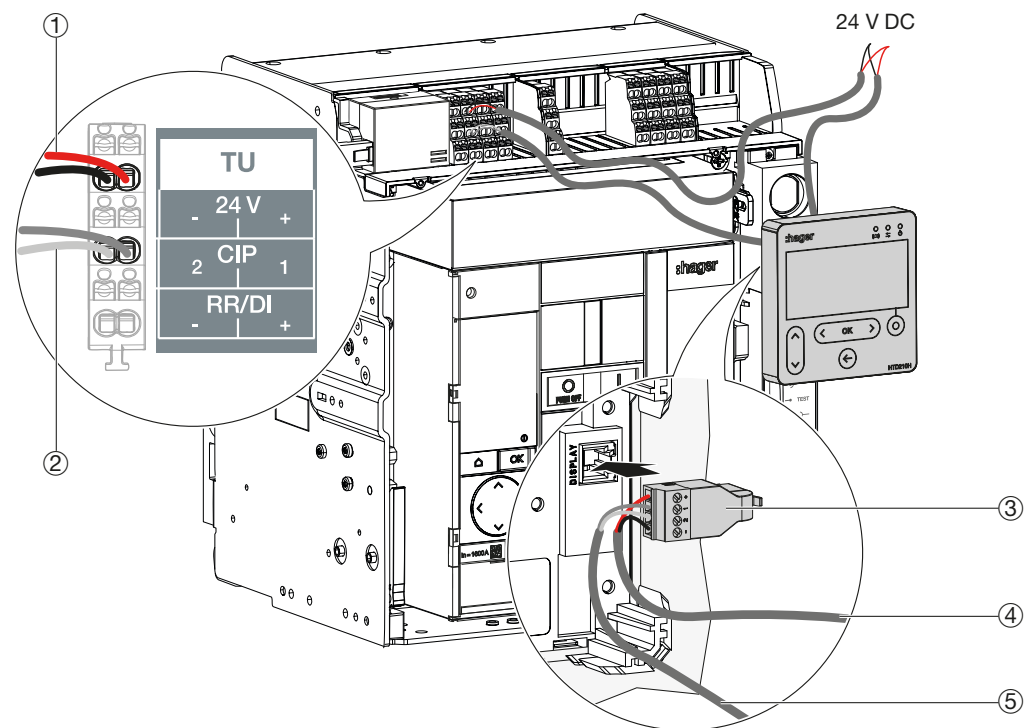

- ① To the 24 V DC power supply
- ② To terminals 1 and 2 of the HWY210H adapter
- ③ HWY210H adapter
- ④ To the 24 V DC power supply
- ⑤ To terminals CIP 1 and CIP 2 on the TU terminal block

ATTENTION

An external 24 V DC SELV power supply (recommended Hager reference HTG911H) must be connected to the TU terminal of the circuit breaker and the HWY210H adapter to allow the panel display to operate correctly.

ATTENTION

Use a twisted pair data bus cable with 0.75 mm² cross section, 18 AWG or 19 AWG (for example "FD CP (TP) plus" from LAPP) to connect the CIP terminals of the circuit breaker to terminals 1 and 2 of the HWY210H adapter.

Cables connected to the HWY210H adapter must be fastened to the door panel.

The protections settings are adjusted using the dials or the keyboard depending on the sentinel or sentinel Energy trip unit type.

A detailed description of the functions and settings is available in the user manuals for 6LE007969A hw+ sentinel electronic trip units and 6LE008147A hw+ sentinel Energy electronic trip units.




WARNING

Risk of inappropriate settings.

For safety reasons, the circuit breaker's factory default settings are for the lowest level of protection.


Adjust the protection settings in accordance with the short circuit and selectivity calculation performed by the installation designer.

sentinel trip unit

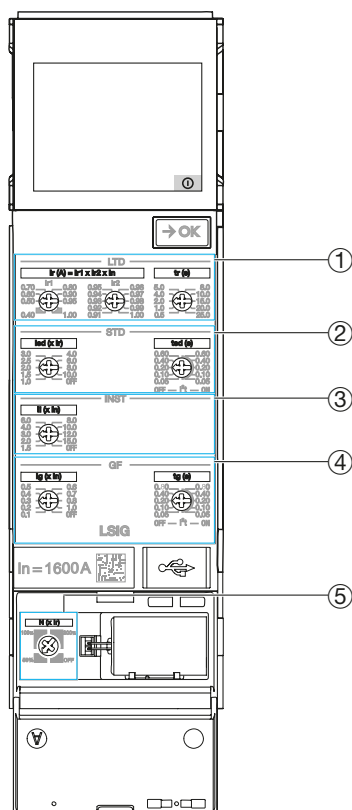

- ① LTD Long time delay protection setting
- ② STD Short Time Delay protection setting
- ③ INST Instantaneous protection setting
- ④ GF earth fault protection setting
- ⑤ N neutral protection setting adjustment

sentinel Energy trip unit

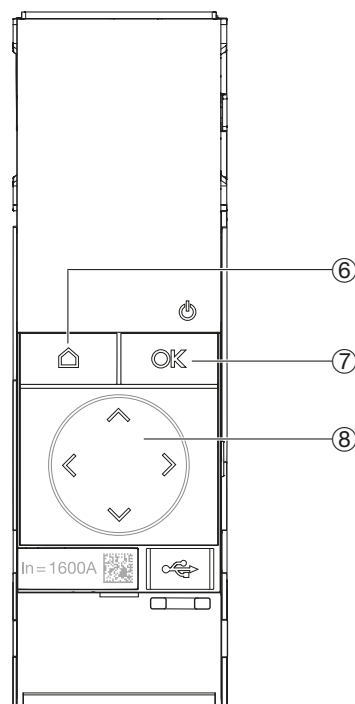

- ⑥ Home button
- ⑦ Acknowledgement and confirmation button
- ⑧ Navigation buttons



Risk of electric shock, electrocution or electric arc

Danger to life, risk of injury due to electric shock, or risk of serious injury.

Ensure that the device is only commissioned by qualified personnel who are equipped with adequate safety equipment.

For commissioning, refer to the operations described in standard IEC 61439-1 and -2.

ATTENTION

For any further information about commissioning the circuit breaker, contact Hager Technical Support.

ATTENTION

The Hager Power setup software is recommended in order to carry out the protection settings when commissioning the trip unit.

Once the protection settings have been made, they should be checked. A test report can then be edited using the same software.


Refer to manual 6LE007545A to install this locking accessory.

The safety shutters cover the contacts of the main circuit in the chassis when the circuit breaker is in the disconnected or test position.

In this way it precludes accidental access to the connections.

The high and low shutters work independently. They can be padlocked separately to prevent them being opened or prevent the circuit breaker being racked in in the connected position.

Up to three Ø5–Ø8 mm padlocks can be installed.

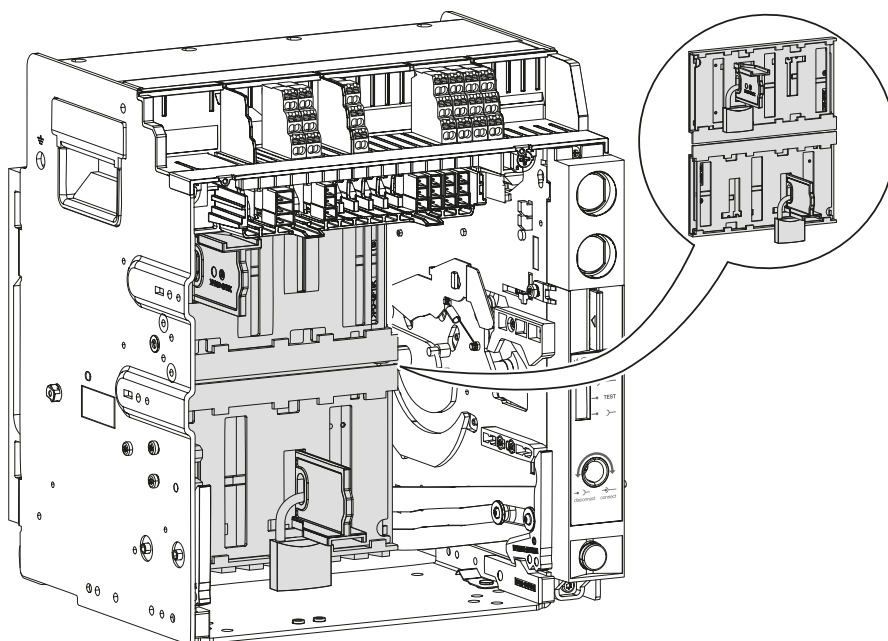

To install this accessory, refer to the 6LE007489A manual.

The WIP wrong insertion preventer is used when several circuit breakers of the same model are installed in an electrical panel and are configured differently. To prevent any confusion, all the circuit breakers and their chassis must be coded in such a way that each circuit breaker can be racked in in its corresponding chassis.

It is composed of screws and pins which must be installed on the chassis and circuit breaker in one of the following 10 combinations:

Chassis	Circuit breaker
123	DE
124	CE
125	CD
134	BE
135	BD

Chassis	Circuit breaker
145	BC
234	AE
235	AD
245	AC
345	AB


The combination chosen on the chassis must correspond to the combination of the circuit breaker in order for the 2 parts to be compatible.

On the chassis side, the wrong insertion preventer is numbered 1 to 5.

On the circuit breaker side, the wrong insertion preventers are marked A to D.


Example of installation with the combinations 123 and DE:

Chassis	Circuit breaker
123	DE

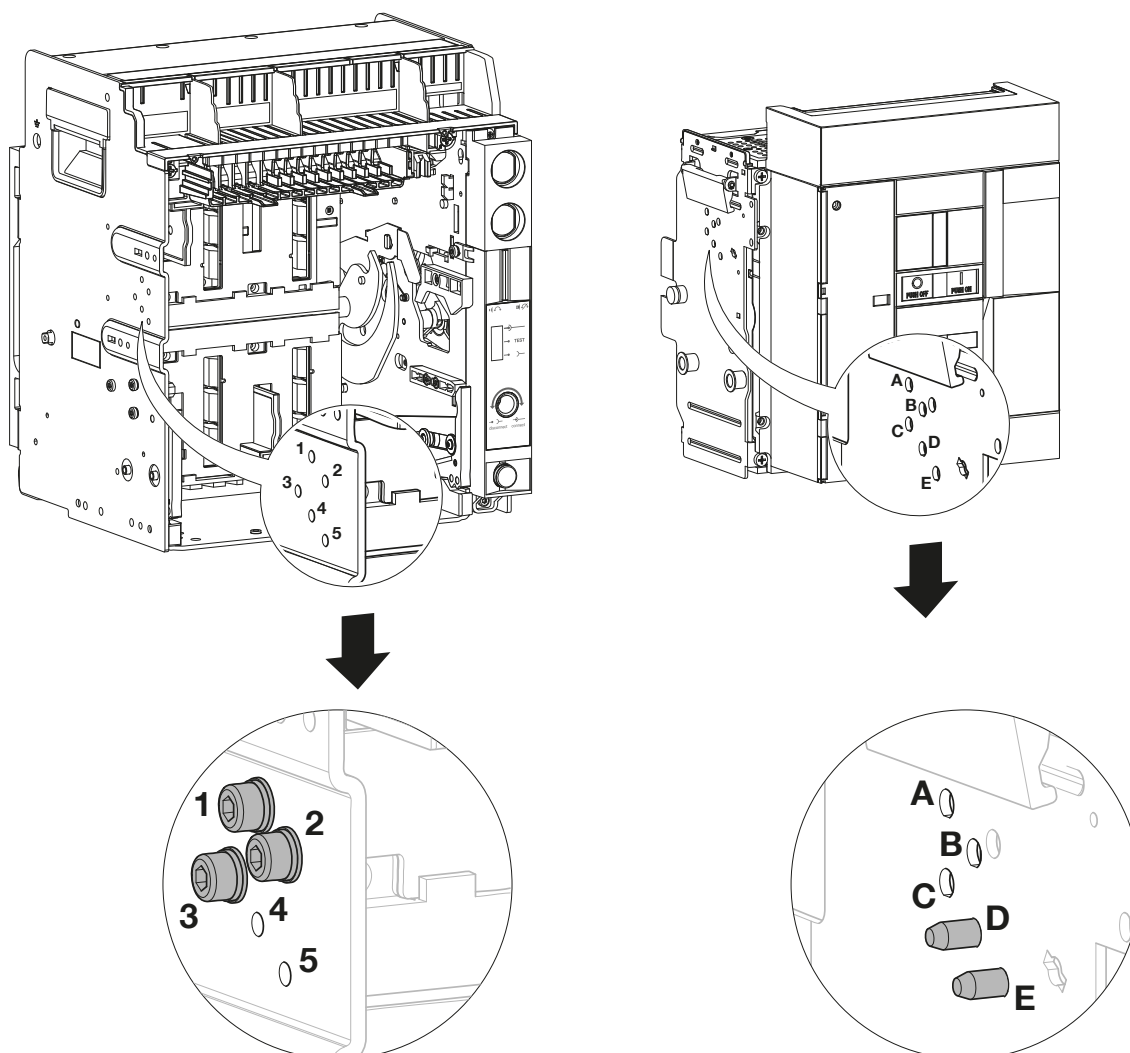

Refer to 6LE007624A and 6LE008138A manual for installation of this locking accessory.

The mechanical interlocking kit is used to interlock 2 to 3 circuit breakers installed vertically or horizontally in the electrical distribution board.

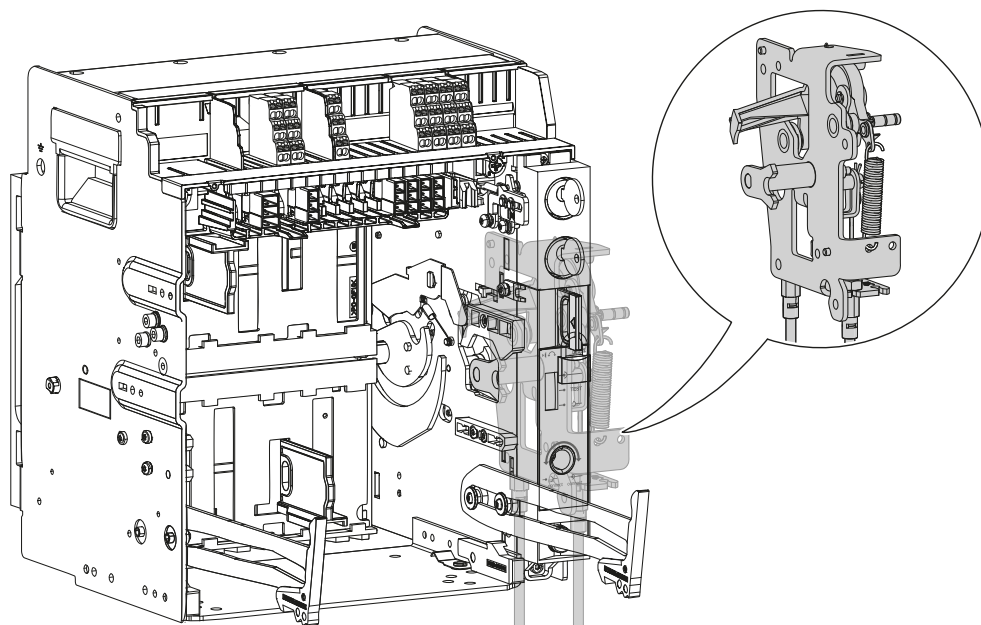



Hager Electro SAS
132 Boulevard d'Europe
BP3
67210 OBERNAI CEDEX

[hager.com](https://www.hager.com)