



Mosaic™ Antimicrobial* plates


Cat. No(s): 0 787 22L/23L/24L/25L/26L

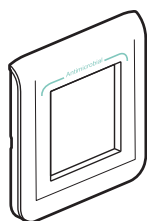

0 787 22L

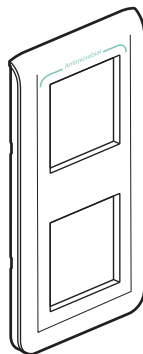

0 787 23L

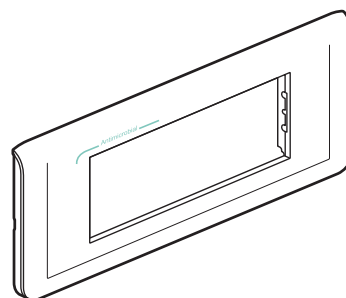

0 787 26L

1. USE

Plates for Mosaic mechanism of 2 to 6 modules.

These products are made of silver-ion based antimicrobial* material. This technology eliminates bacteria, fungi and viruses without creating any immunisation or resistance effects (physical, rather than chemical, destruction).


Particularly suitable for healthcare establishments (hospitals, clinics, nursing homes, laboratories, waiting rooms, etc.) and more generally for areas subject to hygiene restrictions (industrial, shared and restaurant kitchens, waste, etc.).

These products offer an additional way of ensuring the non-proliferation of bacteria, fungi and viruses without interfering with cleaning protocols. Clips onto supports with claws and/or screws.

2. RANGE

Description	White
2 modules plate	0 787 22L
2 x 2 modules plate - vertical	0 787 23L
4 modules plate - horizontal	0 787 24L
2 x 2 modules plate - horizontal	0 787 25L
6 modules plate - horizontal	0 787 26L

3. DIMENSIONS (mm)

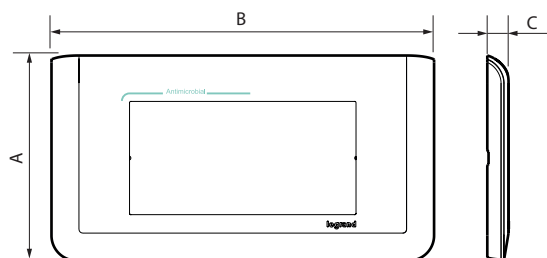

Cat. No	A	B	C
0 787 22L	82	82	8.5
0 787 23L	153	82	8.5
0 787 24L	82	153	8.5
0 787 25L	82	153	8.5
0 787 26L	82	224	8.5

4. TECHNICAL CHARACTERISTICS

■ 4.1 Mechanical characteristics

Protection against impact: IK 04

■ 4.2 Material characteristics

Plates: Polyglass appearance - Halogen free - UV resistant

ABS White RAL 9003 with antimicrobial* treatment

Subplate: Opalescent PC

Self-extinguishing: + 650° C / 30 s

■ 4.3 Climatic characteristics

Storage temperature: - 10° C to + 70° C

Use temperature: - 5° C to + 35° C

5. CLEANING

Surface cleaning with a cloth.

Do not use: acetone, tar remover, trichloroethylene.

Resistance to the cleaning agents: Hexane (NF C 61-314), Methylated spirit, Soapy water, Diluted ammonia, Diluted pure bleach 10%, Glass cleaning substances, Pre-impregnated wipes.

Resistance to type cleaning hospital: Anios, Surfanios, Bactylisine, Diluted hydrogen peroxide (35 %).


Caution: A preliminary test should be carried out if other specific cleaning products are to be used.

The plates must not be painted.

6. ACCESSORIES

For 4, 6 and 10-module plates, use blanking plates:

Plates	Blanking plates
4 modules	0 791 04
6 modules	0 791 06

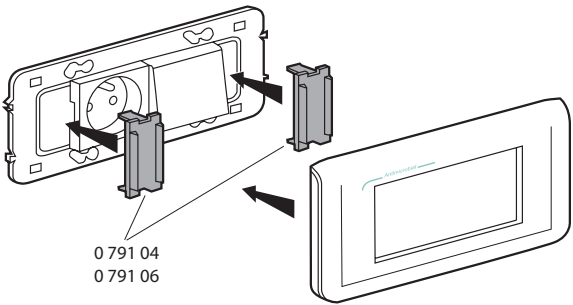

7. STANDARDS AND APPROVALS

Conform to installation and manufacturing standards.
See e. catalogue.

* Contains a silver compound to ontagonize the growth of bacteria on the surface.